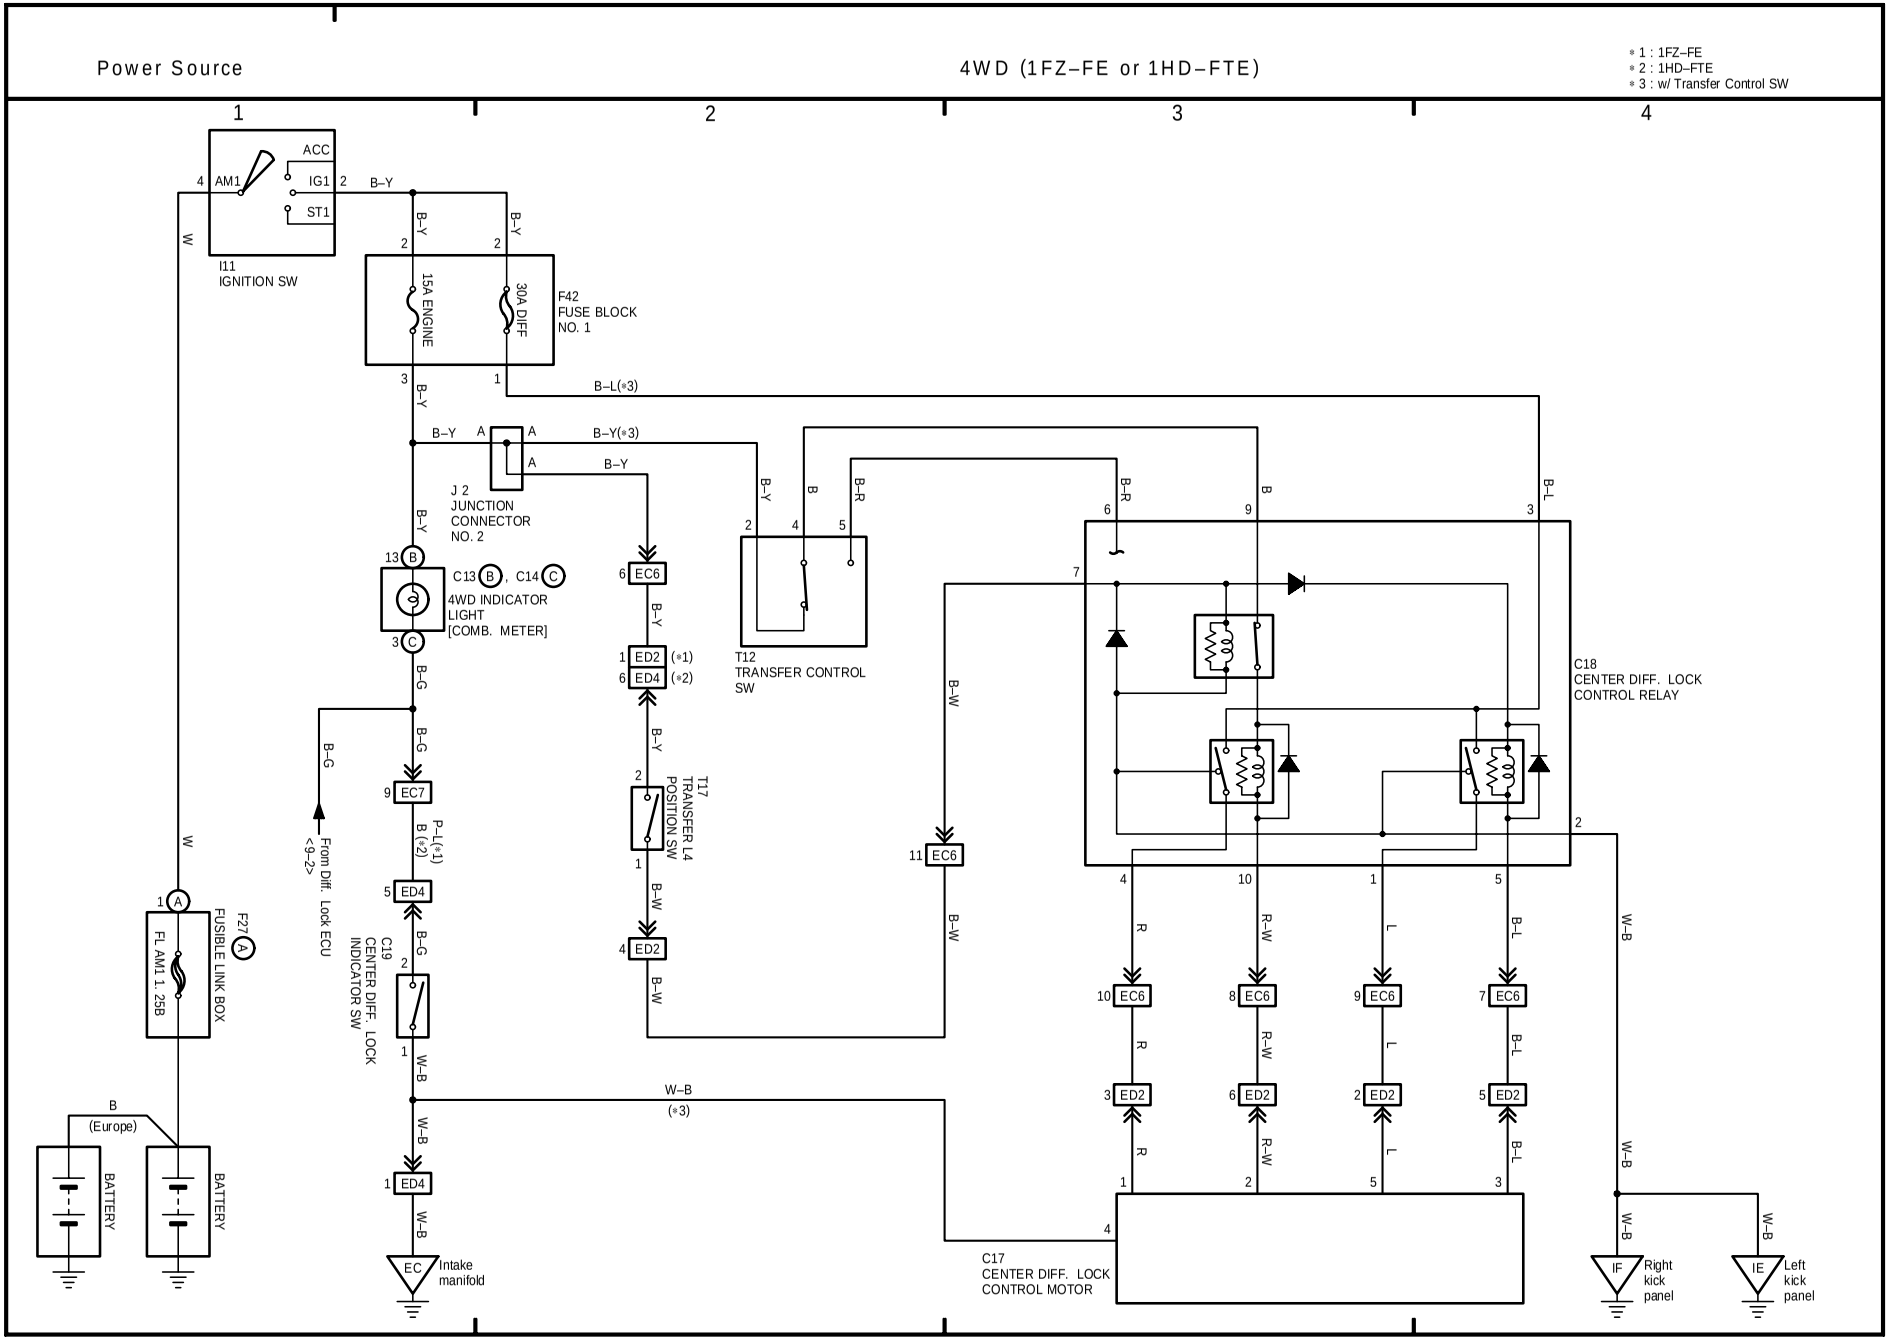
Power Source
4WD (1FZ–FE or 1HD–FTE)
* 1 : 1FZ–FE
* 2 : 1HD–FTE
* 3 : w/ Transfer Control SW
1
2
3
4
I11
IGNITION SW
ACC
IG1
ST1
AM1
F42
FUSE BLOCK
NO. 1
15A ENGINE
30A DIFF
J 2
JUNCTION
CONNECTOR
NO. 2
C13 B, C14 C
4WD INDICATOR
LIGHT
[COMB. METER]
T12
TRANSFER CONTROL
SW
T17
TRANSFER L4
POSITION SW
C19
CENTER DIFF. LOCK
INDICATOR SW
From Diff. Lock ECU
<9–2>
F27 A
FUSIBLE LINK BOX
FL AM1 1. 25B
B
(Europe)
BATTERY
BATTERY
EC
Intake
manifold
C18
CENTER DIFF. LOCK
CONTROL RELAY
C17
CENTER DIFF. LOCK
CONTROL MOTOR
IF
Right
kick
panel
IE
Left
kick
panel