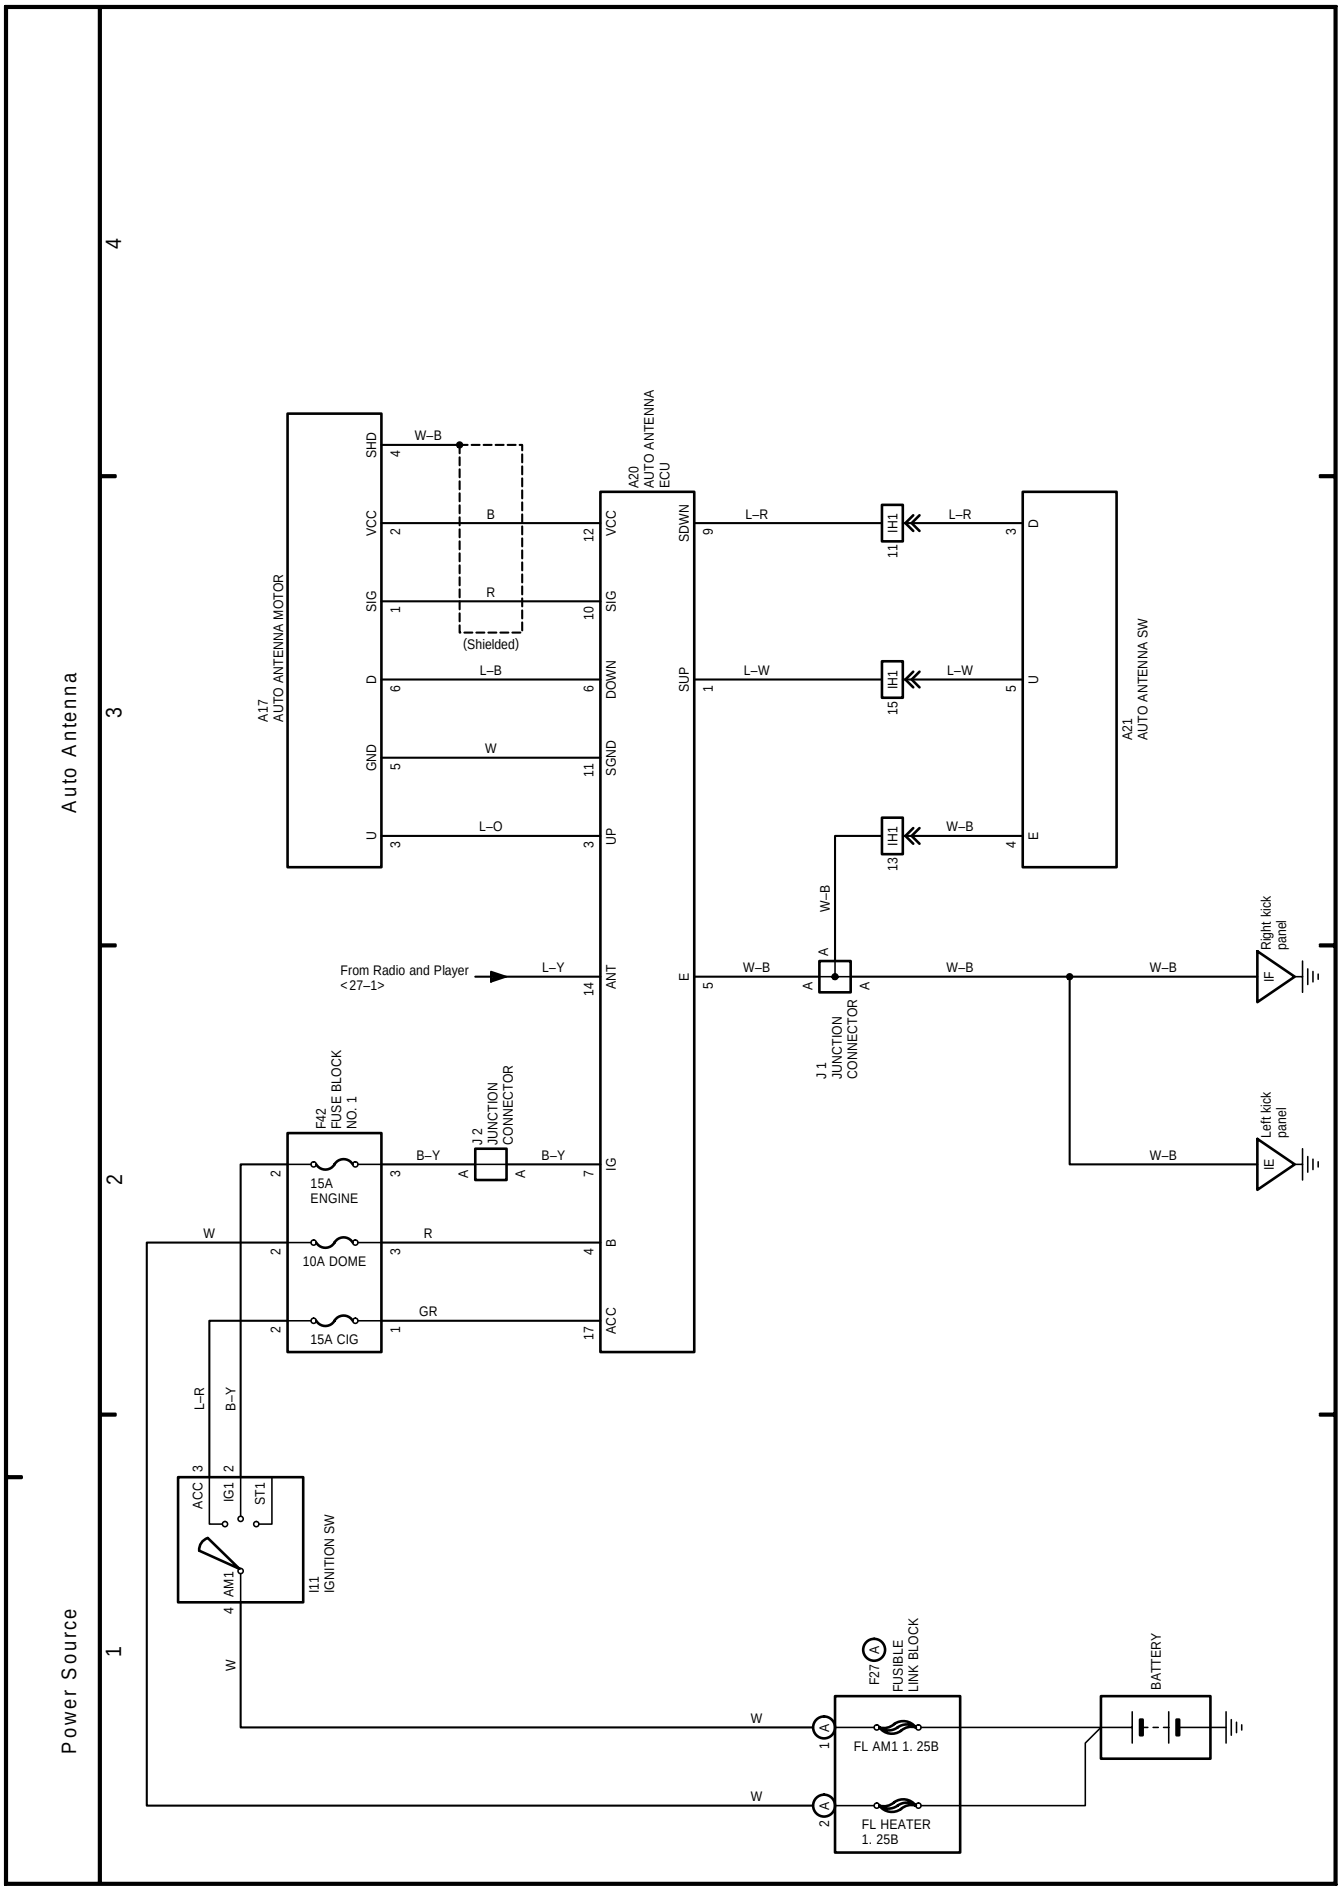
Power Source
Auto Antenna
1
2
3
4
A17
AUTO ANTENNA MOTOR
SHD
VCC
SIG
D
GND
U
W–B
B
R
L–B
W
L–O
(Shielded)
A20
AUTO ANTENNA
ECU
SDWN
SUP
VCC
SIG
DOWN
SGND
UP
ANT
IG
B
ACC
L–R
L–W
W–B
IH1
A21
AUTO ANTENNA SW
D
U
E
From Radio and Player
<27–1>
L–Y
W–B
J1
JUNCTION
CONNECTOR
Right kick
panel
IF
Left kick
panel
IE
F42
FUSE BLOCK
NO. 1
15A
ENGINE
10A DOME
15A CIG
B–Y
R
GR
J2
JUNCTION
CONNECTOR
W
L–R
B–Y
ACC
IG1
ST1
AM1
I11
IGNITION SW
F27
FUSIBLE
LINK BLOCK
FL AM1 1. 25B
FL HEATER
1. 25B
BATTERY