
REPLACEMENT OF FUEL FILTER

1. **DISCONNECT FUEL FILTER WARNING SWITCH CONNECTOR**

2. **DRAIN FUEL FROM FUEL FILTER**
   (a) Connect a vinyl hose to the drain cock, and insert the other end of the vinyl hose in a container.
   (b) Loosen the drain plug, and drain the fuel.

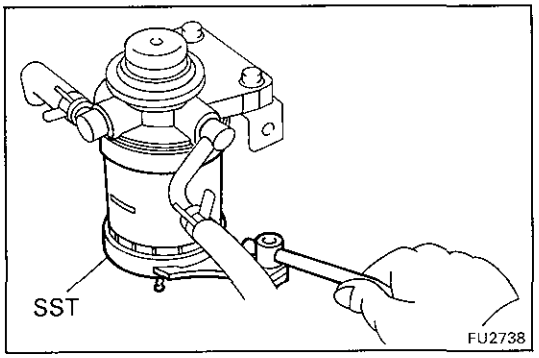


3. **REPLACE FUEL FILTER**

A. **Remove fuel filter**

Using SST, remove the fuel filter.


SST 09228-64010

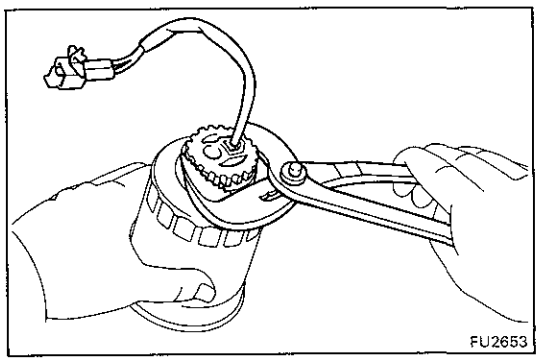


B. **Remove fuel filter warning switch from fuel filter**

Using pliers, remove the warning switch and O-ring.


NOTICE: Be careful not to damage the warning switch.

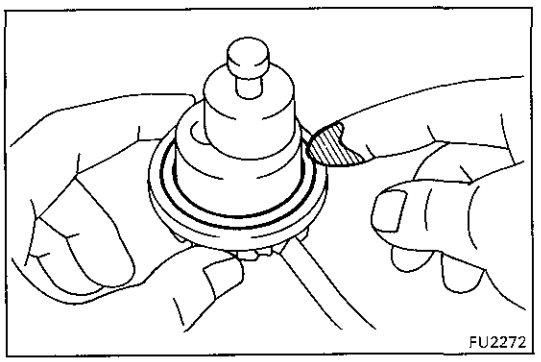

C. **Install fuel filter warning switch to new fuel filter**
   (a) Install a new O-ring to the warning switch.
   (b) Apply fuel to the O-ring of the warning switch.

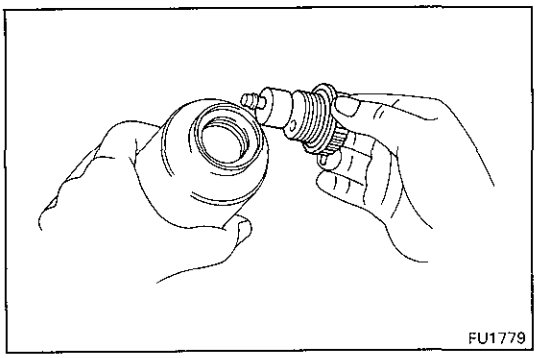


   (c) Install the warning switch to a new fuel filter by hand.

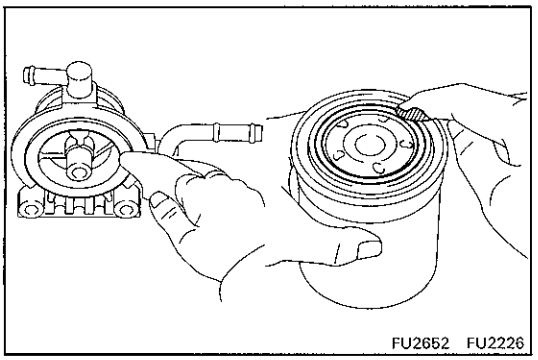
FU2652 FU2226

D. Install new fuel filter


(a) Check and clean the fuel filter installation surface.

(b) Apply fuel to the gasket of a new fuel filter.

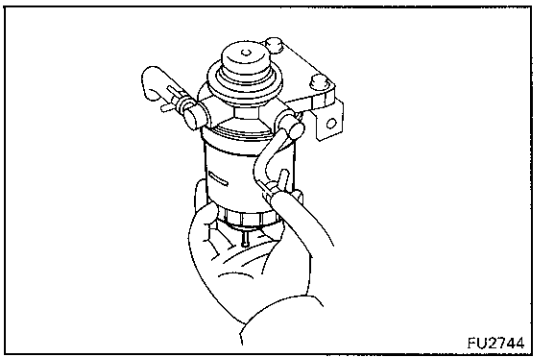
FU2744

(c) Lightly screw the fuel filter into place, and tighten it until the gasket comes into contact with the seat.

(d) Tighten it additional 3/4 turn by hand.

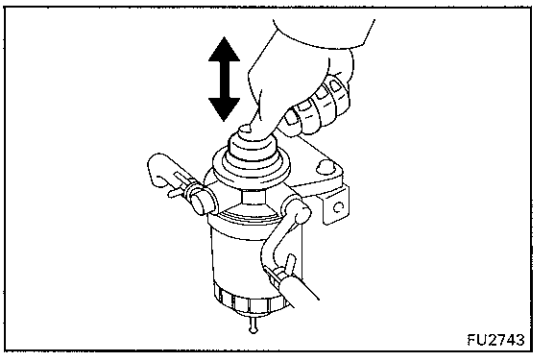
FU2743

4. FILL FUEL FILTER WITH FUEL

Operate the hand pump until you feel more resistance.

5. CONNECT FUEL FILTER WARNING SWITCH CONNECTOR

6. START ENGINE AND CHECK FOR FUEL LEAKS