

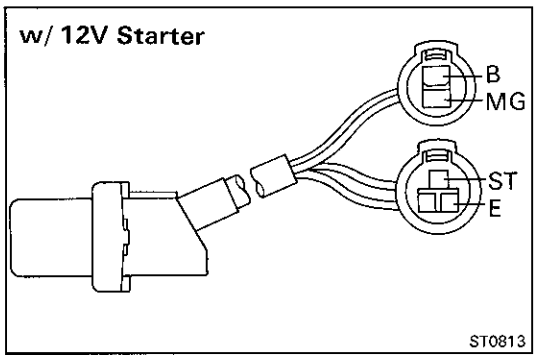


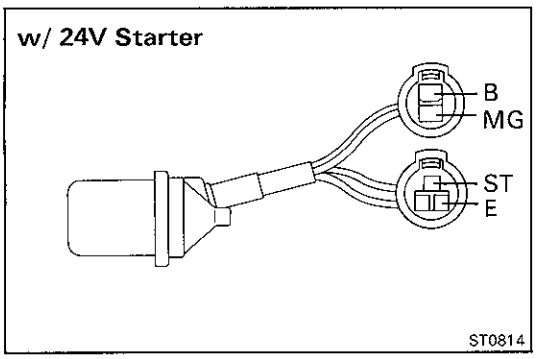

STARTER RELAY (PZJ, HZJ and HDJ)

LOCATION: In the engine compartment on the left side.

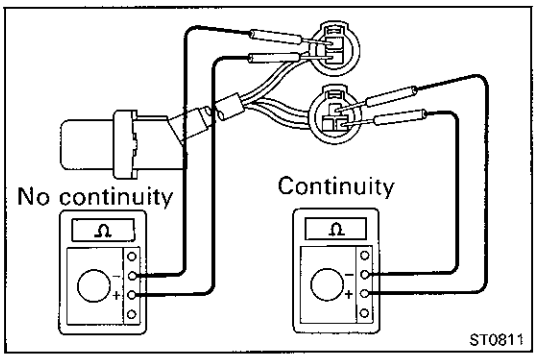


INSPECTION OF STARTER RELAY

1. INSPECT RELAY CONTINUITY

(a) Using an ohmmeter, check that there is continuity between terminals E and ST.

(b) Check that there is no continuity between terminals B and MG.

If continuity is not as specified, replace the relay.

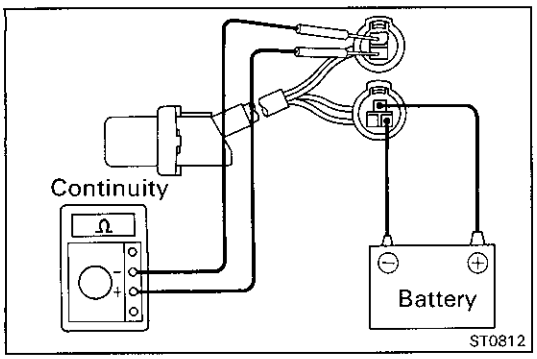

2. INSPECT RELAY OPERATION

(a) Apply battery voltage across terminals E and ST.

NOTICE: If the vehicle has a voltage coverter, perform the check using a 12 V battery.

(b) Using an ohmmeter, check that there is continuity between terminals B and MG.

If operation is not as specified, replace the relay.