
VOLTAGE CONVERTER TIMER (HZJ80 and HDJ80) (w/ 24 V Starter)

LOCATION: In the cowl on the passenger's side.

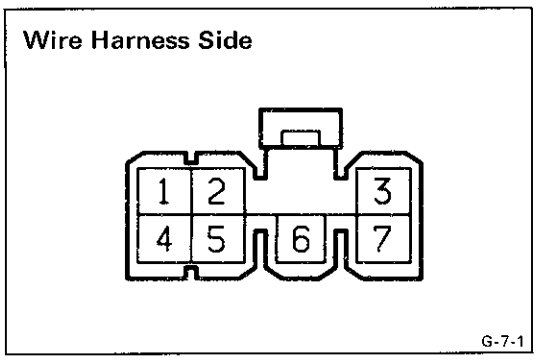

INSPECTION OF VOLTAGE CONVERTER TIMER

INSPECT VOLTAGE CONVERTER TIMER

Disconnect the connector from the voltage converter timer, and check the connector on the wire harness side as shown in the following chart.

Check for	Tester connection	Condition	Specified value
Voltage	1 – Ground	Turn starter switch OFF	No voltage
		Turn starter switch START	Battery voltage
Voltage	2 – Ground	Turn starter switch OFF	No voltage
		Turn starter switch ON	Battery voltage
Voltage	3 – Ground	Turn starter switch OFF	No voltage
		Turn starter switch START	Battery voltage
Continuity	4 – Ground	–	Continuity
Continuity	5 – 6	–	Continuity
Continuity	7 – Ground	–	Continuity