
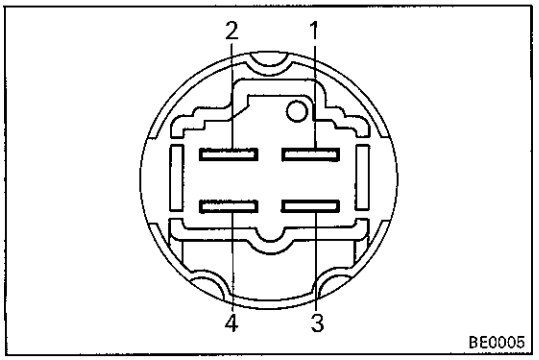


24 V HOLD WARNING RELAY (HZJ80 and HDJ80) (w/ 24 V Starter)

LOCATION: In the driver's cowl side.

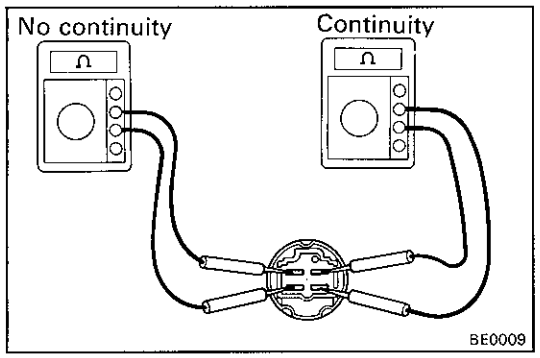


INSPECTION OF 24 V HOLD WARNING RELAY

1. INSPECT RELAY CONTINUITY

(a) Using an ohmmeter, check that there is continuity between terminals 1 and 3.

(b) Check that there is no continuity is not as specified, replace the terminals 2 and 4.

If continuity is not as specified, replace the relay.

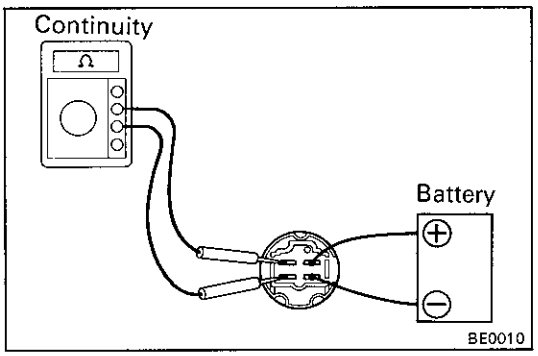

2. INSPECT RELAY OPERATION

(a) Apply battery voltage across terminals 1 and 3.

(b) Using an ohmmeter, check that there is continuity between terminals 2 and 4.

If operation is not as specified, replace the relay.