

A/C CONTROL ASSEMBLY

LHD

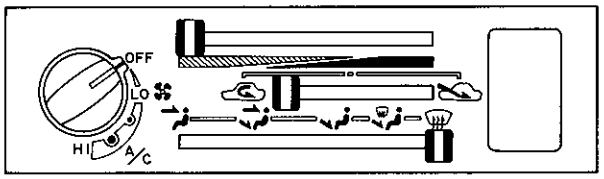

RHD

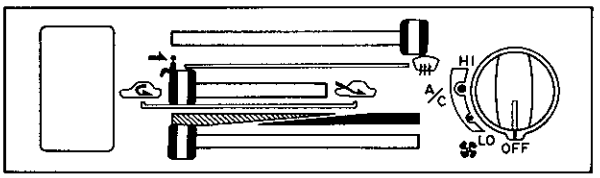


AC2781 AC2782

Blower Switch

INSPECTION OF SWITCH

INSPECT SWITCH CONTINUITY




O-8-2

	Terminal / Switch position	1	2	3	4	5	6	7	8
Blower Switch	OFF		○						
	I		○	○	○				
	II		○	○		○			
	III		○	○			○		
	IV (HI)	○	○	○					
A/C Switch	OFF								
	ON							○	○

If continuity is not as specified, replace the switch.

LHD

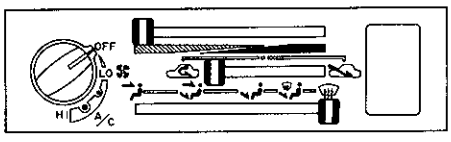

AC2798


A/C Control Levers


INSPECTION OF A/C CONTROL LEVERS

INSPECT LEVERS OPERATION

Move the control levers left and right and check for stiffness and binding through the full range of levers.

If operation is not as specified, replace the A/C control assembly.

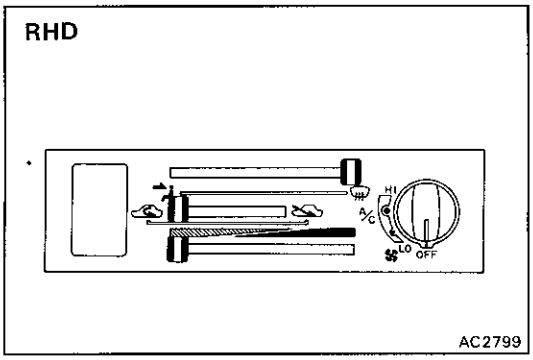


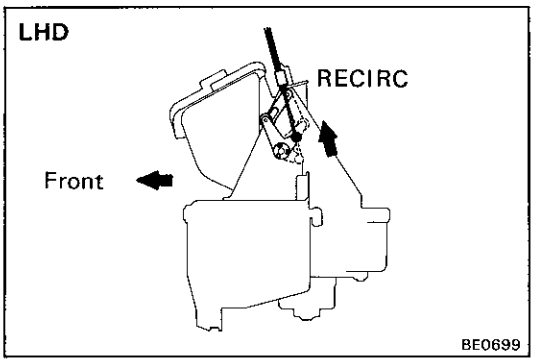


ADJUSTMENT OF CONTROL CABLES

1 ADJUST AIR INLET DAMPER CONTROL CABLE


Set the air inlet damper and the air inlet control lever to "RECIRC", then install the control cable and lock the clamp.

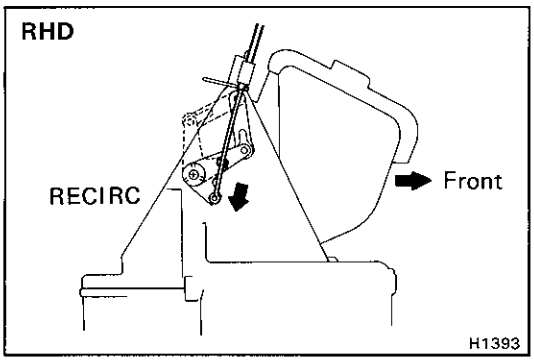

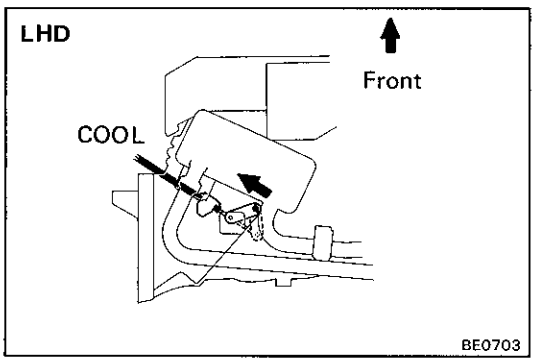


2 ADJUST AIR MIX DAMPER CONTROL CABLE


Set the air mix damper and the temperature control lever to "COOL", then install the control cable and lock the clamp.

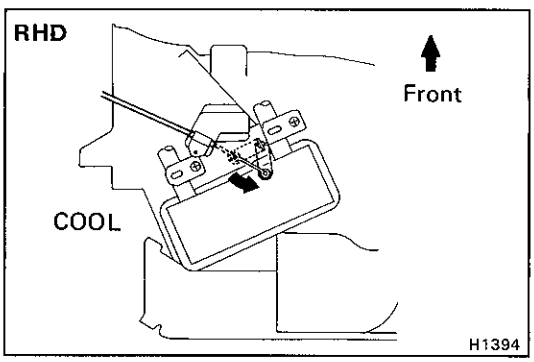

LHD

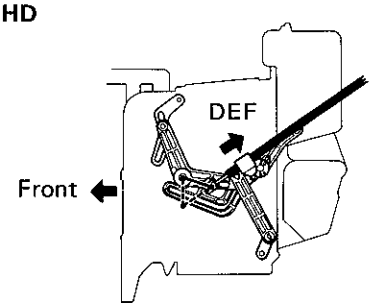


RHD

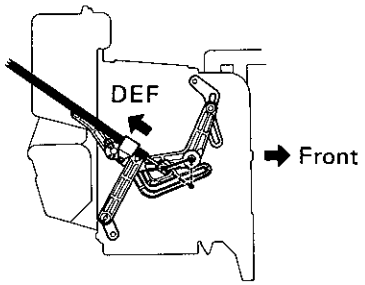

3 ADJUST MODE DAMPER CONTROL CABLE

Set the mode damper and the mode control lever to "DEF", then install the control cable and lock the clamp.


2L-T, 3L engine

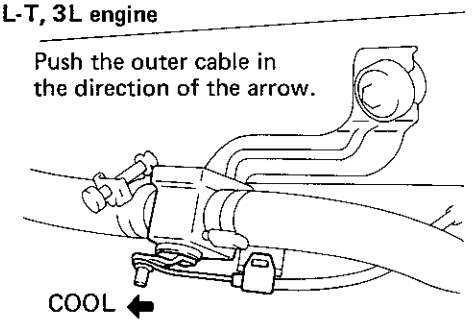


4 ADJUST WATER VALVE CONTROL CABLE


Set the water valve and the temperature control lever to "COOL", then install the control cable and lock the clamp.

22R, 22R-E engine

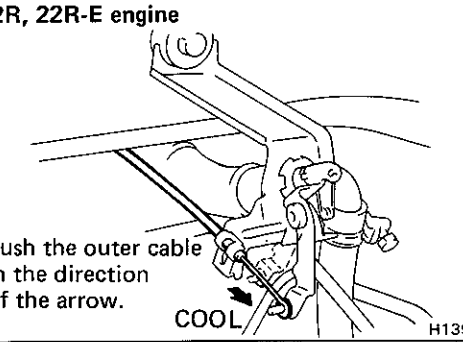

3F engine

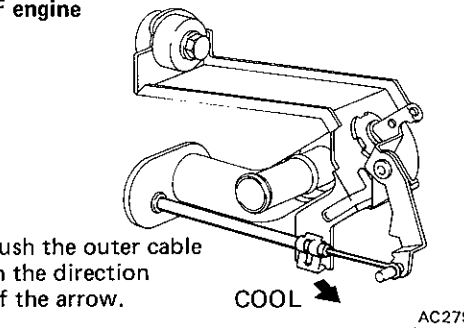

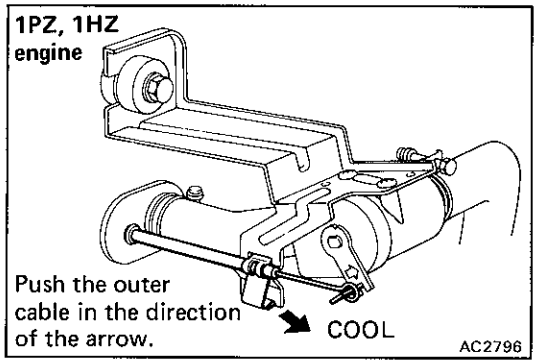
1PZ, 1HZ
engine
Push the outer
cable in the direction
of the arrow.
COOL
AC2796