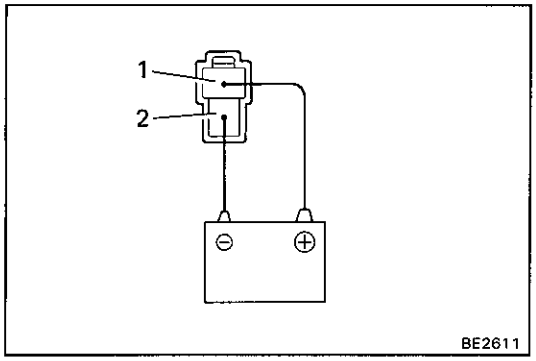


BLOWER MOTORS

Front Blower Motor

INSPECTION OF FRONT BLOWER MOTOR

INSPECT BLOWER MOTOR

Connect the positive (+) lead from the battery to terminal 1 and the negative (—) lead to terminal 2, then check that the motor operation is smooth.

If operation is not as specified, replace the motor.

Rear Blower Motor

INSPECTION OF REAR BLOWER MOTOR

INSPECT BLOWER MOTOR


Check the motor the same way as for the front blower motor.

BLOWER RESISTORS

Front Blower Resistor

INSPECTION OF FRONT BLOWER RESISTOR

INSPECT BLOWER RESISTOR CONTINUITY



H-4-2

Terminal / Condition	1	2	4	3
Constant	○—W—○—W—○—W—○			


If continuity is not as specified, replace the blower resistor.

Rear Blower Resistor

INSPECTION OF REAR BLOWER RESISTOR

INSPECT BLOWER RESISTOR CONTINUITY

Connector "A" Connector "B"





H-3-2 H-2-1

Terminal / Condition	Connector "A" 1	Connector "A" 2	Connector "A" 3	Connector "B" 1	Connector "B" 2
Constant	○	W	○	○	○

If continuity is not as specified, replace the blower resistor.