
HEATER RELAYS

Front Heater Relay

INSPECTION OF RELAY

INSPECT RELAY CONTINUITY

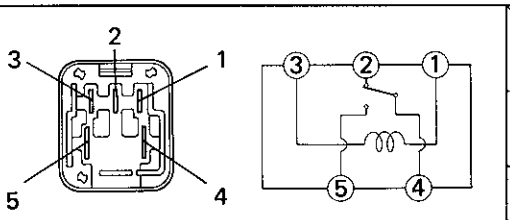

BE1850 BE1844


Terminal / Condition	1	2	3	4	5
Constant	○	○	○	○	
Apply battery boltage to terminals 1 and 3.				○	○

If continuity is not as specified, replace the relay.

Rear Heater Relay

INSPECTION OF RELAY

INSPECT RELAY CONTINUITY

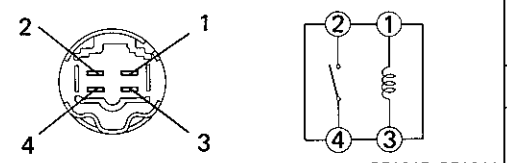

BE1647 BE1841

Terminal / Condition	1	2	3	4
Constant	○	○	○	
Apply battery voltage to terminals 1 and 3.		○		○

If continuity is not as specified, replace the relay.