


REMOVAL AND INSTALLATION OF TRANSMISSION

Remove and install the parts as shown.

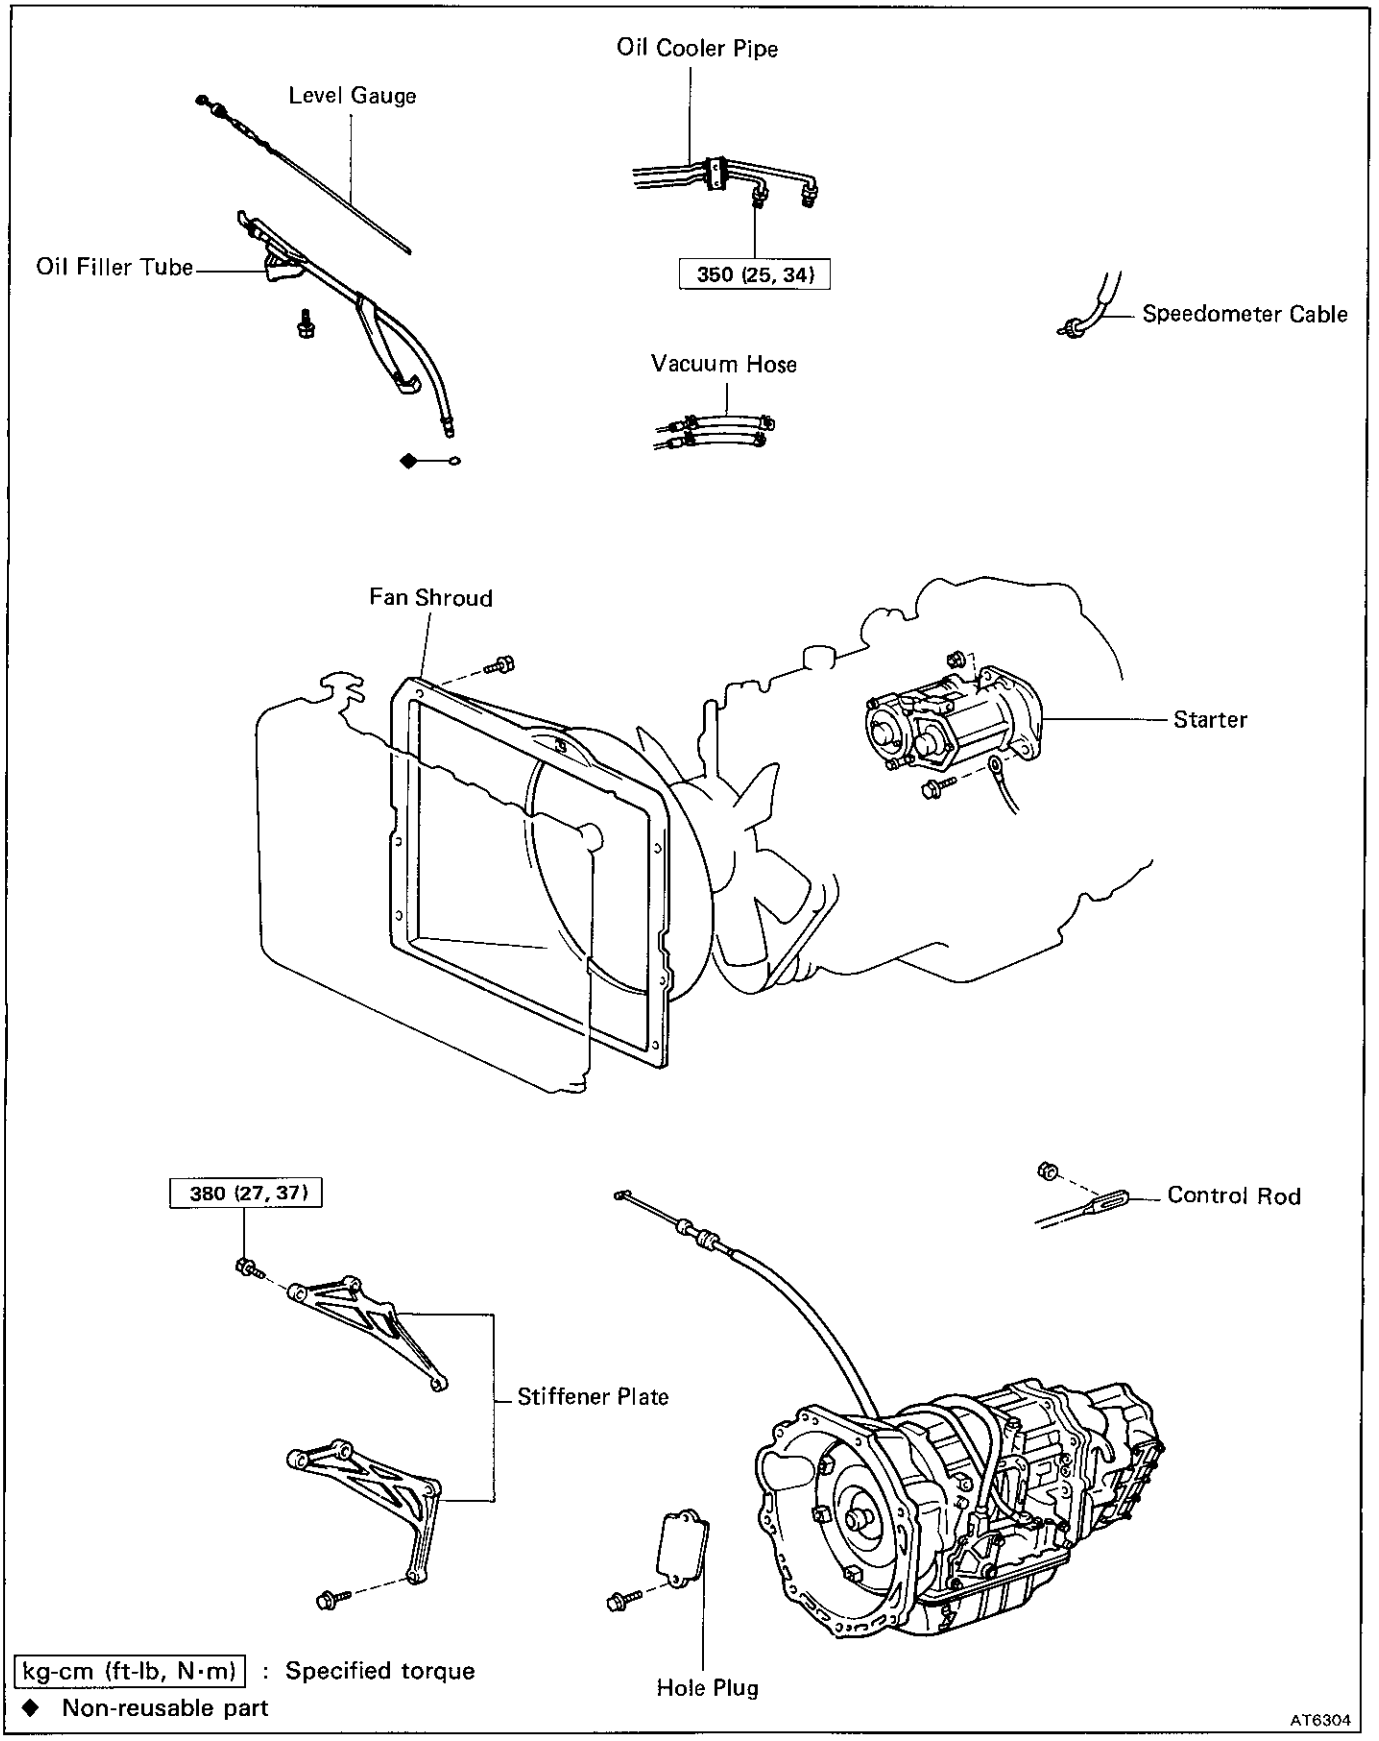

(Cont'd)

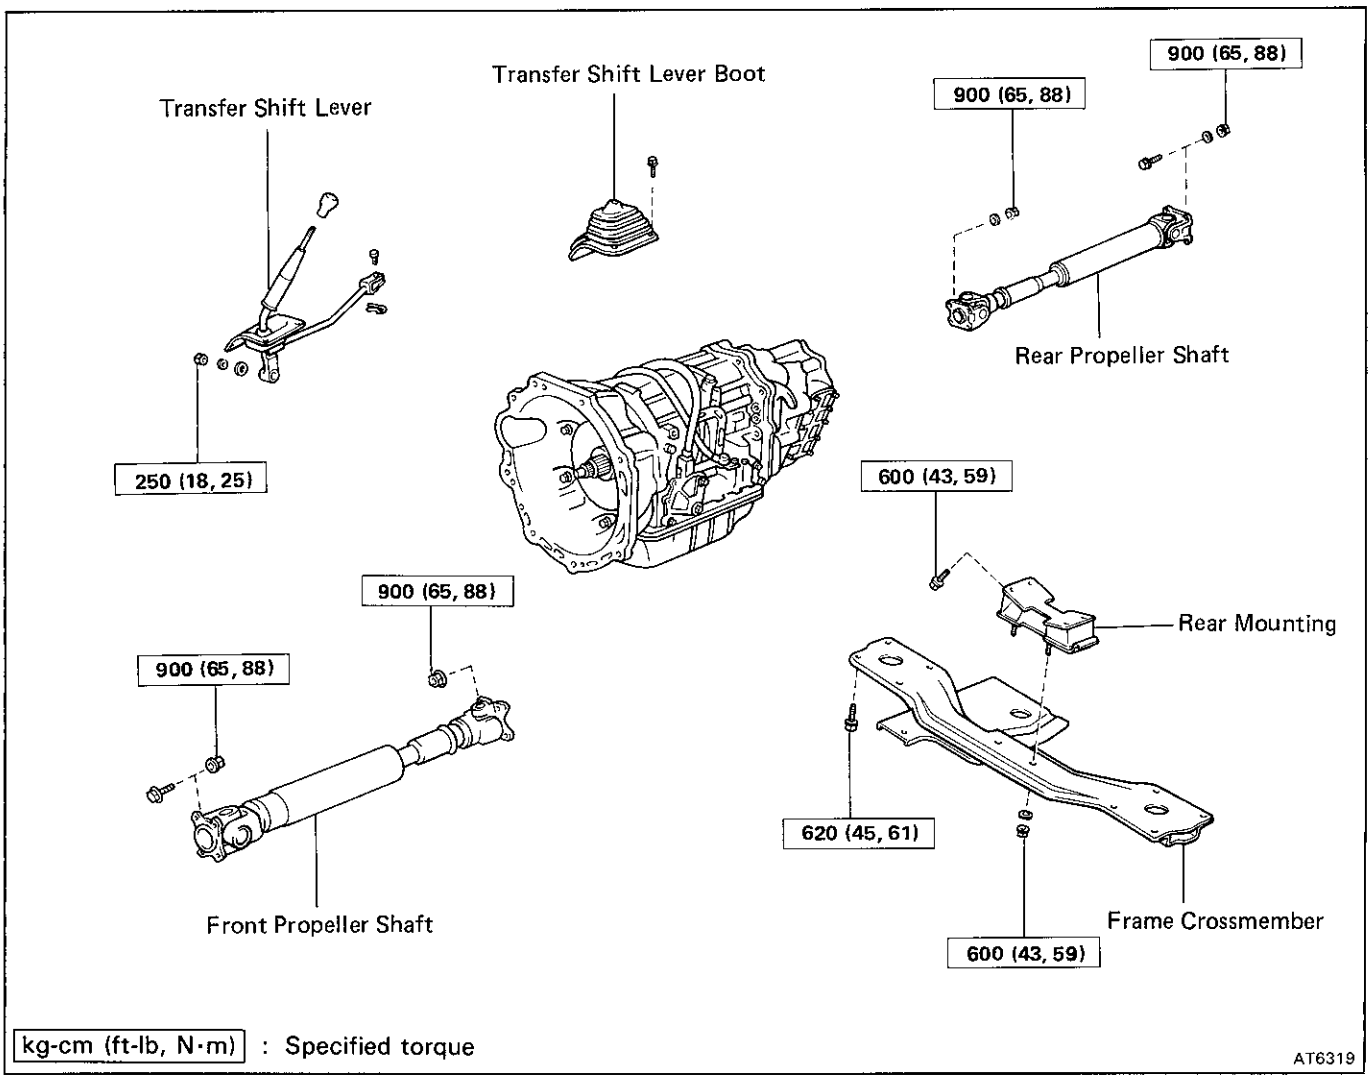

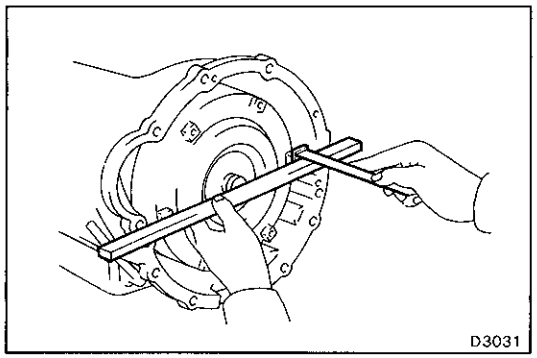

(MAIN POINT OF INSTALLATION)

CHECK TORQUE CONVERTER INSTALLATION

Using calipers and a straight edge, measure from the installed surface of the torque converter to the front surface of the transmission housing.

Correct distance:

3F engine 15.7 mm (0.618 in.) or more
1HZ engine 43.8 mm (1.724 in.) or more

NOTICE: Install the converter horizontally to prevent oil seal from damage.

If the distance is less than the standard, check for an improper installation.