

POWER SOURCE

Parts Location

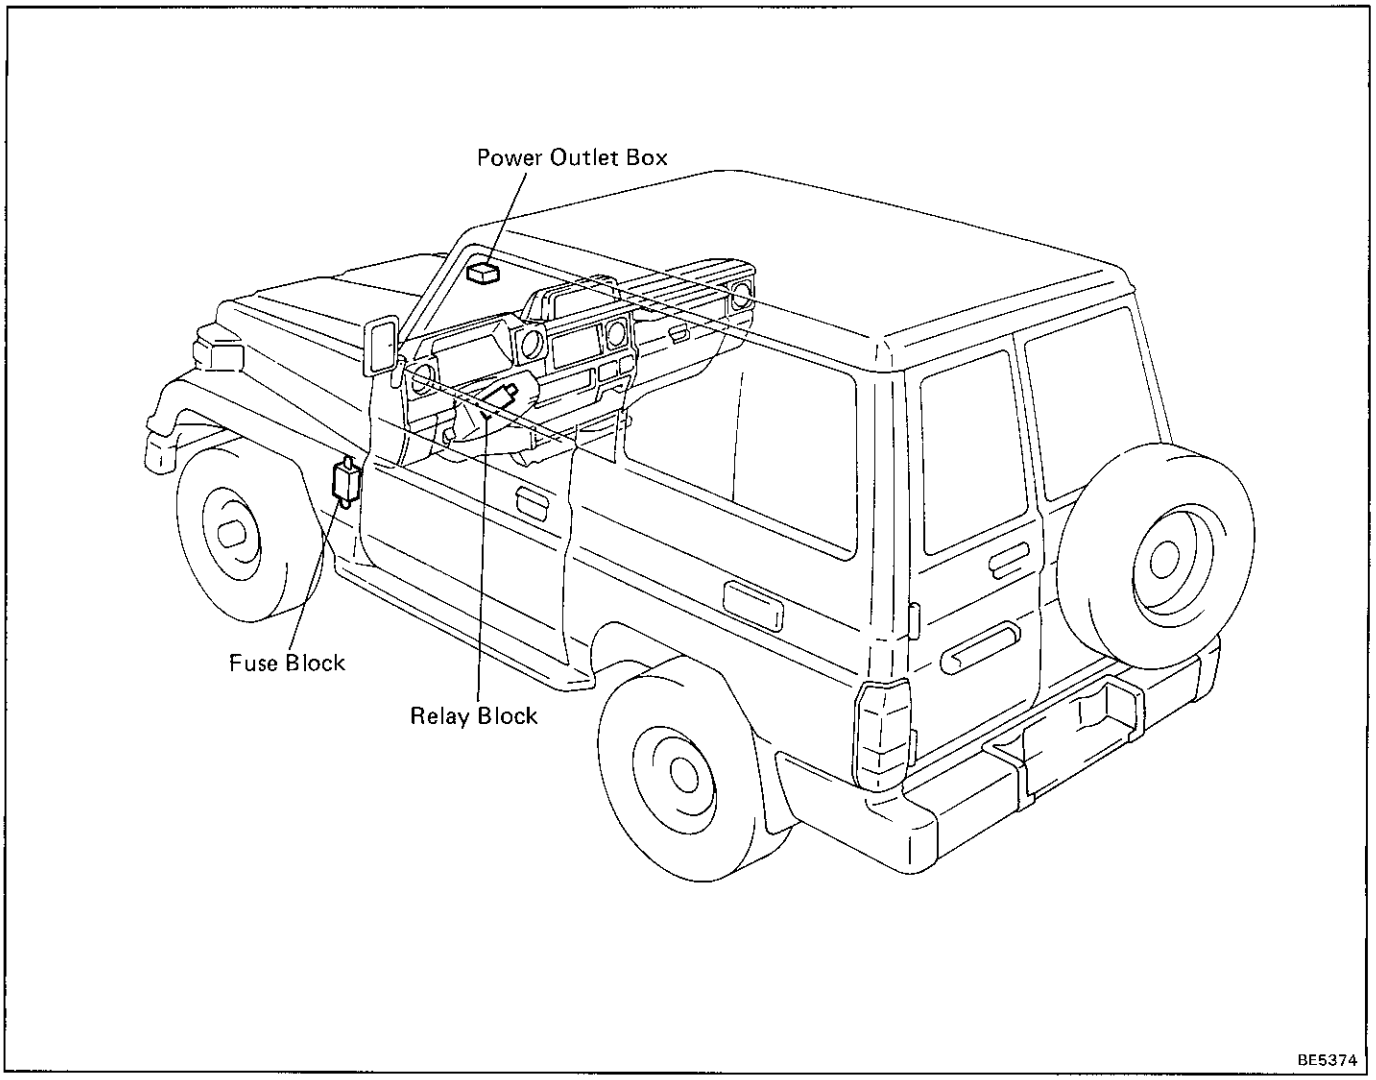

Fuse Block

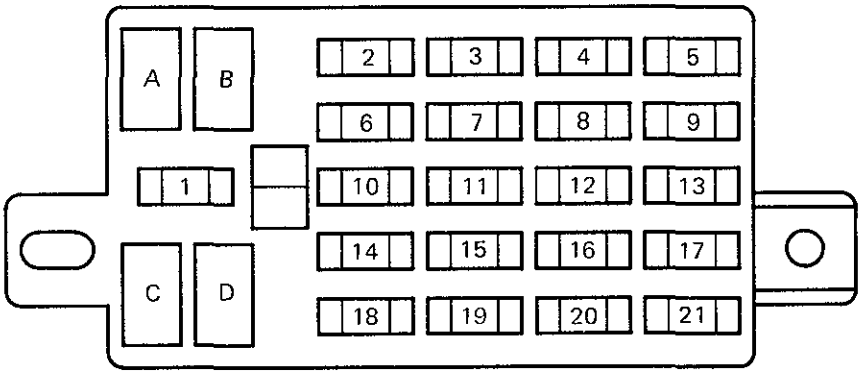

Fuses

Europe

1.	*1 FUEL-HTR	15A
	*2 IGN	7.5A
2.	(SPARE)	7.5A
3.	A.C	10A
4.	DIFF	30A
5.	TAIL (LH)	10A
6.	(SPARE)	15A
7.	TURN	7.5A
8.	STOP	10A
9.	TAIL (RH)	10A
10.	CHARGE	7.5A
11.	DEFOG	15A
12.	DOME	7.5A
13.	HAZ-HORN	15A
14.	CIG	15A
15.	WIPER	20A
16.	HEAD (LH-LWR)	10A
17.	HEAD (LH-UPR)	10A
18.	*1 ST	7.5A
	*2 EFI	15A
19.	ENGINE	15A
20.	HEAD (RH-LWR)	10A
21.	HEAD (RH-UPR)	10A

*1: w/o EFI
*2: w/ EFI

Models except Europe


1.	FUEL-HTR	15A
2.	(SPARE)	7.5A
3.	DEFOG	15A
4.	GLOW	7.5A
5.	STOP	10A
6.	(SPARE)	15A
7.	TAIL	20A
8.	GAVERNOR	30A
9.	DOME	7.5A
10.	CHARGE	7.5A
11.	A.C	10A
12.	ECD	15A
13.	HAZ-HORN	15A
14.	CIG	15A
15.	WIPER	20A
16.	DIFF	20A
17.	HEAD (LH)	10A
18.	ST	7.5A
19.	ENGINE	15A
20.	TURN	10A
21.	HEAD (RH-UPR)	10A

Medium Current Fuses

A.	DOOR	30A
B.	HEATER	30A
C.	POWER	30A
D.	—	

BE5328

Power Outlet Box

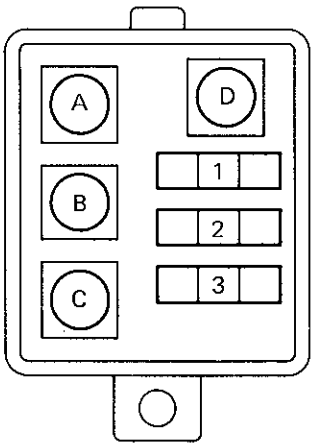


Fuses

	12V Vehicles			24V Vehicles	
1.	ACC	10A	1.	ACC	7.5A
2.	IG	10A	2.	IG	7.5A
3.	+B	20A	3.	+B	10A

Terminals

No.	Terminal Name	Connected Parts
A	ACC	Ignition Switch ACC
B	IG	Ignition Switch IG
C	+B	FL AM1
D	–E	Ground

Relay Block

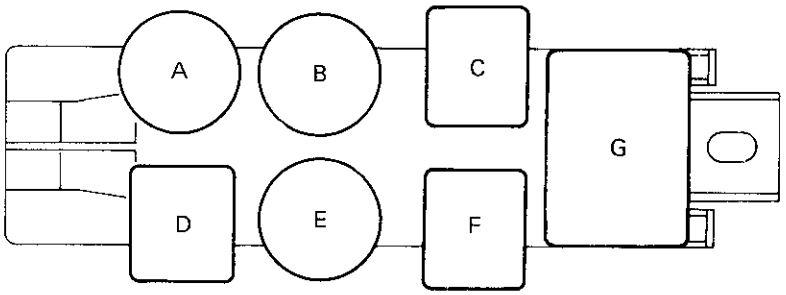


Relays


A. Taillight Control Relay
B. Transfer Control Relay
C. Front Heater Relay
D. Headlight Control Relay
E. Bulb Check Relay (Australia)
F. Headlight Dimmer Relay (Europe)
G. Turn Signal Flahser

Wiring Diagram

22R and 3F Engine

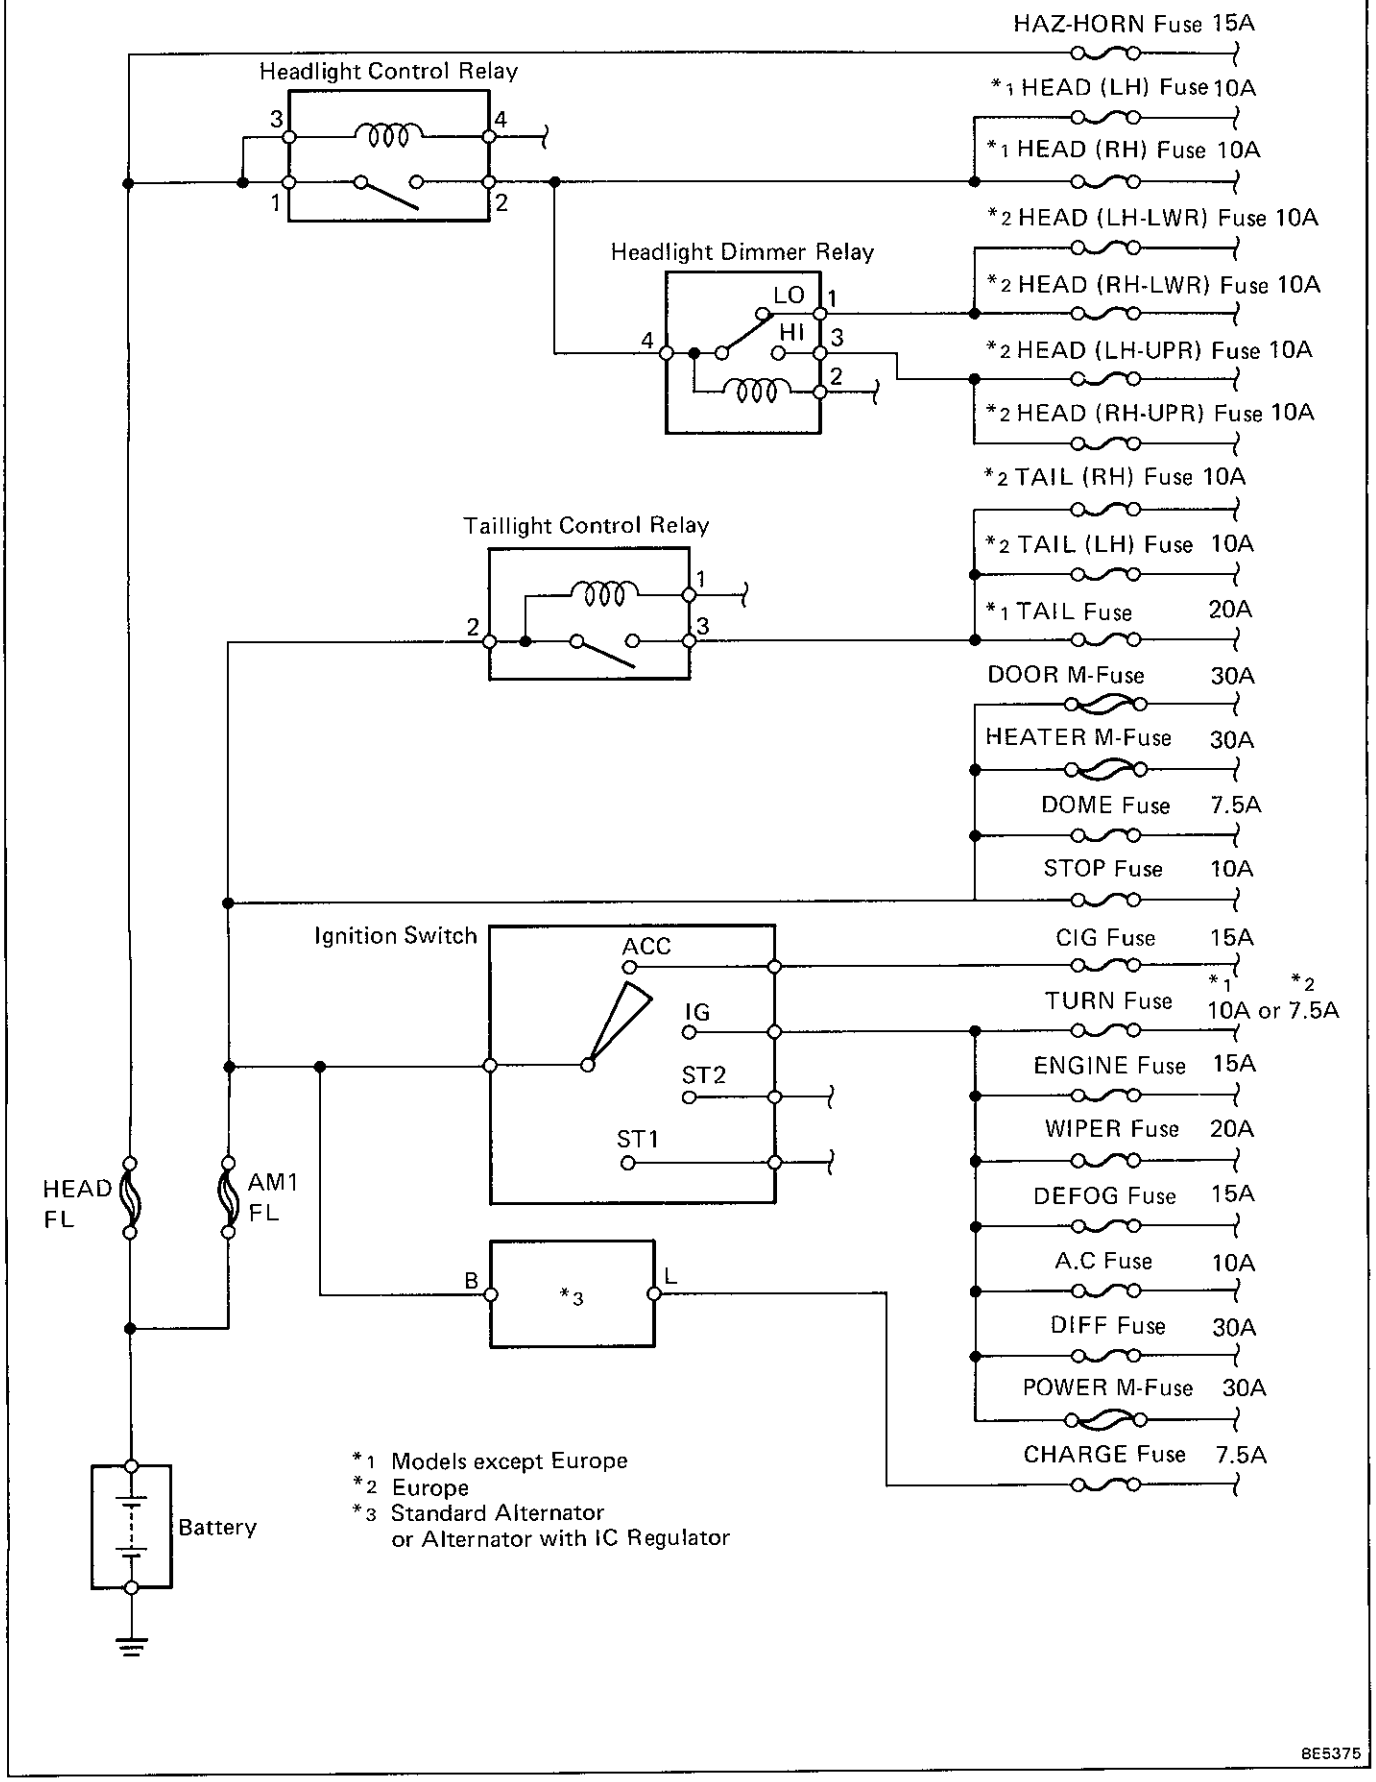

22R-E Engine

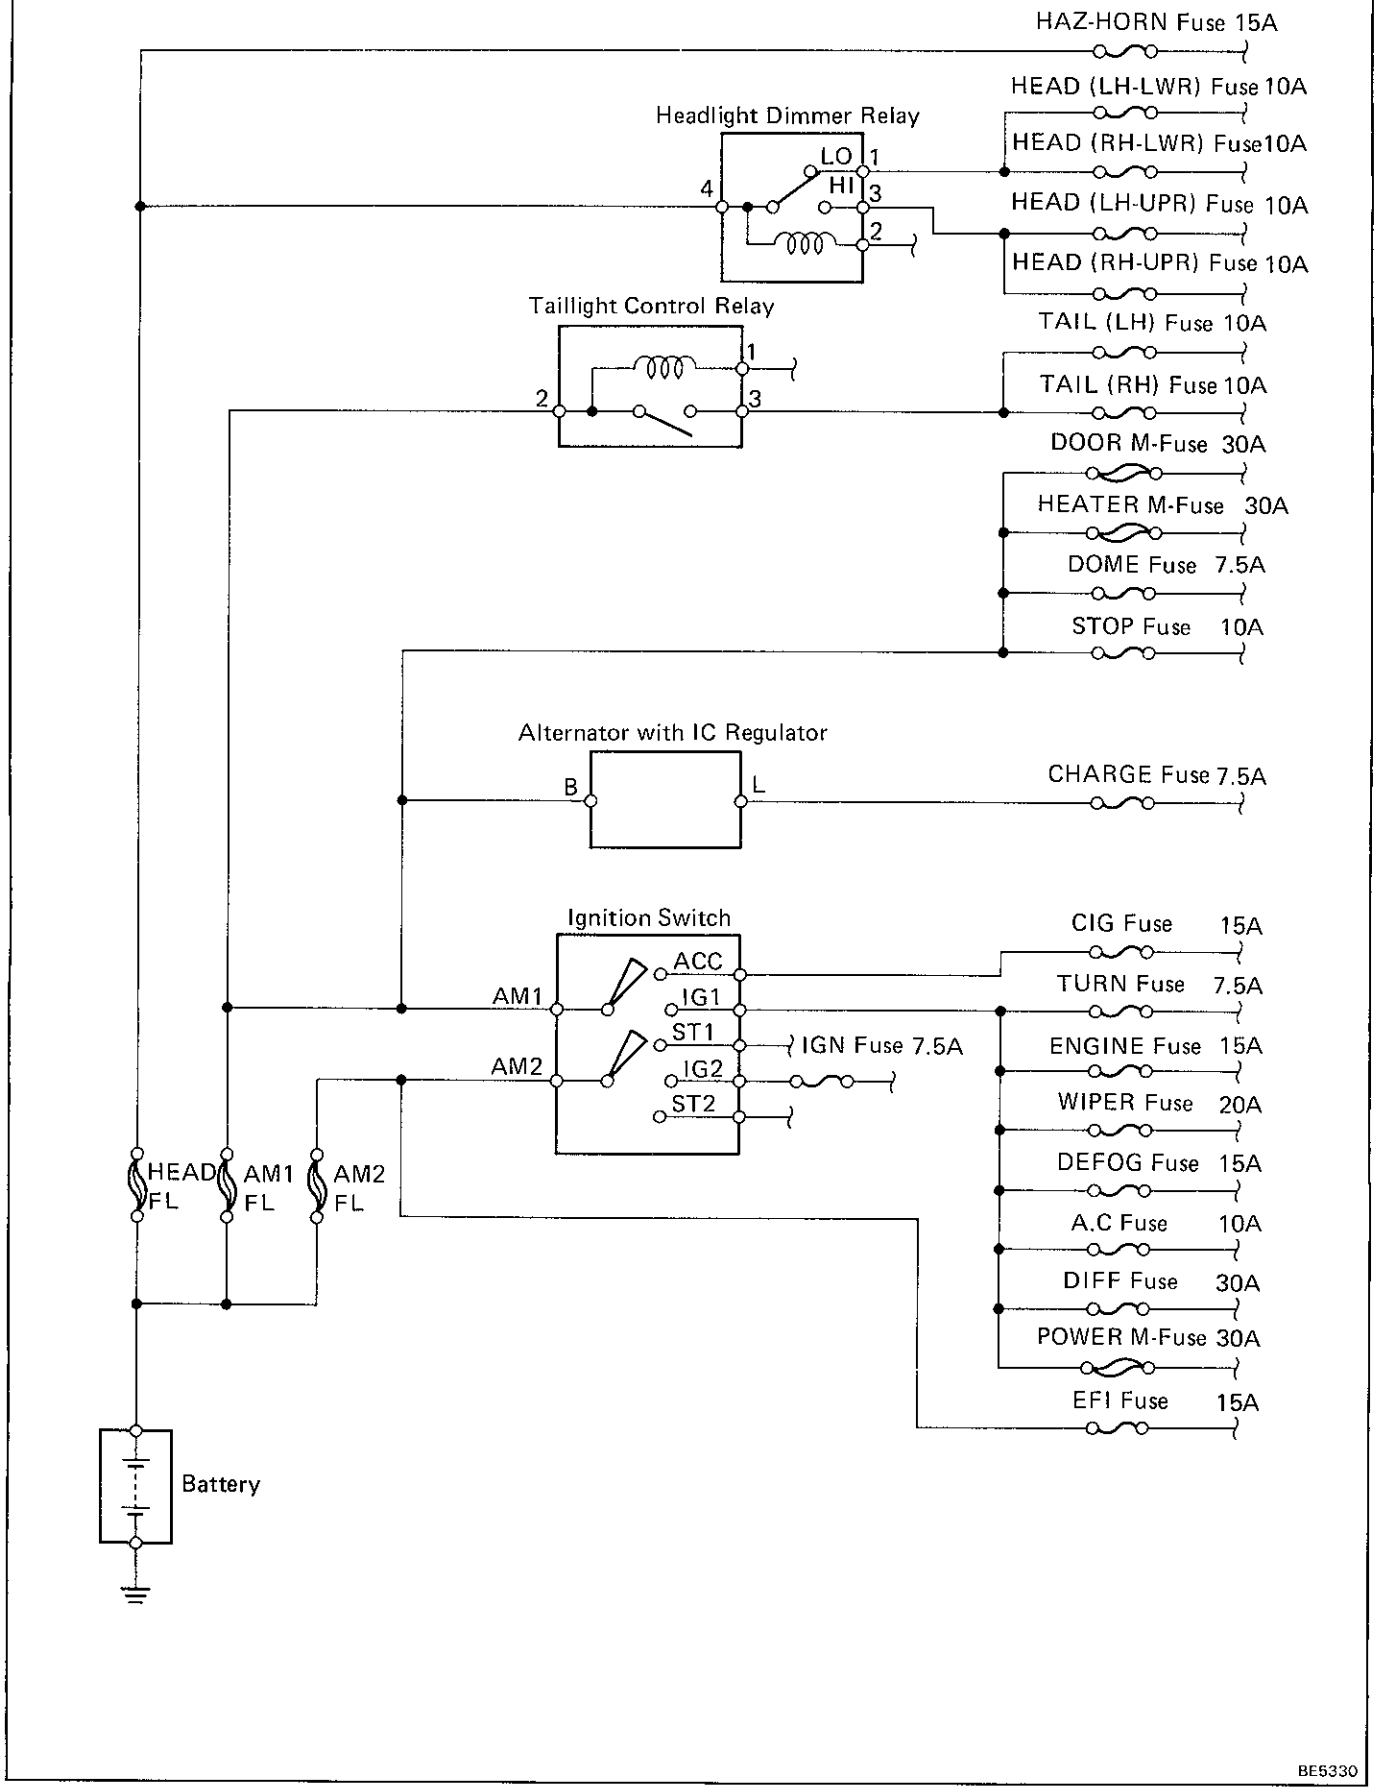
HAZ-HORN Fuse 15A
HEAD (LH-LWR) Fuse 10A
Headlight Dimmer Relay
HEAD (RH-LWR) Fuse10A
LO
HI
HEAD (LH-UPR) Fuse 10A
HEAD (RH-UPR) Fuse 10A
Taillight Control Relay
TAIL (LH) Fuse 10A
TAIL (RH) Fuse 10A
DOOR M-Fuse 30A
HEATER M-Fuse 30A
DOME Fuse 7.5A
STOP Fuse 10A
Alternator with IC Regulator
CHARGE Fuse 7.5A
Ignition Switch
CIG Fuse 15A
ACC
TURN Fuse 7.5A
IG1
ST1
IGN Fuse 7.5A
ENGINE Fuse 15A
IG2
ST2
WIPER Fuse 20A
DEFOG Fuse 15A
A.C Fuse 10A
DIFF Fuse 30A
POWER M-Fuse 30A
EFI Fuse 15A
HEAD FL
AM1 FL
AM2 FL
Battery
BE5330

1HZ, 1PZ, 3L, 2L-T Engine

