
IGNITION SWITCH


Parts Location

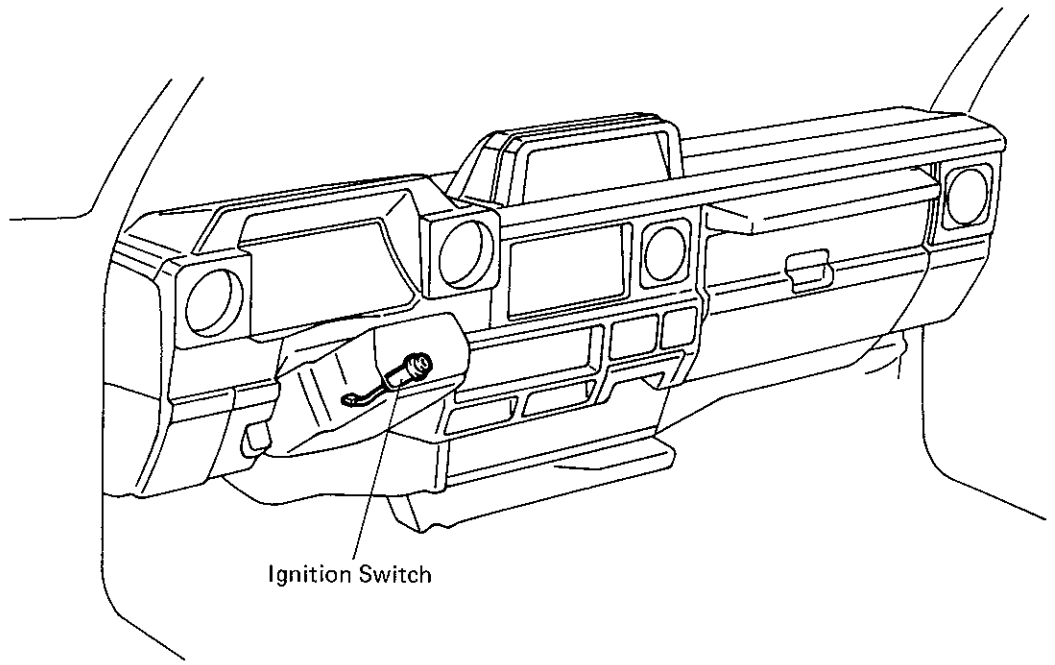


BE5331

Wiring and Connector Diagrams

(22R, 3F, 2L-T, engine and 1HZ, 1PZ engine w/ super glow)

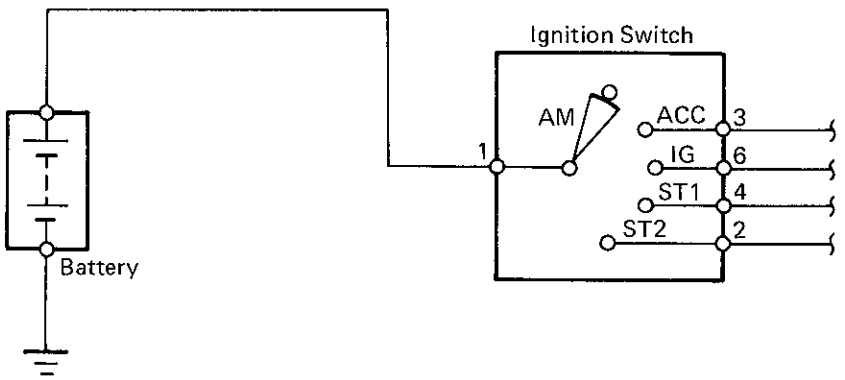


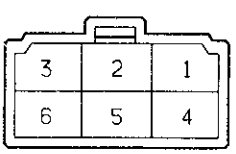

The POWER SOURCE CIRCUIT has been simplified. For full details, see pages BE-10, 11, 12.

BE5306 H-6-2


(1HZ, 1PZ, 3L engine w/o super glow)

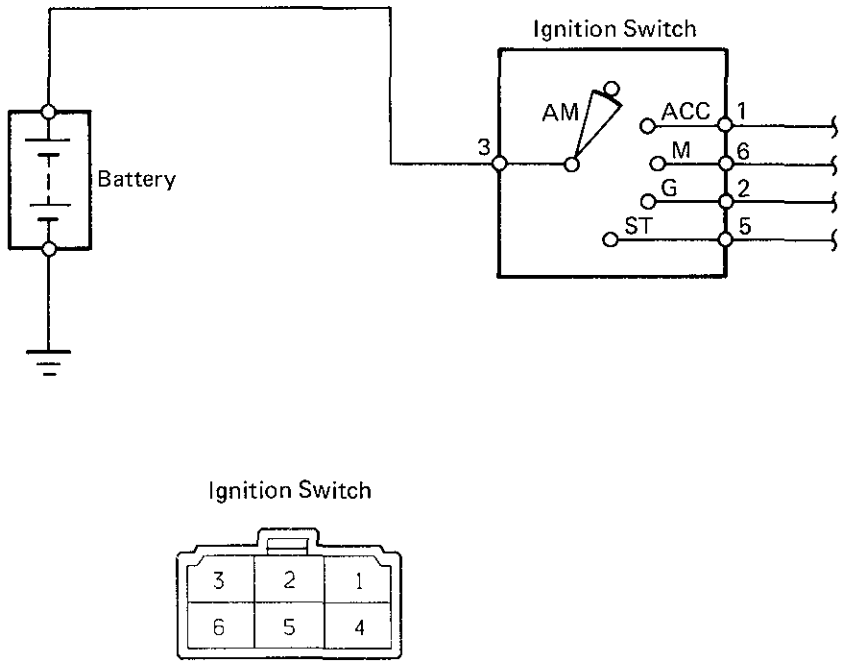


The POWER SOURCE CIRCUIT has been simplified. For full details, see pages BE-10, 11, 12.

BE5306 H-6-2

(22R-E engine)

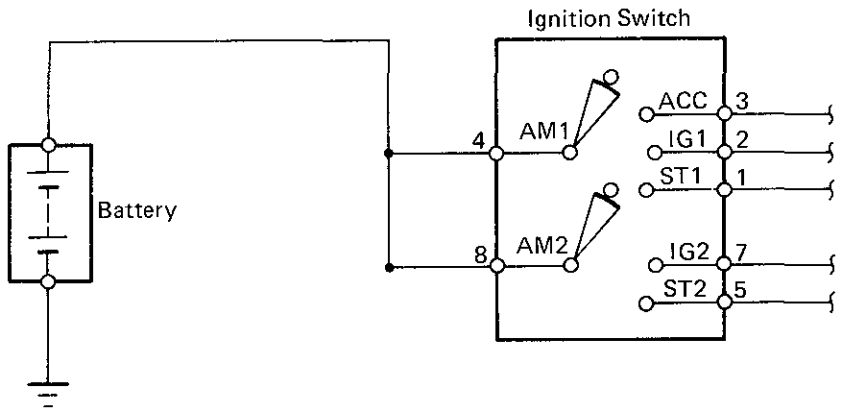

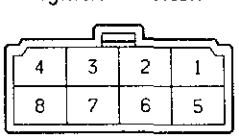

The POWER SOURCE CIRCUIT has been simplified. For full details, see pages BE-10, 11, 12.


BE5307 H-8-2

Parts Inspection

Ignition system


INSPECT SWITCH
(Ignition Switch/Continuity)

(22R, 3F, 2L-T engine and 1HZ, 1PZ engine w/ super glow)

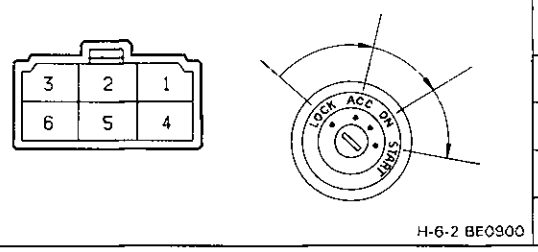


Terminal / Switch Position	1	2	3	4	6
LOCK					
ACC	○		○		
ON	○		○		○
START	○	○		○	○

(1HZ, 1PZ, 3L engine w/o super glow)

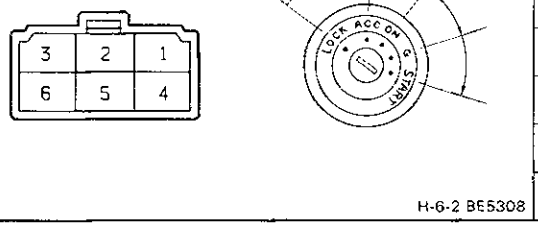

Terminal / Switch Position	1	2	3	5	6
LOCK					
ACC	○		○		
ON	○		○		○
GLOW		○	○		○
START		○	○	○	○

(22R-E engine)

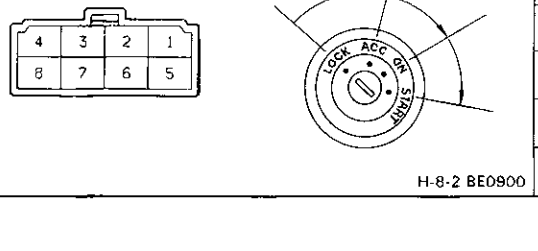

Terminal / Switch Position	1	2	3	4	5	7	8
LOCK							
ACC			○	○			
ON		○	○	○		○	○
START	○	○		○	○	○	○

If continuity is not as specified, replace the switch.