

POWER MIRROR CONTROL SYSTEM

Parts Location

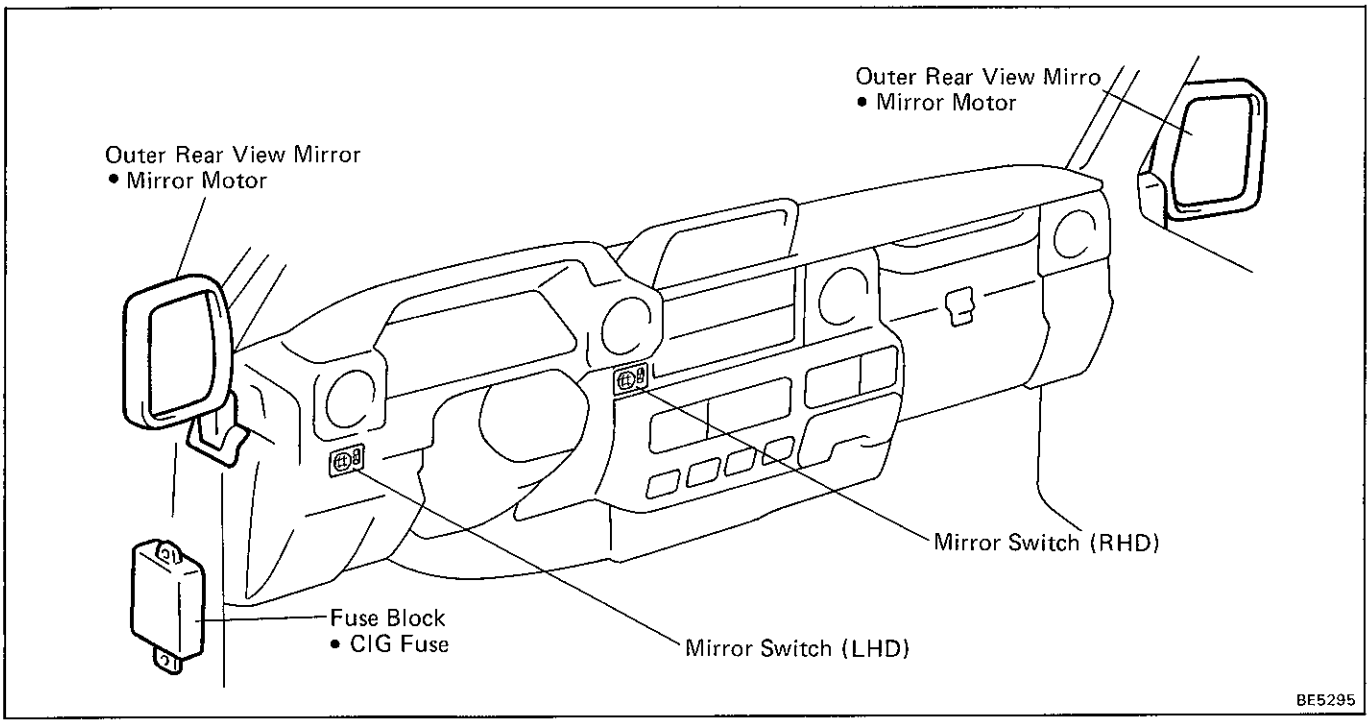

Wiring and Connector Diagrams

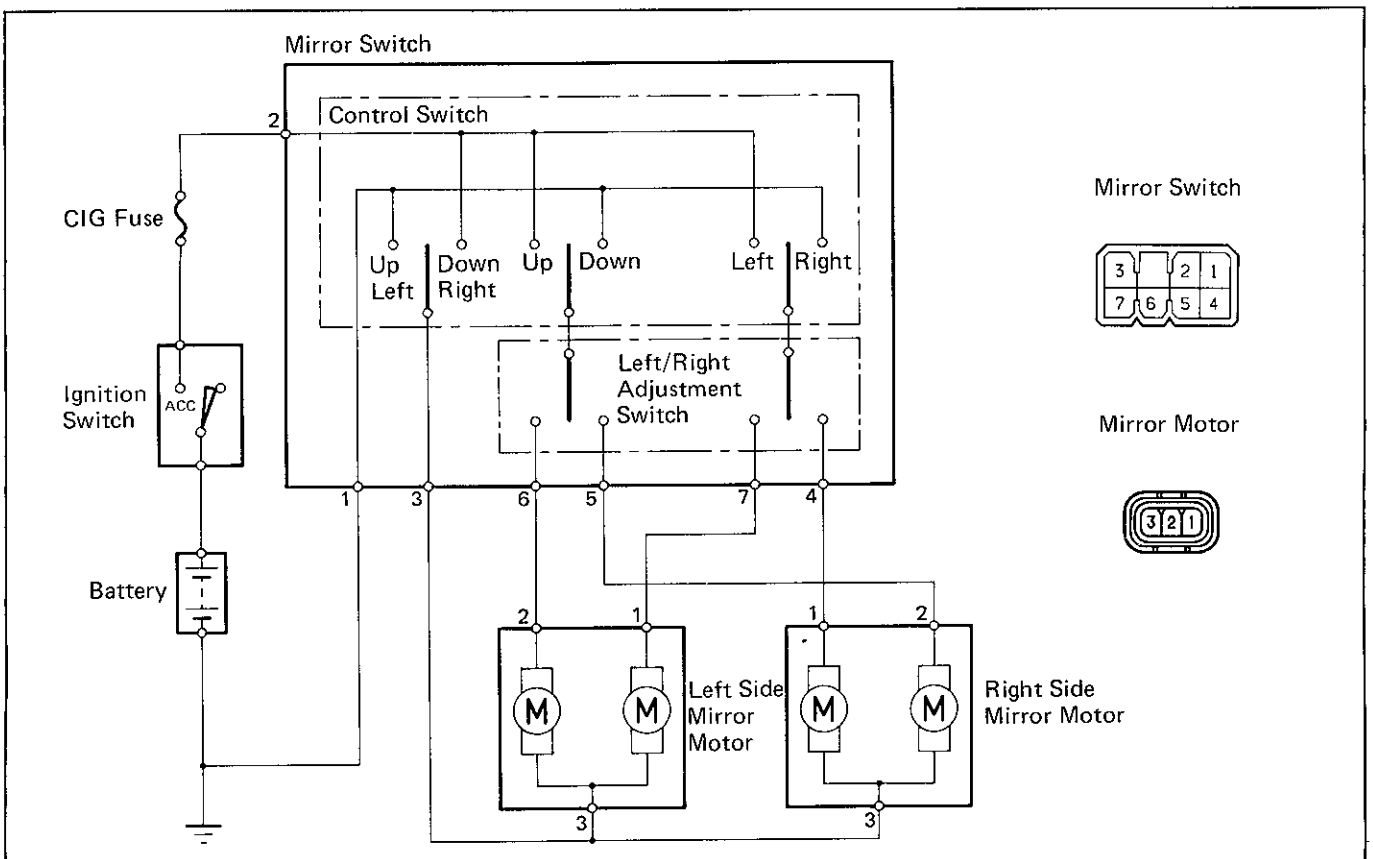

The POWER SOURCE CIRCUIT hsa been simplified. For full details, see pages BE-10 to 12.


G-7-2
BE4046 U-3-2


Troubleshooting

Problem	Possible cause	Remedy	Page
Remote control mirror system does not operate	CIG fuse faulty	Replace fuse and check for short	BE-4
	Mirror switch faulty	Check switch	BE-91
	Mirror motor faulty	Check motor	BE-91
	Wiring or ground faulty	Repair as necessary	

Parts Inspection

1. INSPECT MIRROR SWITCH (Continuity)

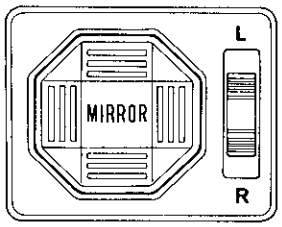




BE5290 G-7-2

Left/Right adjustment switch position	LEFT SIDE					OFF			RIGHT SIDE				
Terminal / Control switch position	2	3	1	6	7	2	3	1	2	3	1	5	4
OFF													
UP	○	○	○	○			○	○	○	○	○	○	
DOWN	○	○	○	○		○	○		○	○	○	○	
LEFT	○	○	○		○		○	○	○	○	○		○
RIGHT	○	○	○		○	○	○		○	○	○		○

If continuity is not as specified, replace the switch.

2. INSPECT MIRROR MOTOR

Connect the positive (+) lead from the battery to terminal in column "A" and the negative (—) lead to terminal in column "B", check that the mirror operates in column "C".

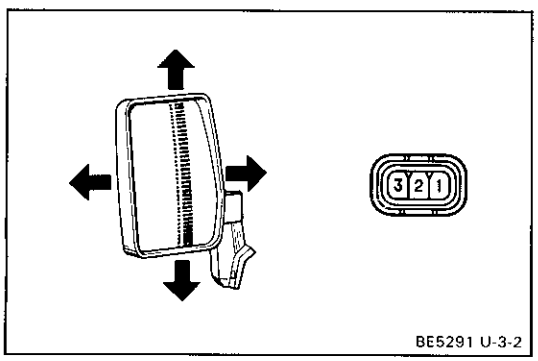

BE5291 U-3-2

A (+)	B (—)	C (Operation)
2	3	Mirror turns upward
3	2	Mirror turns downward
1	3	Mirror turns to left side
3	1	Mirror turns to right side

If operation is not as specified, replace the mirror assembly.