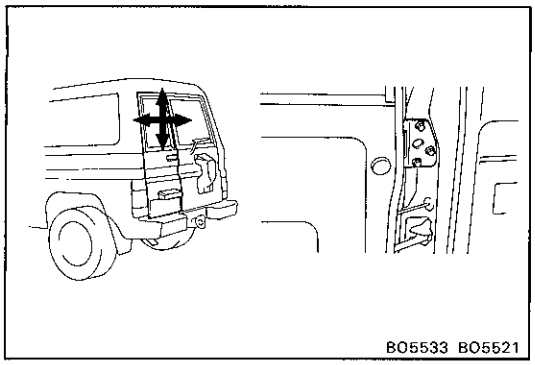
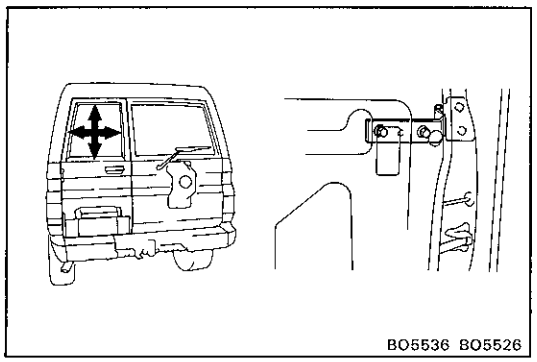

BO5533 BO5521

Left Back Door

ADJUSTMENT OF LEFT BACK DOOR


1. **ADJUST DOOR IN FORWARD/REARWARD AND VERTICAL DIRECTIONS**

   Loosen the body side hinge bolts to adjust.


BO5536 BO5526

2. **ADJUST DOOR IN LEFT/RIGHT AND VERTICAL DIRECTIONS**

   Loosen the door side hinge bolts to adjust.

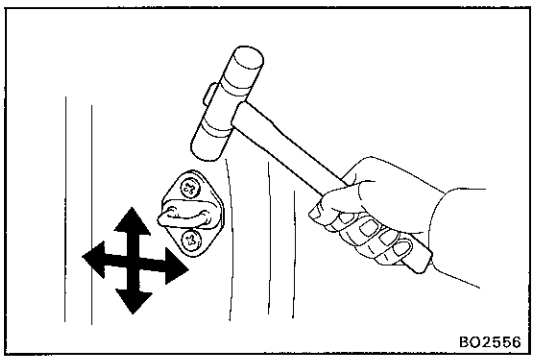
BO2556

3. **ADJUST DOOR LOCK STRIKER**

   (a) Check that the door fit and door lock linkages are adjusted correctly.


   (b) Check that the right back door is adjusted correctly.

   (c) Adjust the striker position by slightly loosening the striker mounting bolts or screws, and hitting the striker with a hammer.

   (d) Tighten the striker mounting bolts or screws again.

DISASSEMBLY OF LEFT BACK DOOR


(See page BO-15)

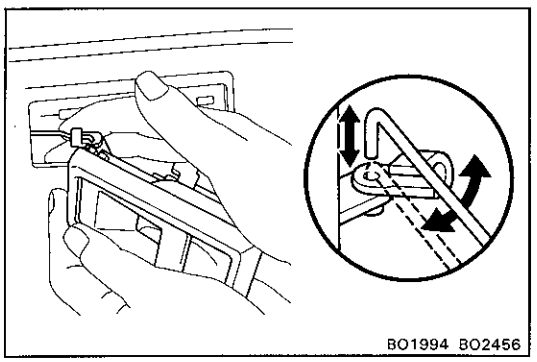
BO1994 BO2456

1. **REMOVE DOOR INSIDE HANDLE**

   (a) Remove the screw and slide the handle forward.

   (b) Disconnect the handle from the control link and remove the handle.

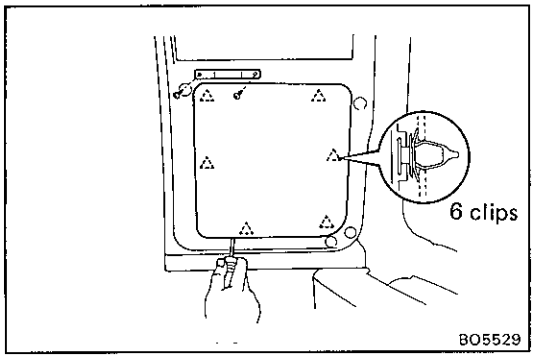

BO5529

2. **REMOVE PULL HANDLE**

   Remove two screws and the handle.


3. **REMOVE DOOR TRIM**

   (a) Insert the screwdriver between the door and the door trim to pry out.


   HINT: Tape the screwdriver tip before use.

   (b) Remove the door trim.

4. **REMOVE SERVICE HOLE COVER**

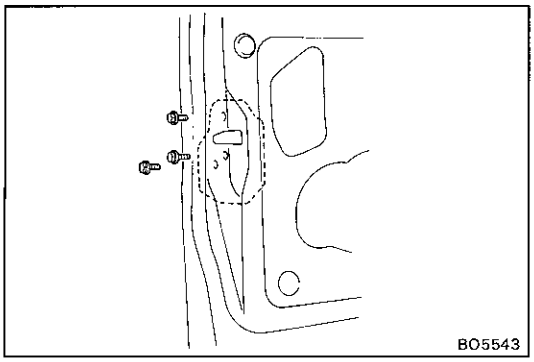


5. **REMOVE DOOR LOCK**
   (a) Disconnect the links from the outside handle and the lock cylinder.
   (b) Remove the lock knob.
   (c) (w/ Power Door Lock)
   Disconnect the connector.
   (d) Remove three screws.
   (e) Remove the door lock through the service hole.

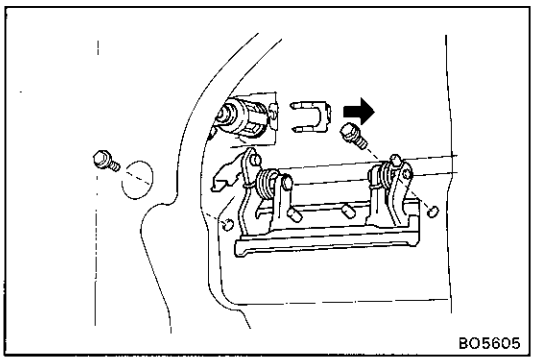

6. **REMOVE DOOR LOCK CYLINDER**
   Remove the retainer and the lock cylinder.


7. **REMOVE OUTSIDE HANDLE**
   Remove two bolts and the handle.

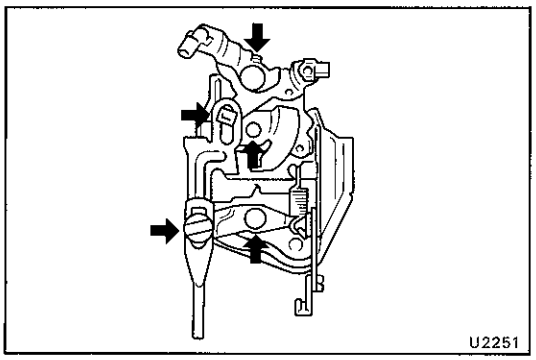

ASSEMBLY OF LEFT BACK DOOR


(See page BO-15)

1. **BEFORE INSTALLING PARTS, COAT THEM WITH MP GREASE**
   Apply MP grease to the sliding surface of the door lock.

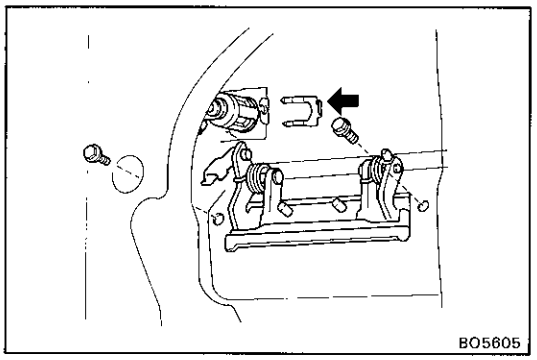


2. **INSTALL OUTSIDE HANDLE**
   Install the handle with two bolts.

3. **INSTALL DOOR LOCK CYLINDER**
   Install the lock cylinder with the retainer.

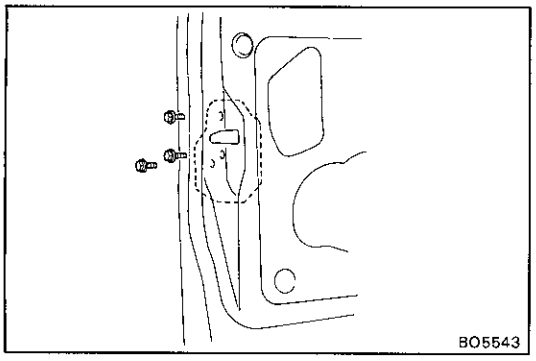

4. **INSTALL DOOR LOCK**
   (a) Install the door lock with three screws.
   (b) (w/ Power Door Lock)
   Connect the connector.
   (c) Connect the links to the outside handle and the lock cylinder.
   (d) Install the lock knob.

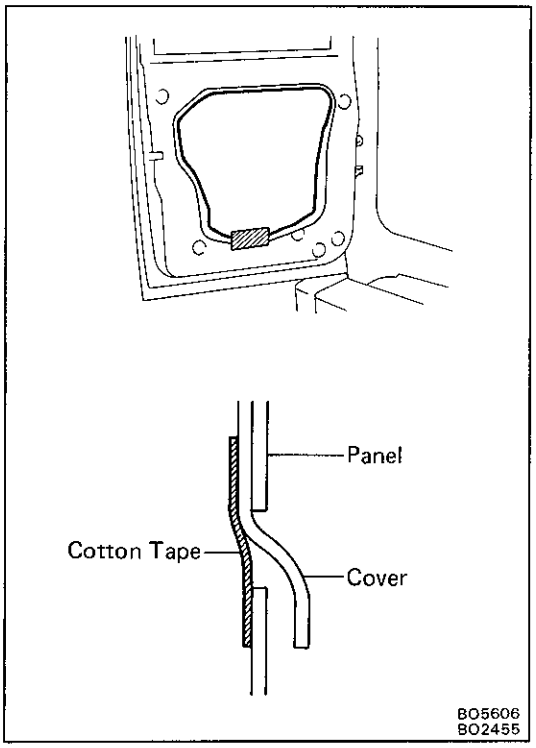


5. **INSTALL SERVICE HOLE COVER**

(a) Install the service hole cover with adhesive.

(b) Insert the lower edge of the service hole cover into the panel slit.

(c) Seal the panel slit with the cotton tape.

NOTICE: Do not block the trim clip sealing with the tape.

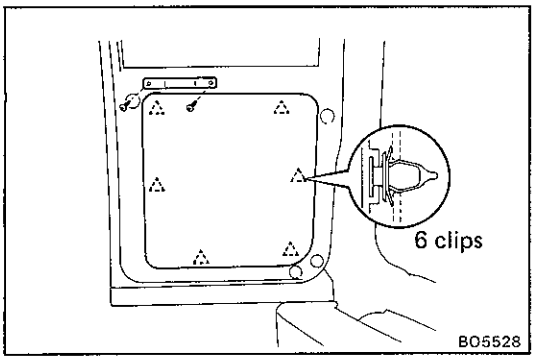


6. **INSTALL DOOR TRIM**

Install the door trim with retainer to the inside panel by tapping.

7. **INSTALL PULL HANDLE**

Install the handle with two screws.

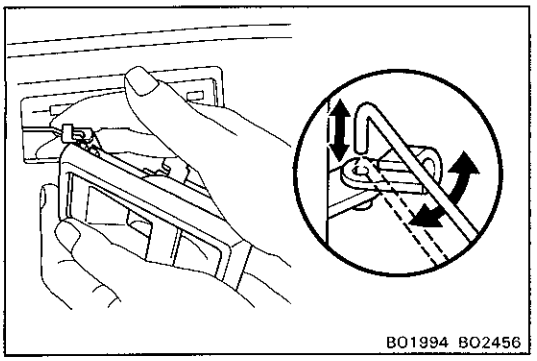

8. **INSTALL DOOR INSIDE HANDLE**

(a) Connect the handle to the control link.

(b) Push the handle in the door panel and slide it rearward.

(c) Install the screw.