

Body Outside Moulding

COMPONENTS

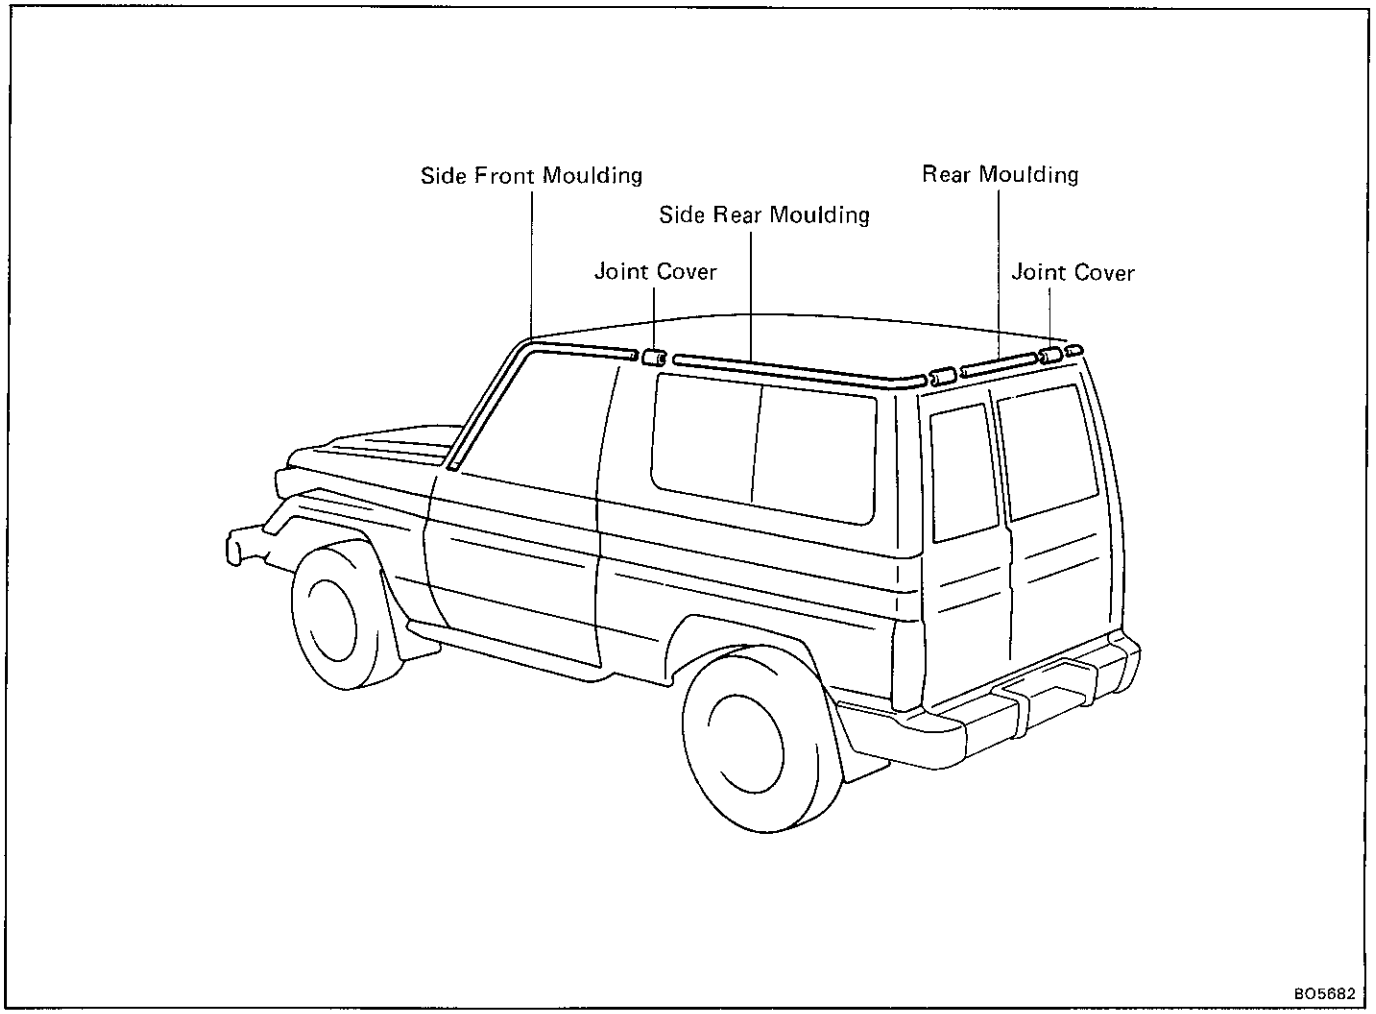

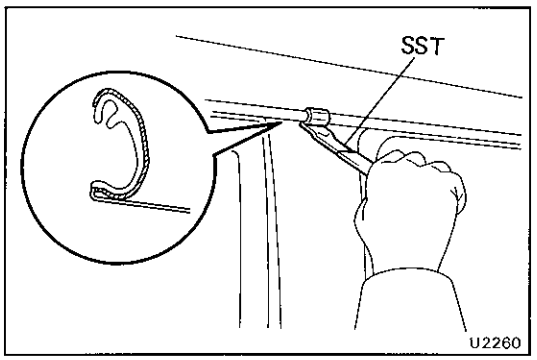

REMOVAL OF BODY OUTSIDE MOULDING


REMOVE JOINT COVER AND MOULDING

(a) Insert the SST to the bottom side of the joint cover and remove it.

SST 09806-30010

(b) Latch the SST to the bottom side of the moulding and remove it.

SST 09806-30010

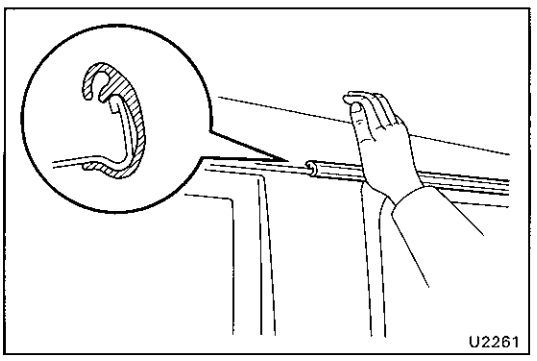

INSTALLATION OF BODY OUTSIDE MOULDING

INSTALL MOULDING AND JOINT COVER

(a) Suspend the upper side of the moulding to the roof drip and tip it on by hand.

(b) Install the joint cover.