


Wheel Opening Extension

COMPONENTS

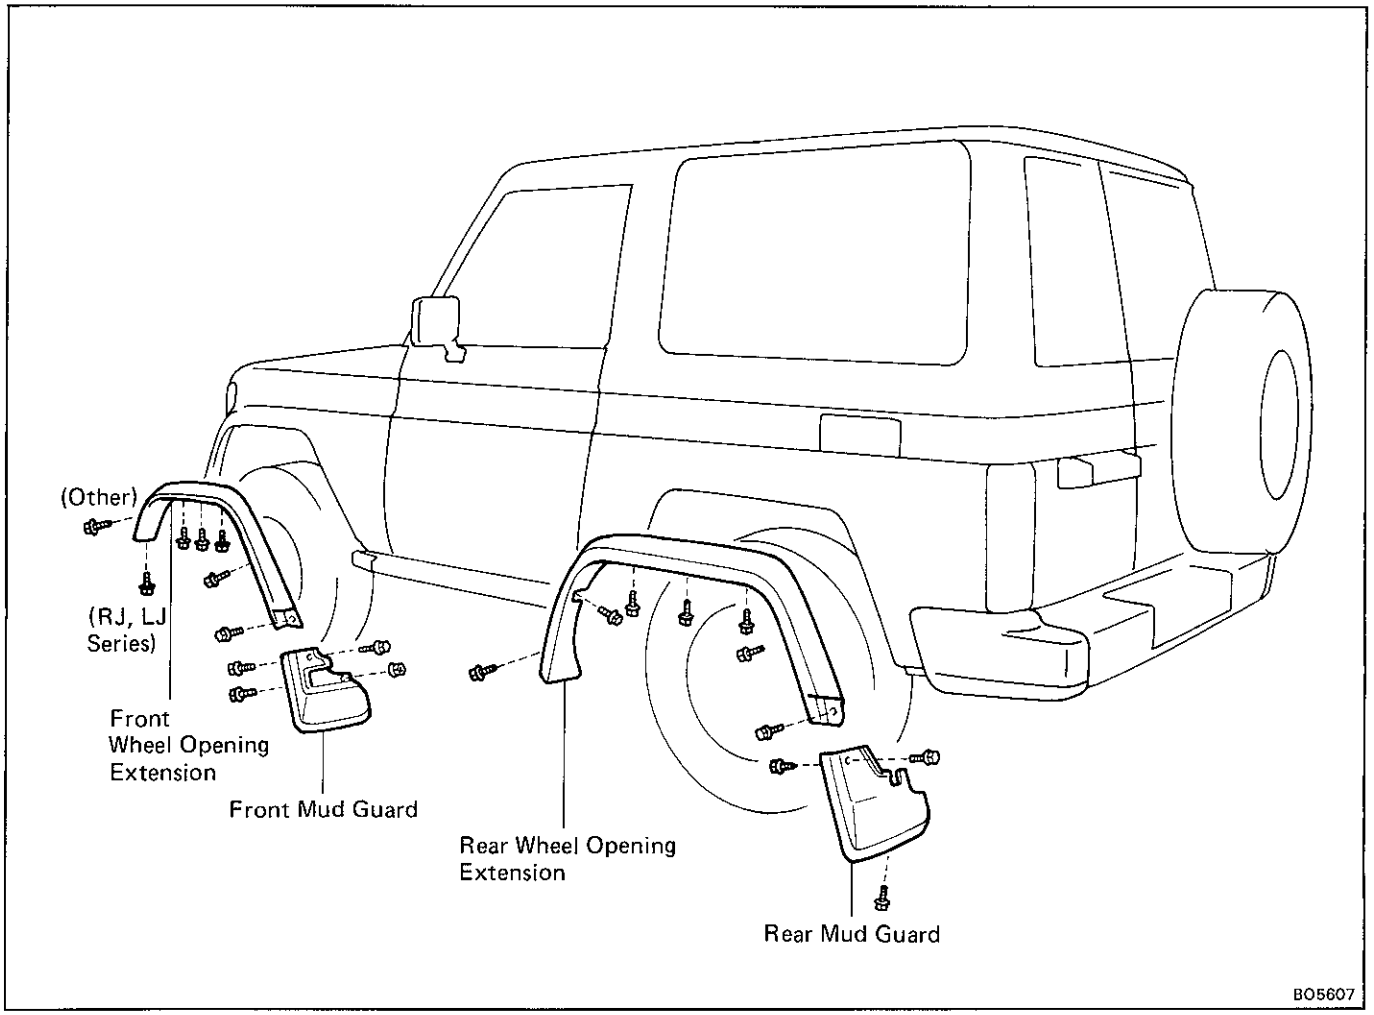

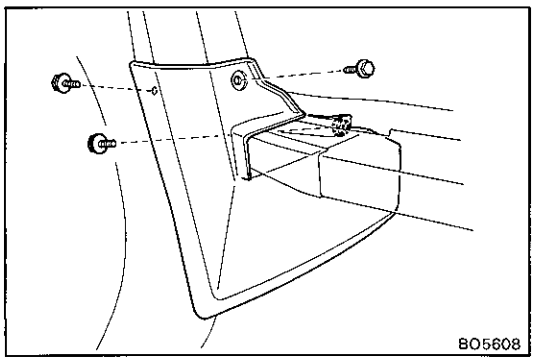

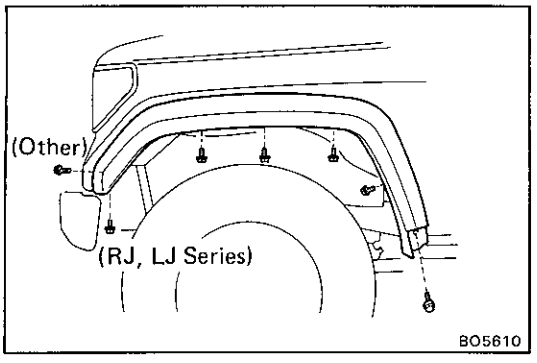

REMOVAL OF FRONT WHEEL OPENING EXTENSION


1. **REMOVE FRONT MUD GUARD**
   Remove three bolts and the mud guard.

2. **REMOVE FRONT WHEEL OPENING EXTENSION**
   Remove six bolts and the extension.

INSTALLATION OF FRONT WHEEL OPENING EXTENSION

1. **INSTALL FRONT WHEEL OPENING EXTENSION**
   Install the over fender with six bolts.

2. **INSTALL FRONT MUD GUARD**
   Install the mud guard with three bolts.

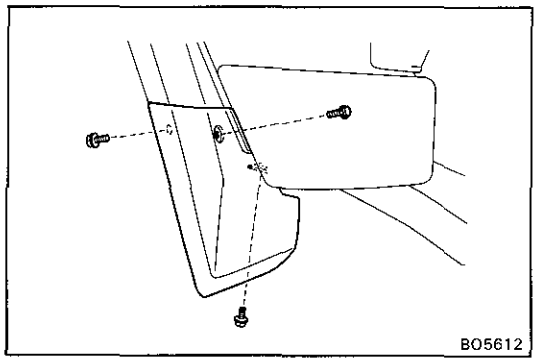


REMOVAL OF REAR WHEEL OPENING EXTENSION

(See page BO-26)

1. **REMOVE REAR MUD GUARD**

   Remove three bolts and the mud guard.

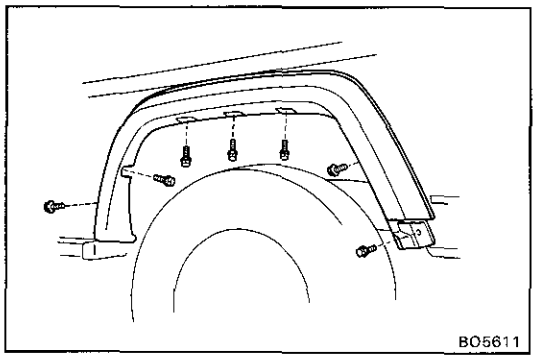

2. **REMOVE REAR WHEEL OPENING EXTENSION**

   Remove seven bolts and the extension.

INSTALATION OF REAR WHEEL OPENING EXTENSION

(See page BO-26)

1. **INSTALL REAR WHEEL OPENING EXTENSION**

   Install the extension with seven bolts.

2. **INSTALL REAR MUD GUARD**

   Install the mud guard with three bolts.