TARPAULIN


REMOVAL OF TARPAULIN

1. **UNPEEL MAGIC TAPE AROUND TARPAULIN SPARS**


   70 series 10 places

   73 series 15 places


70 Series

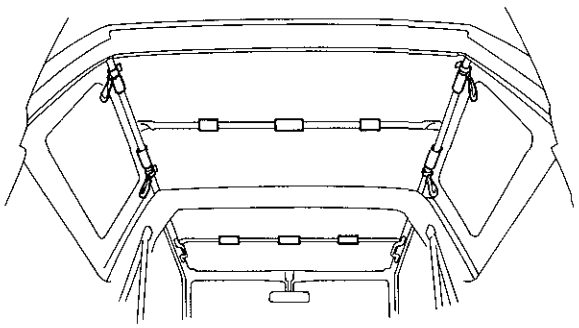

73 Series

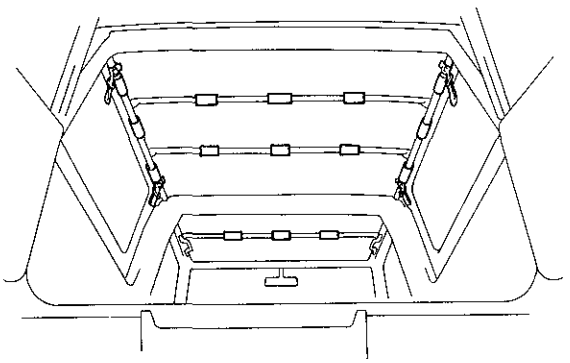


BO0928 BO0929

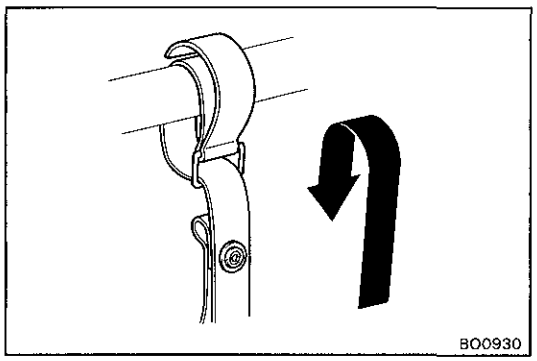

BO0930

2. ***RELEASE FOUR BELTS WRAPPED AROUND TARPAULIN SPARS (TWO EACH SIDE)***

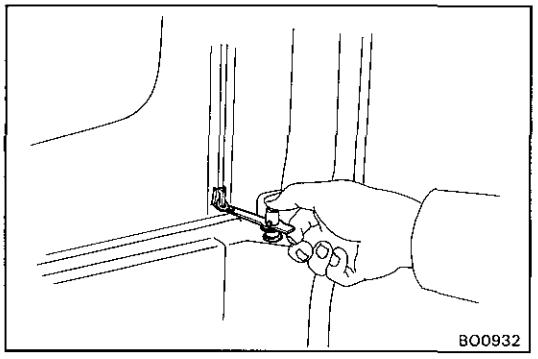


BO0932


3. **UNZIP FOUR ZIPPERS (TWO EACH SIDE)**

   Release the burglary prevention cock and unzip the zipper.


4. REMOVE TWO BACK DOOR OPENING TRIM CORNER JOINTS AND THREE OPENING TRIMS

5. UNPEEL FIVE STRIPS OF MAGIC TAPE ABOVE BACK DOOR

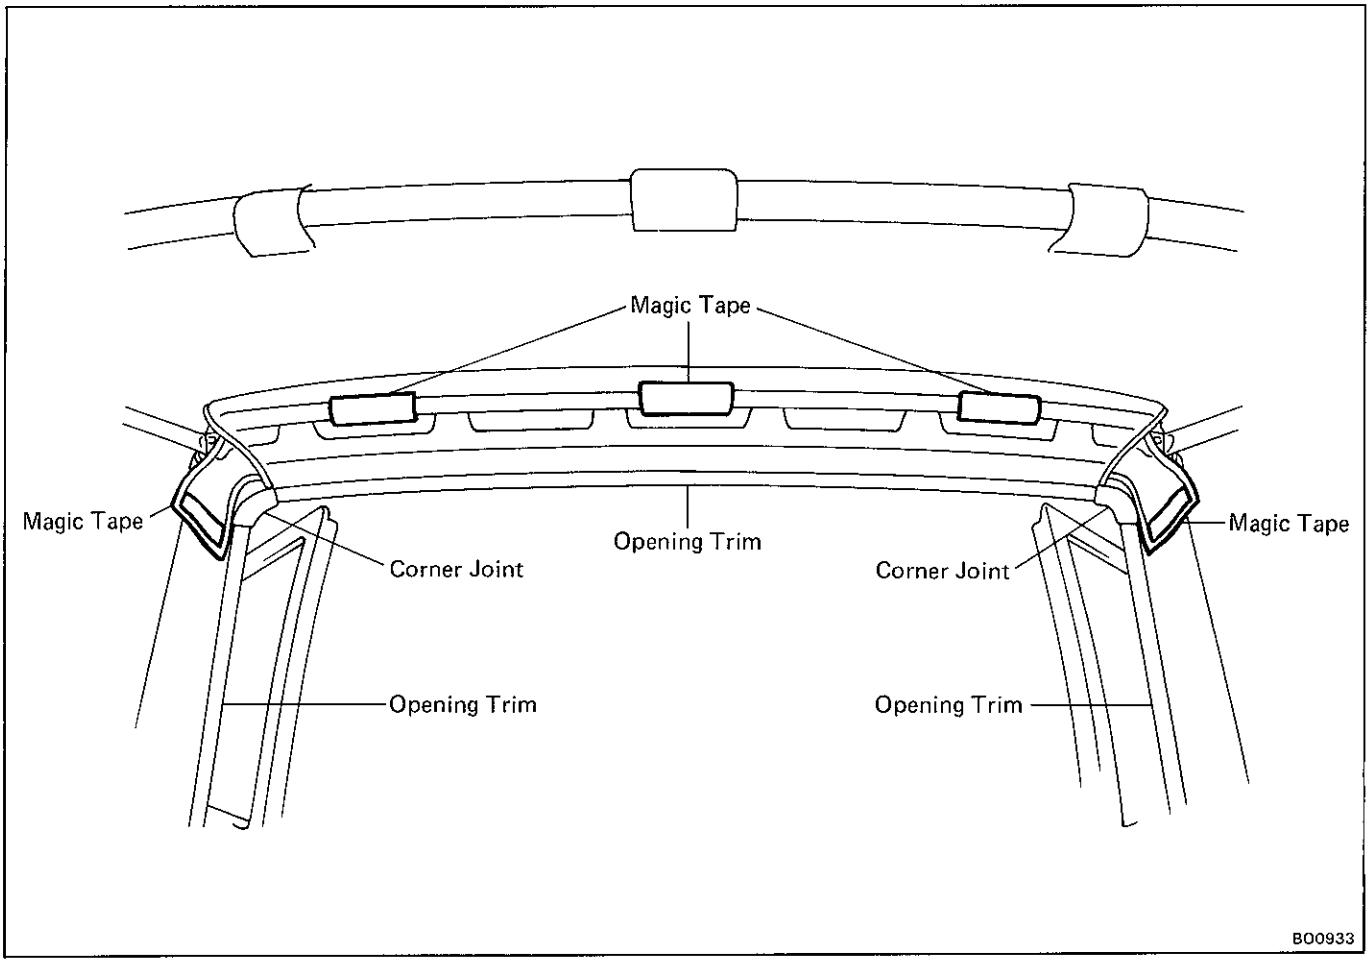


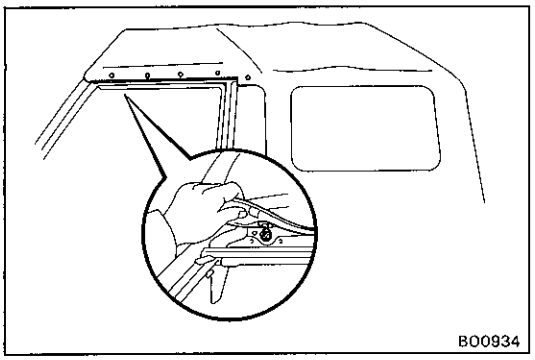

6. DISCONNECT ROOF SIDE RAIL AS WELL AS TEN SNAPS (FIVE EACH SIDE)

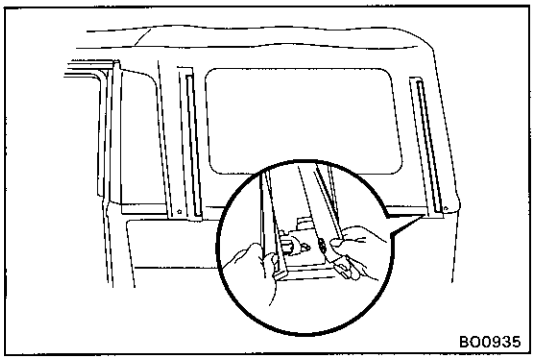


7. UNPEEL TWELVE STRIPS OF MAGIC TAPE OUTSIDE VEHICLE (SIX EACH SIDE), AND UNHOOK FOUR SNAPS (TWO EACH OUTSIDE)

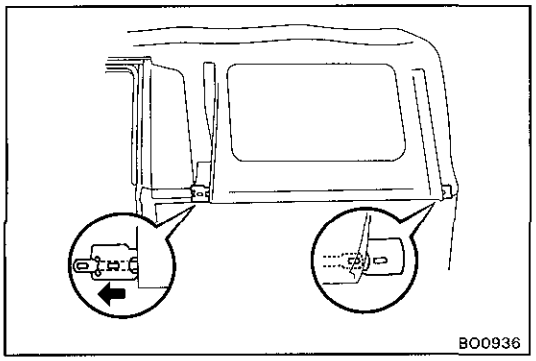


8. FREE BOTH SIDEWALL PIPES FROM SIDEWALL OF TARPAULIN

(a) Disconnect both ends of the pipe from the hooks.

(b) From the back end of the pipe, push the pipe forward so the opposite end protrudes a few inches from the service notch and the back end slides out of the service hole.

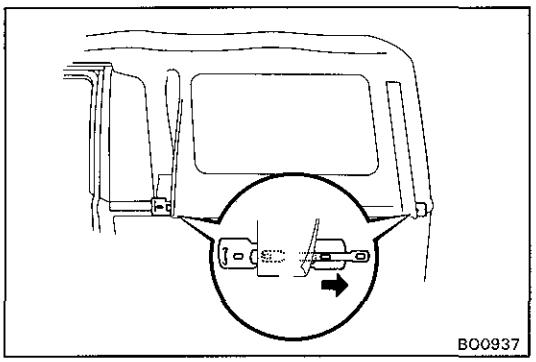


(c) Pull the pipe out by the back end.

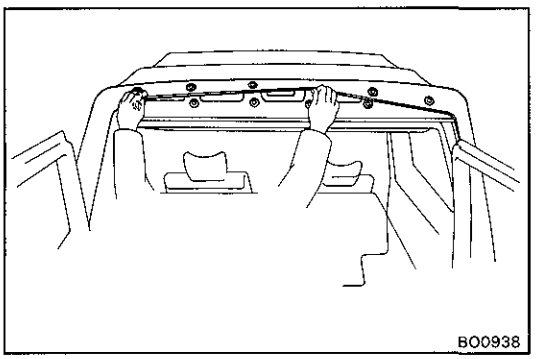


9. DISCONNECT SIX SNAPS ABOVE BACK DOOR


10. SLIDE BOTH WATER SEALS UP AND OUT OF ROLL BAR SIDE CHANNEL

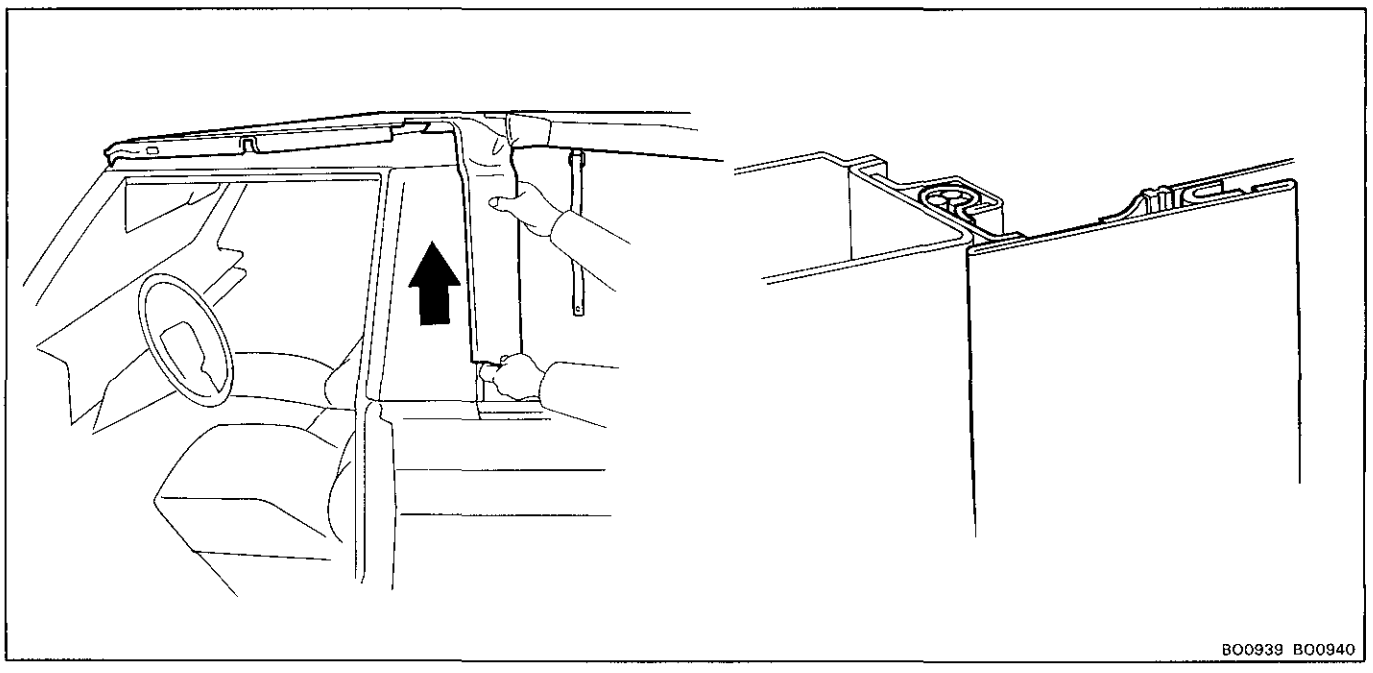

11. SLIDE BOTH WATER SEALS UP AND OUT OF REAR PILLAR CHANNEL

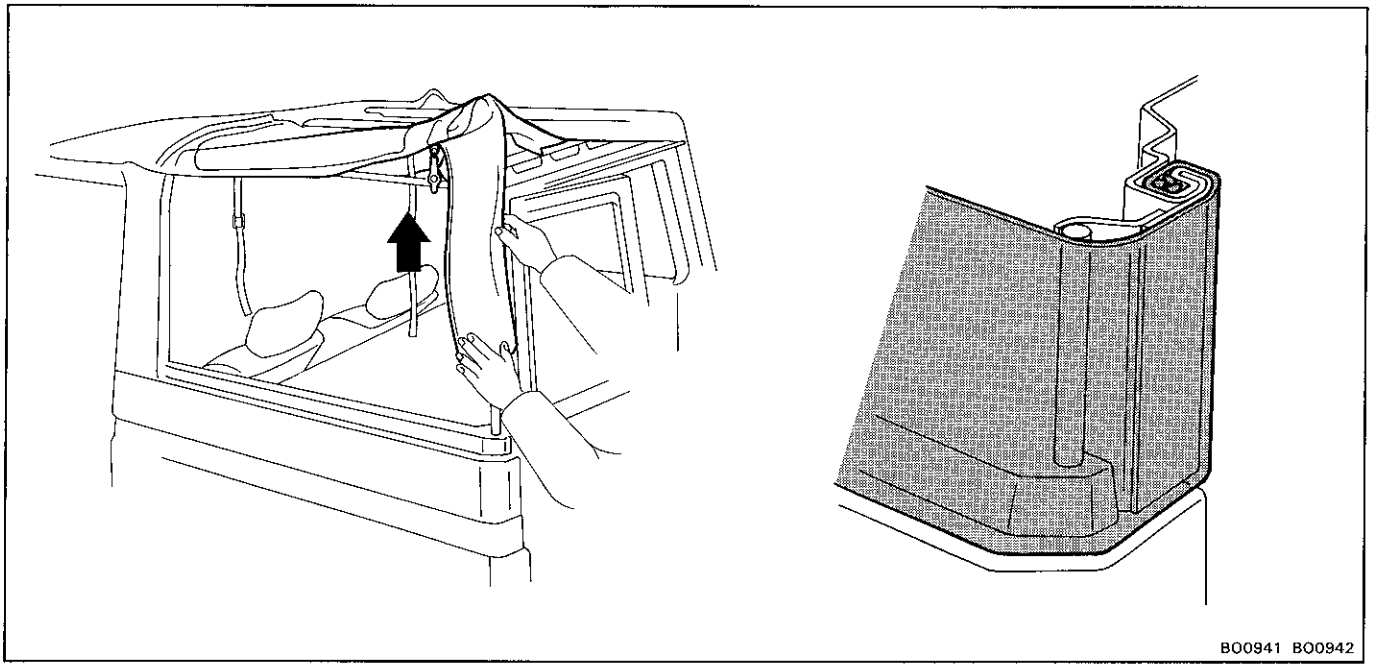


BO0941 BO0942

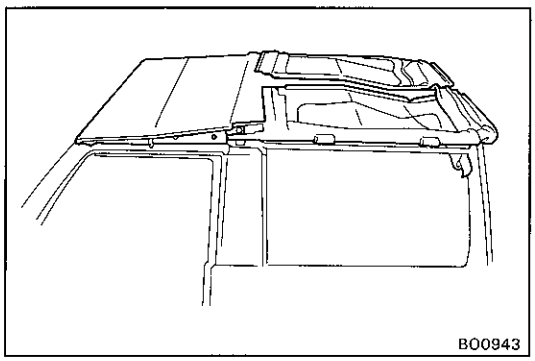


BO0943

12. FLIP UP SIDEWALL ONTO ROOF, ABOVE CARGO COMPARTMENT

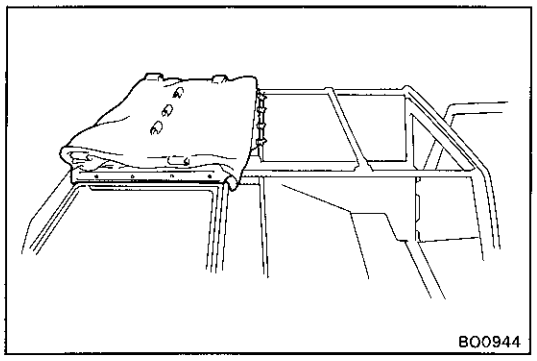

BO0944


13. FLIP FOLDED BACK HALF OF TARPAULIN ONTO ROOF ABOVE DRIVER'S COMPARTMENT

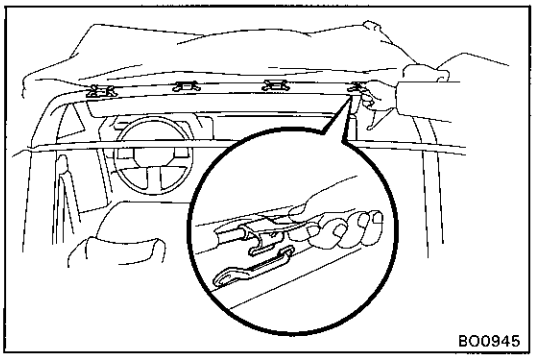

BO0945

14. DISCONNECT FOUR CLIPS ABOVE BACK SIDE OF ROLL BAR

15. **SLIDE WHOLE TARPAULIN TO EITHER VEHICLE RIGHT OR LEFT TO FREE FRONT WATER SEAL AND REMOVE TARPAULIN**

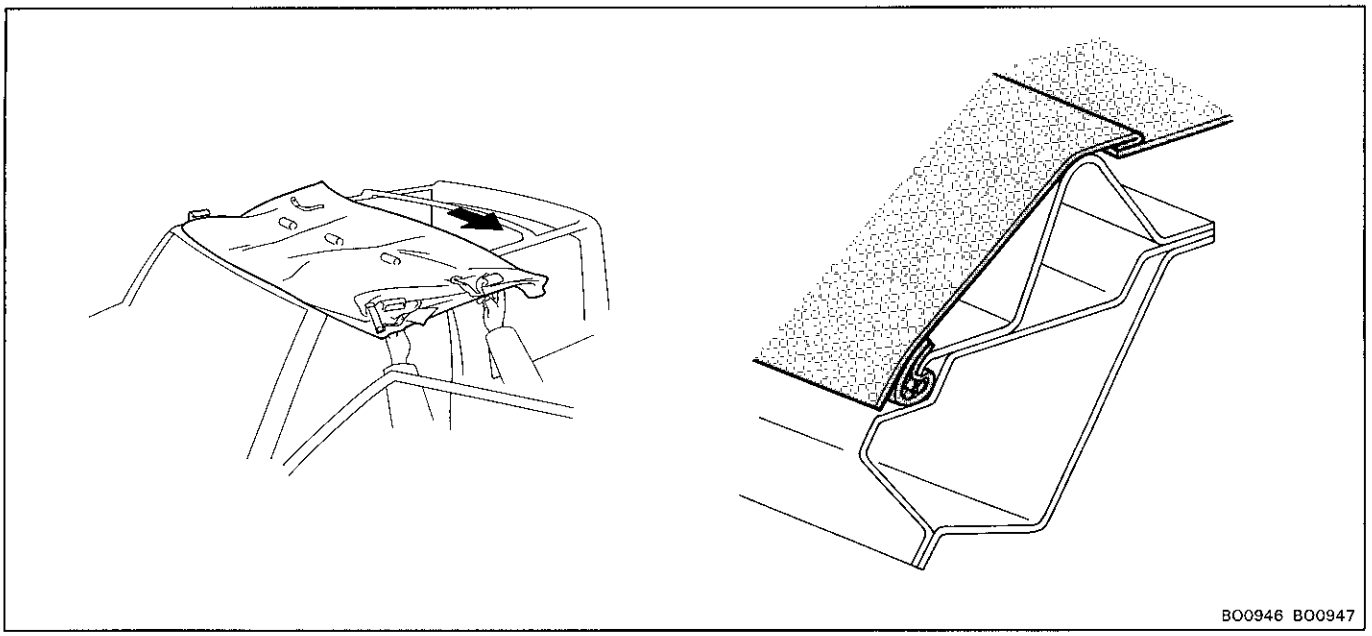

BO0946 BO0947

INSTALLATION OF TARPAULIN

INSTALL TARPAULIN IN REVERSE SEQUENCE OF REMOVAL

HINT: Before installing the tarpaulin, adjust the positioning of the front and back doors.