


CLUTCH RELEASE CYLINDER

COMPONENTS

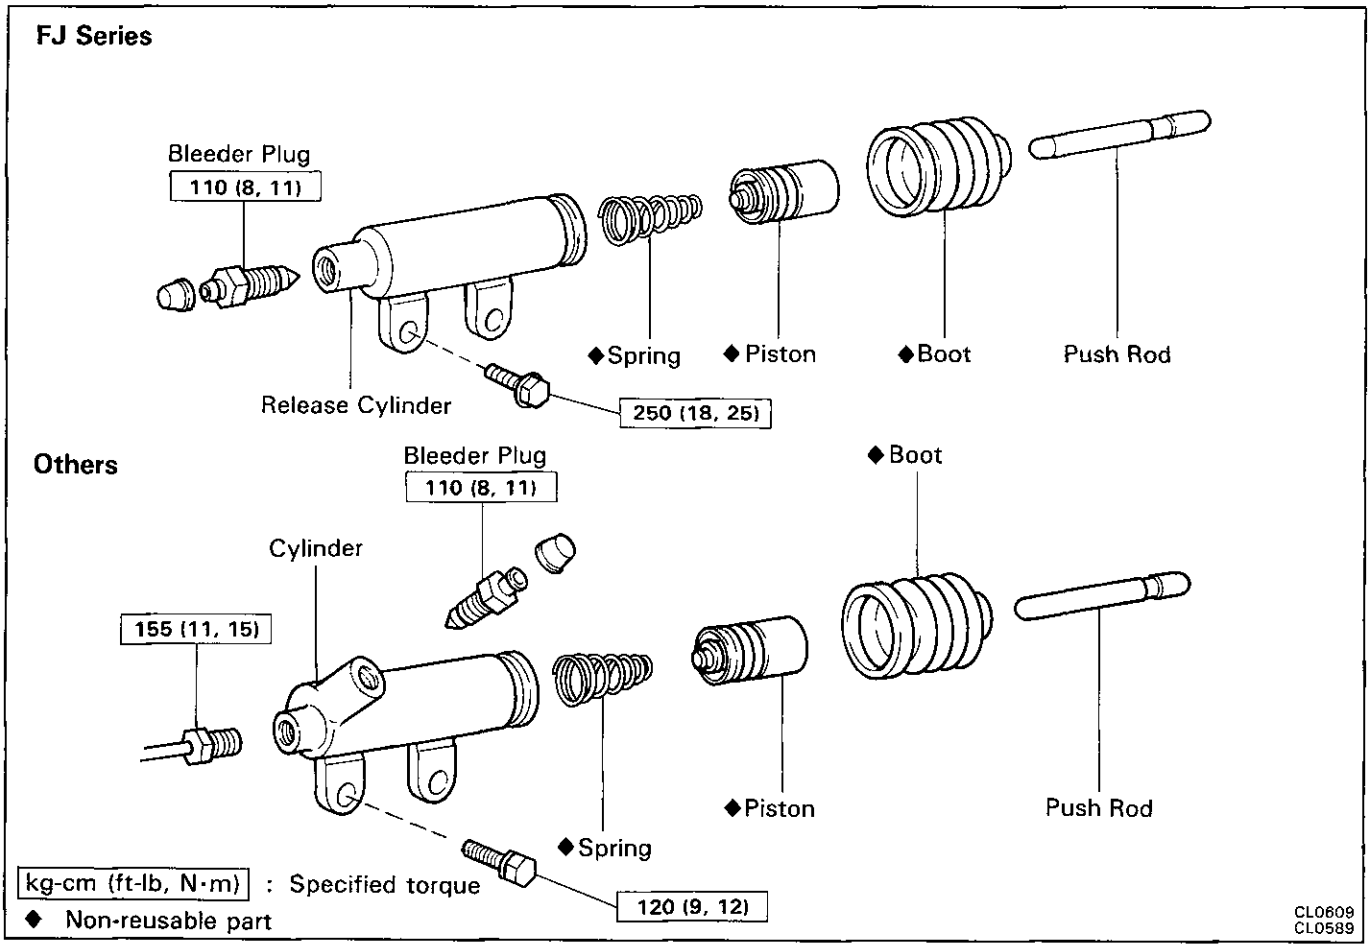

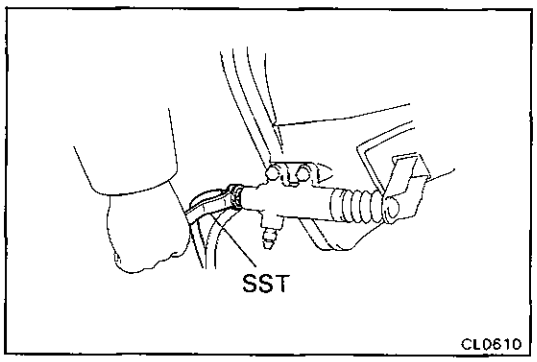

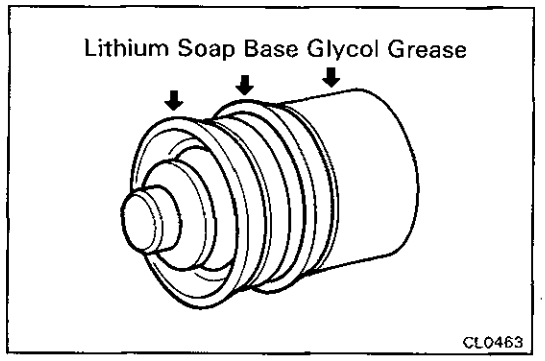

REMOVAL AND INSTALLATION OF CLUTCH RELEASE CYLINDER

(MAIN POINT OF REMOVAL AND INSTALLATION)

1. **DISCONNECT AND CONNECT CLUTCH LINE TUBE**
   Using SST, disconnect and connect the tube.
   SST 09751-36011

2. **INSPECT RELEASE CYLINDER BORE FOR SCORING OR CORROSION**
   If a problem is found, clean or replace the cylinder.

3. **INSPECT PISTON AND CUPS FOR WEAR, SCORING, CRACKS OR SWELLING**
   If either one requires replacement, use the parts from the cylinder kit.

4. **INSPECT PUSH ROD FOR WEAR OR DAMAGE**
   If necessary, replace the push rod.

5. **COAT PISTON WITH LITHIUM SOAP BASE GLYCOL GREASE AS SHOWN**

6. **BLEED CLUTCH SYSTEM**
   (See page CL-5)