

Front Bearing Retainer

COMPONENT

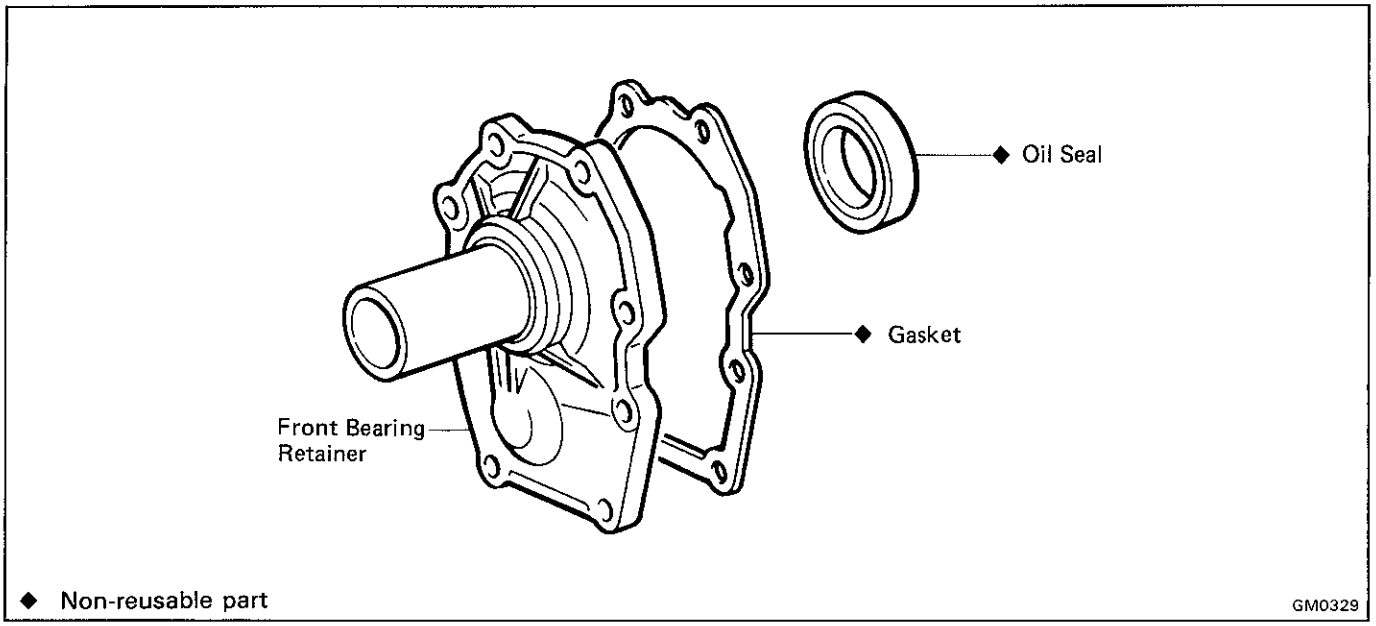


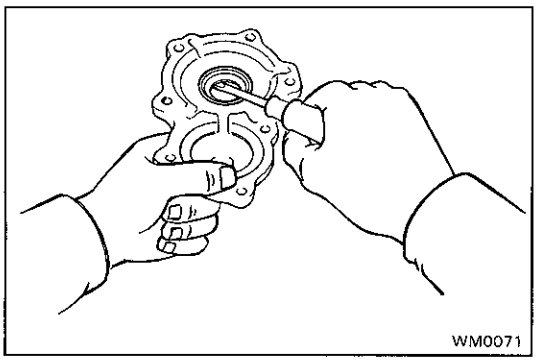

REPLACEMENT OF OIL SEAL

IF NECESSARY, REPLACE FRONT BEARING RETAINER OIL SEAL

(a) Using a screwdriver, pry out the oil seal.

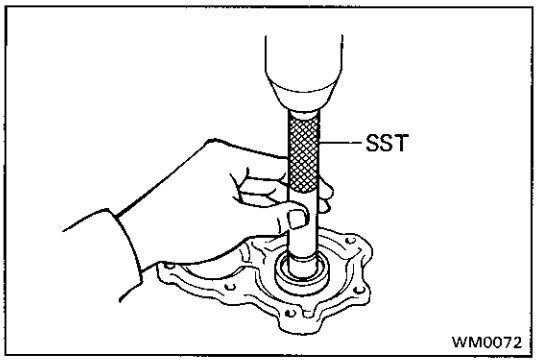

(b) Using SST, press in a new oil seal.

SST 09223-50010

Oil seal drive in depth:

12.2 — 13.2 mm (0.480 — 0.520 in.)

Transmission case installation surface