INSPECTION OF DIFFERENTIAL CARRIER
(See pages SA-61, 62)


DISASSEMBLY OF DIFFERENTIAL CARRIER
(See pages SA-63 to 68 and 130)

INSPECTION AND REPLACEMENT OF DIFFERENTIAL COMPONENTS
(See page SA-68)

ASSEMBLY OF DIFFERENTIAL CARRIER
(See pages SA-69 to 81 and 130)

Differential Case (4 Pinion Type)

COMPONENTS (w/o DIFFERENTIAL LOCK)

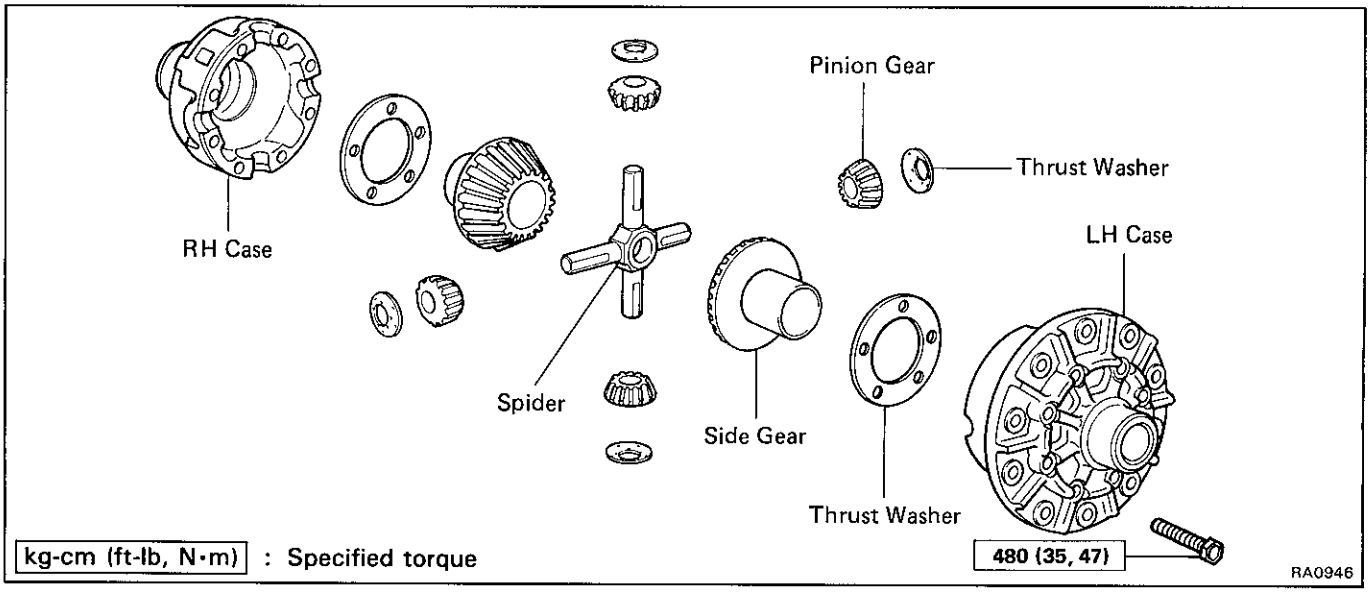

COMPONENTS (w/ DIFFERENTIAL LOCK)
(See page SA-84)

REMOVAL OF DIFFERENTIAL CASE

1. REMOVE DIFFERENTIAL (See page SA-127)
2. REMOVE DIFFERENTIAL CASE FROM CARRIER (See page SA-130)

DISASSEMBLY OF DIFFERENTIAL CASE
(See page SA-84)

ASSEMBLY OF DIFFERENTIAL CASE
(See page SA-85)

INSTALLATION OF DIFFERENTIAL

1. INSTALL DIFFERENTIAL CASE IN CARRIER (See page SA-130)
2. INSTALL DIFFERENTIAL (See page SA-127)