

Transfer Rear Case

COMPONENTS

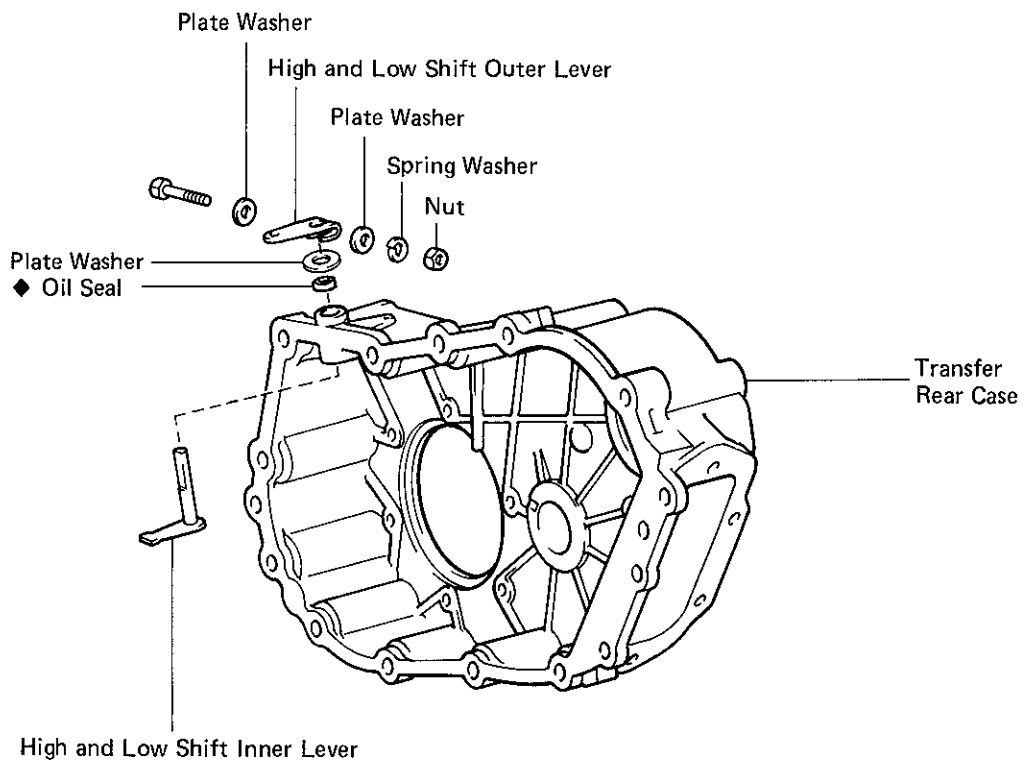

◆ Non-reusable part

TF0813

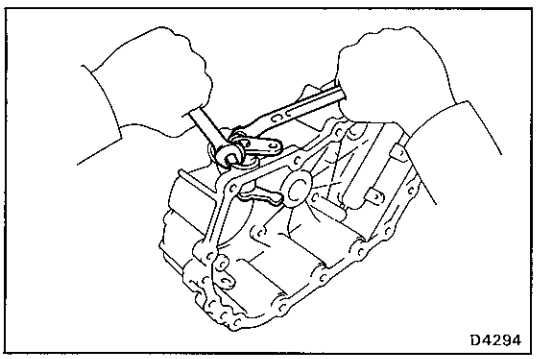


DISASSEMBLY OF TRANSFER REAR CASE

REMOVE OUTER AND INNER LEVERS OF TRANSFER HIGH AND LOW SHIFT

(a) Remove the nut, spring washer, two plate washers and bolt.

(b) Remove the shift outer lever and washer.


(c) Remove the shift inner lever.

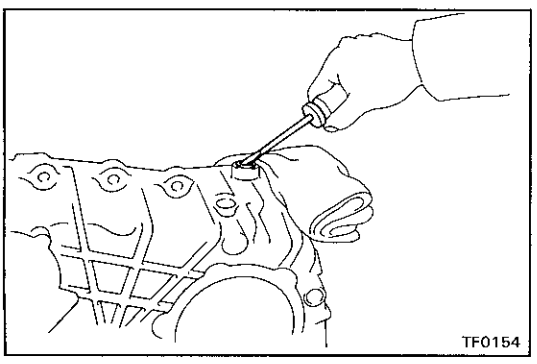

INSPECTION AND REPAIR OF TRANSFER REAR CASE

IF NECESSARY, REPLACE HIGH AND LOW SHIFT LEVER SHAFT OIL SEAL


(a) Using a screwdriver, remove the oil seal.

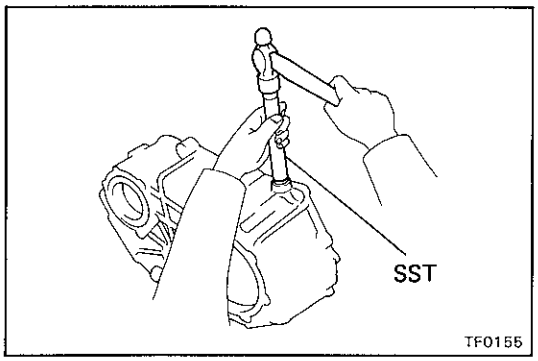

(b) Using SST and a hammer, tap in a new oil seal.

SST 09608-20012 (09608-03020)

(c) Apply MP grease to the oil seal lip.

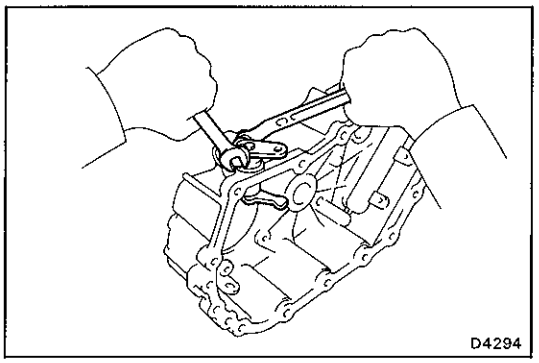

ASSEMBLY OF TRANSFER REAR CASE

INSTALL OUTER AND INNER LEVERS OF TRANSFER HIGH AND LOW SHIFT

(a) Install the shift inner lever.

(b) Install the washer and shift outer lever.

(c) Install the bolt, two plate washers, spring washer and nut.

HINT: Be carefull not to damage the oil seal lip.