
SYSTEM CIRCUIT

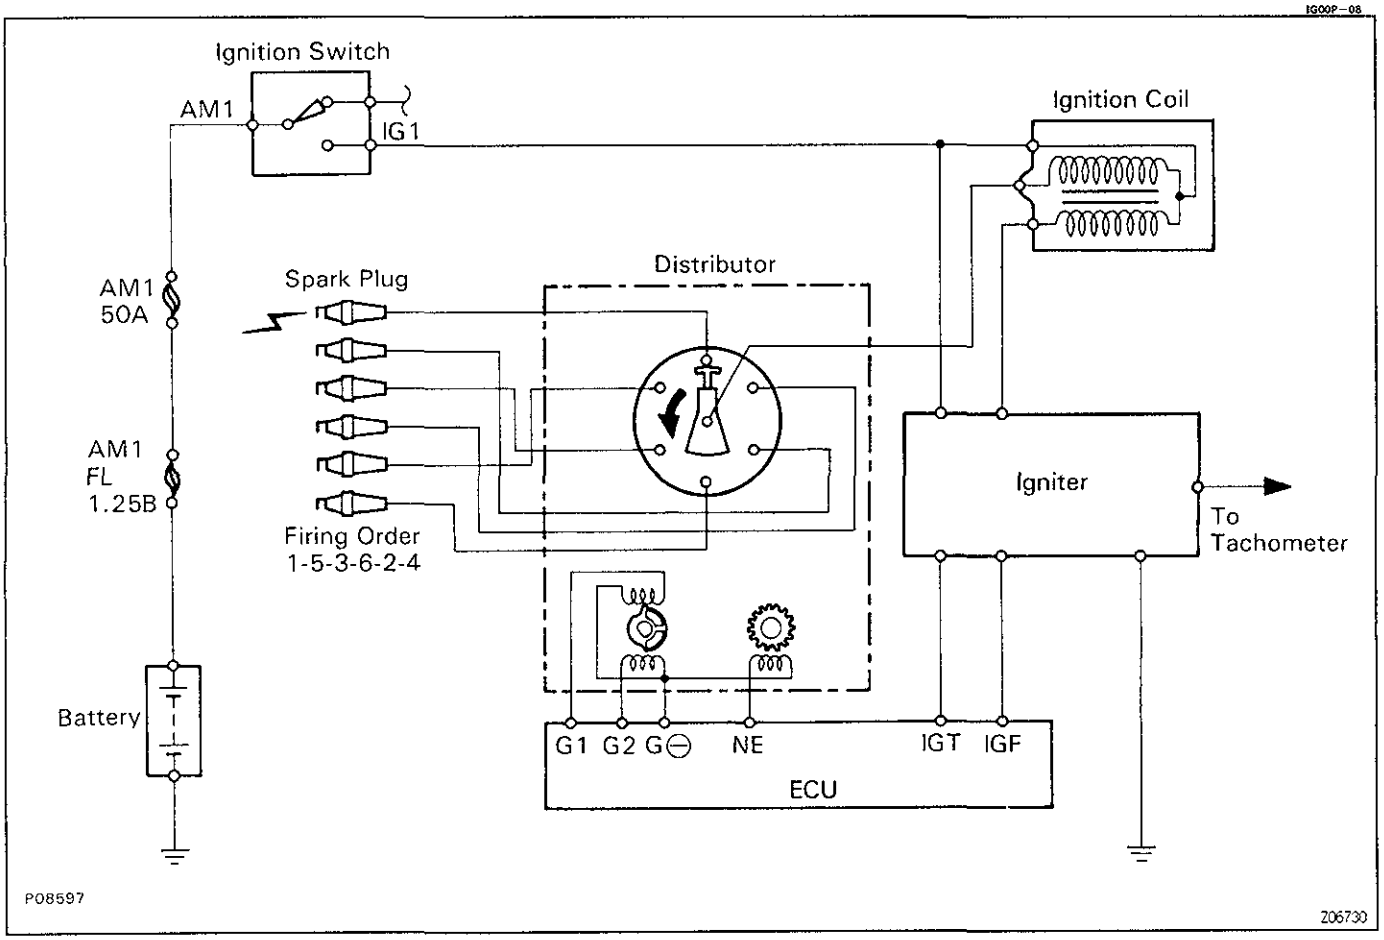

OPERATION

IG034–03

To maintain the most appropriate ignition timing, the ECU sends a control signal so that the igniter sends current to the ignition coil and the spark plugs produce a spark.