# EFI MAIN RELAY
## (Hardtop)
EG13W-01

## EFI MAIN RELAY INSPECTION

1. **REMOVE EFI MAIN RELAY**
   LOCATION: In the engine compartment on the left side.

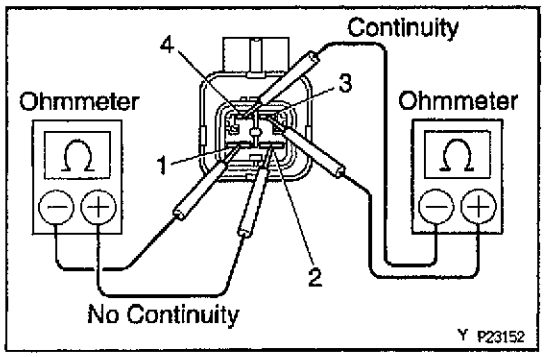


2. **INSPECT EFI MAIN RELAY**

**A. Inspect relay continuity**

(a) Using an ohmmeter, check that there is continuity between terminals 3 and 4.

(b) Check that there is no continuity between terminals 1 and 2.

If continuity is not as specified, replace the relay.

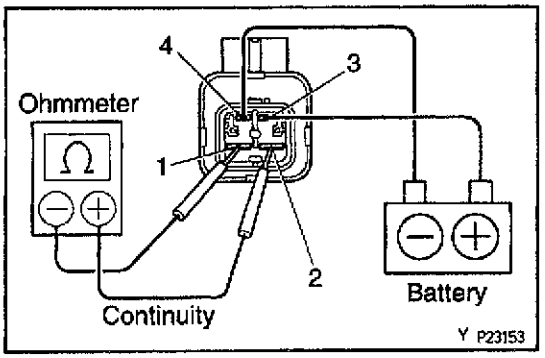


**B. Inspect relay operation**

(a) Apply battery voltage across terminals 3 and 4.

(b) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If operation is not as specified, replace the relay.

3. **REINSTALL EFI MAIN RELAY**