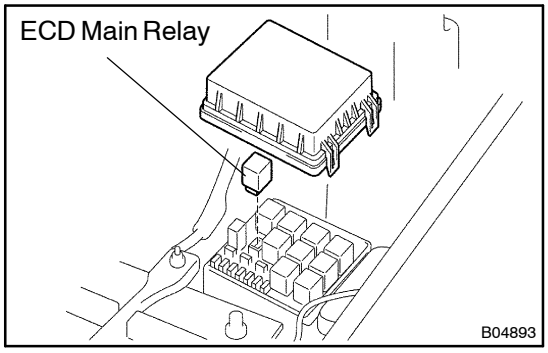



ECD MAIN RELAY

ED00J–02

INSPECTION

1. REMOVE RELAY BOX COVER

2. REMOVE ECD MAIN RELAY (Marking: ECD)

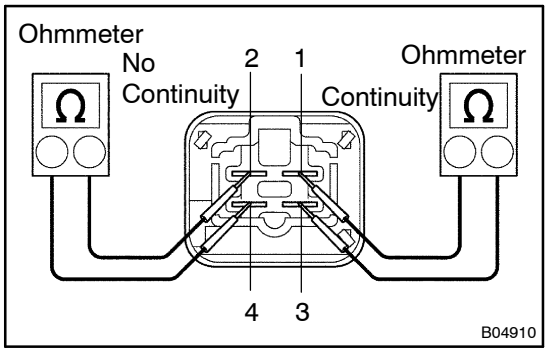

3. INSPECT ECD MAIN RELAY


(a) Inspect the relay continuity.

(1) Using an ohmmeter, check that there is continuity between terminals 1 and 3.

If there is no continuity, replace the relay.

(2) Check that there is no continuity between terminals 2 and 4.

If there is continuity, replace the relay.

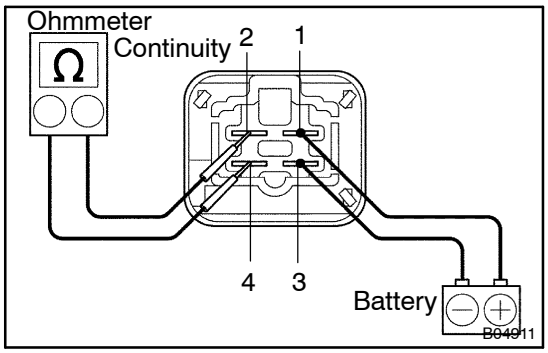

(b) Inspect the relay operation.

(1) Apply battery positive voltage across terminals 1 and 3.

(2) Using an ohmmeter, check that there is continuity between terminals 2 and 4.

If there is no continuity, replace the relay.

4. REINSTALL ECD MAIN RELAY

5. REINSTALL RELAY BOX COVER