
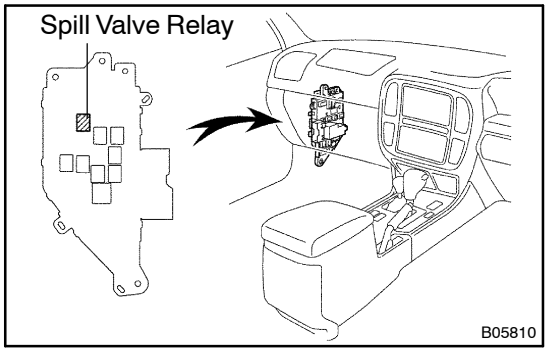


SPILL VALVE RELAY

ED021–01

INSPECTION

1. **REMOVE LH COWL SIDE R/B**
2. **REMOVE SPILL VALVE RELAY**

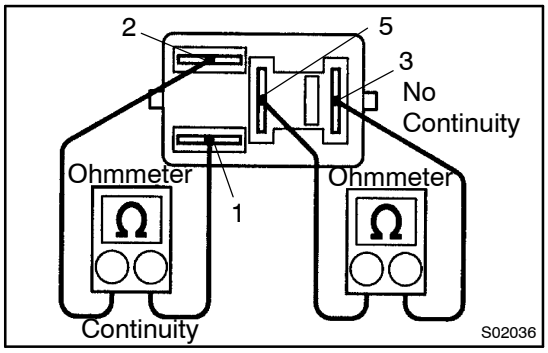


3. **INSPECT SPILL VALVE RELAY CONTINUITY**

(a) Using an ohmmeter, chick that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

(b) Check that there is no continuity between terminals 3 and 5.

If there is continuity, replace the relay.

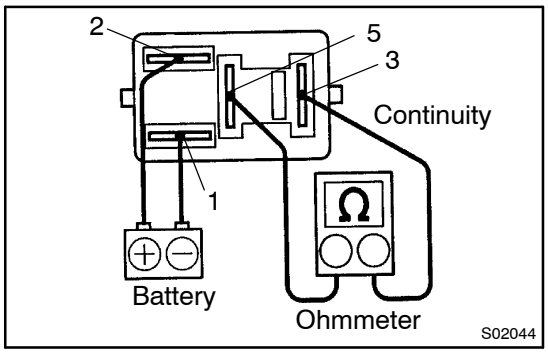

4. **INSPECT SPILL VALVE RELAY OPERATION**

(a) Apply battery positive voltage across terminals 1and 2.

(b) Using an ohmmeter, check that there is continuity between terminals 3 and 5.

If there is no continuity, replace the relay.

5. **REINSTALL SPILL VALVE RELAY**
6. **REINSTALL LH COWL SIDE R/B**