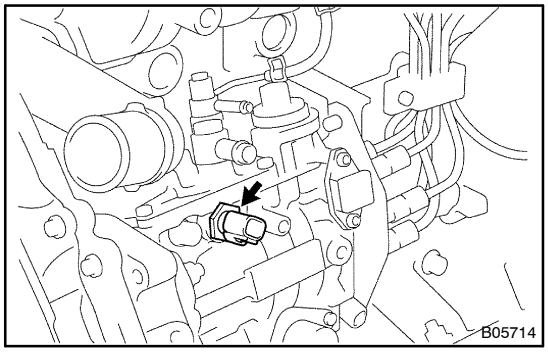


FUEL TEMPERATURE SENSOR

ED00N–02

INSPECTION

1. REMOVE FUEL TEMPERATURE SENSOR

(a) Disconnect the sensor connector.

(b) Using a 19 mm deep socket wrench, remove the sensor and gasket.

2. INSPECT FUEL TEMPERATURE SENSOR

(See page ED–5)

3. REINSTALL FUEL TEMPERATURE SENSOR

(a) Using a 19 mm deep socket wrench, install a new gasket and the sensor.

Torque: 21.6 N·m (220 kgf·cm, 16.5 ft·lbf)

(b) Connect the sensor connector.