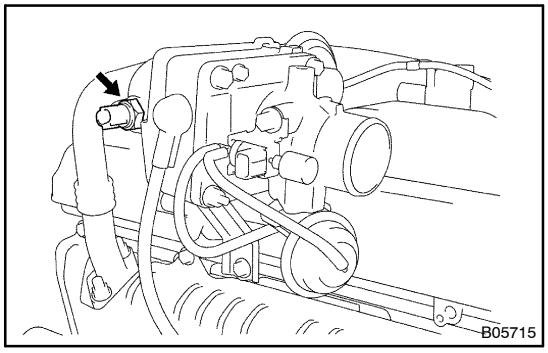


INTAKE AIR TEMPERATURE SENSOR

INSPECTION

ED00O–02

1. REMOVE INTAKE AIR TEMPERATURE SENSOR

(a) Disconnect the sensor connector.

(b) Using a 22 mm deep socket wrench, remove the intake air temperature sensor.

2. INSPECT INTAKE AIR TEMPERATURE SENSOR
(See page ED–5)

3. REINSTALL INTAKE AIR TEMPERATURE SENSOR

(a) Using a 21 mm deep socket wrench, install a new gasket and the sensor.
Torque: 29 N·m (300 kgf·cm, 21 ft·lbf)

(b) Connect the sensor connector.