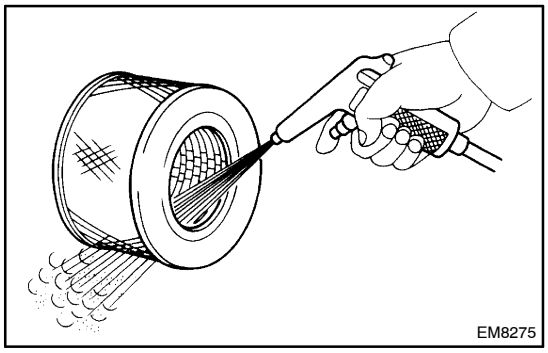
AIR FILTER

EM0VY–01

ON–VEHICLE CLEANING

1. PAPER FILTER TYPE:

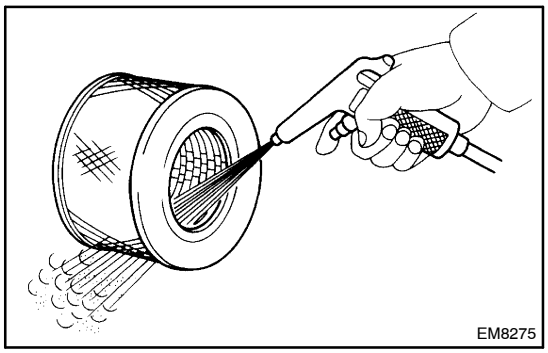
(a) Remove air filter


EM8275

(b) Inspect air filter
Visually check that the filter element is not excessively dirty, damaged or oily.

(c) Clean air filter
Clean the filter element with compressed air.
First blow from the inside thoroughly. Then blow off the outside of the filter element.

(d) Reinstall air filter


EM8275

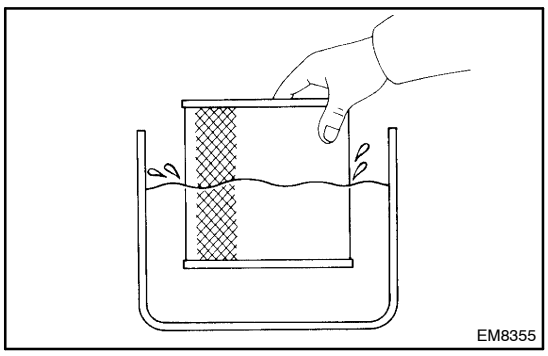
2. WASHABLE TYPE:

(a) Remove air filter

(b) Inspect air filter
Visually check that the filter element is not excessively dirty, damaged or oily.

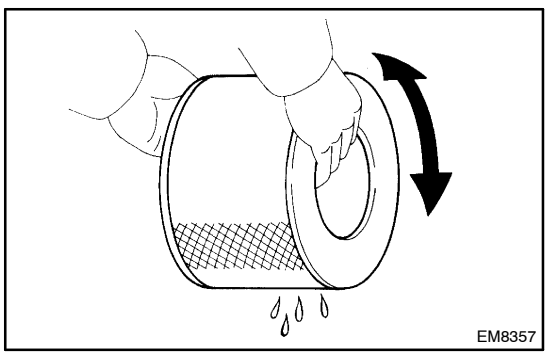
(c) Clean air filter

(1) Blow dirt off in the filter element with compressed air.


EM8355

(2) Submerge the filter element in the water and agitate it up and down more than 10 times.

(3) Repeat ringing in clean water until rinsing water is clear.


EM8357

(4) Remove excess water by shaking the filter element or blowing with compressed air.

NOTICE:

Do not beat or drop filter element.

(5) Wipe off dust on the air cleaner case interior.

(d) Reinstall air filter