
EM0WA–01

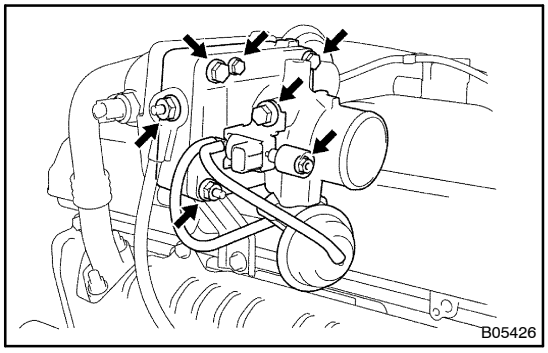

REMOVAL

1. DISCONNECT INTAKE HEATER WIRE

2. REMOVE VSV FOR INTAKE SHUTTER

(a) Disconnect the 2 vacuum hoses from the cylinder head cover and actuator

(b) Remove the bolt and VSV.

3. REMOVE INTAKE SHUTTER AND INTAKE HEATER

Remove the 3 bolts , 2 nuts, intake shutter,intake heater and 2 gasket.