
EM0WB–01

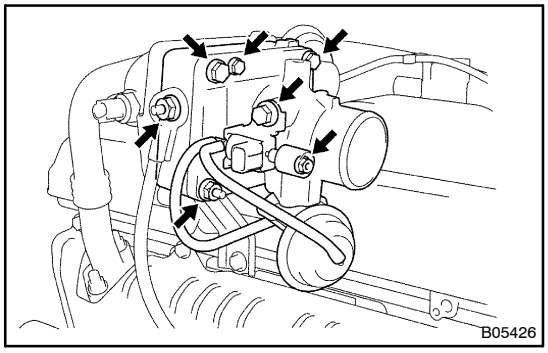

INSTALLATION

1. INSTALL INTAKE HEATER AND INTAKE SHUTTER

(a) Place 2 new gaskets, the intake heater and intake shutter.

(b) Install the 2 bolts and 2 nuts.

Torque:19.6 N·m (200 kgf·cm, 14 ft·lbf)

2. CONNECT INTAKE HEATER WIRE

3. INSTALL VSV FOR INTAKE SHUTTER

(a) Install the VSV with the bolt.

(b) Connect the 2 vacuum hoses to the cylinder head cover and actuator