
EM0WU–01


DISASSEMBLY

1. REMOVE WATER SENDER GAUGE

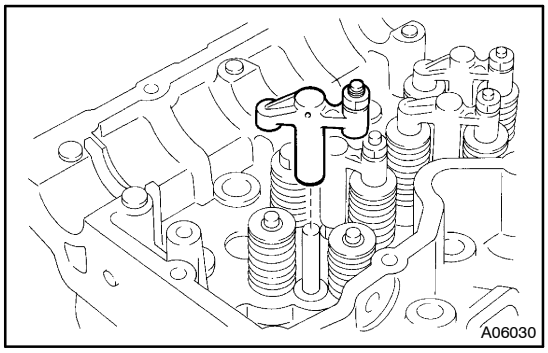

2. REMOVE VALVE BRIDGE

HINT:
Arrange the valve bridge in correct order.

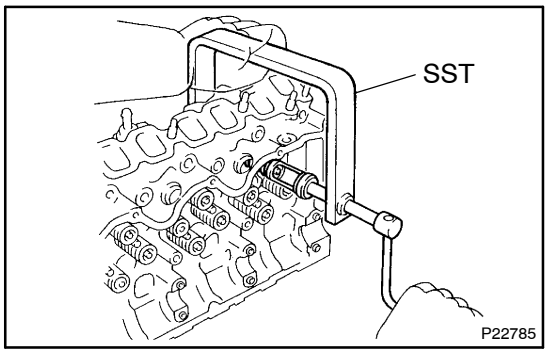


3. REMOVE VALVES

(a) Using SST, compress the valve spring and remove the 2 keepers.
SST 09202–70020 (09202–00010)

(b) Remove the spring retainer, valve spring, valve and spring seat.

HINT:
Arrange the valves, valve spring, valve springs, spring seats and spring retainers in correct order.

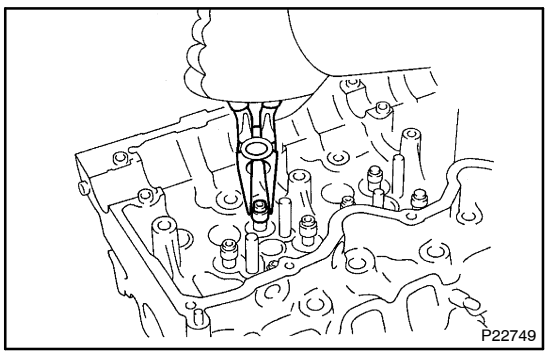

(c) Using needle–nose pliers, remove the oil seal.