
EM0X2–01

REPLACEMENT

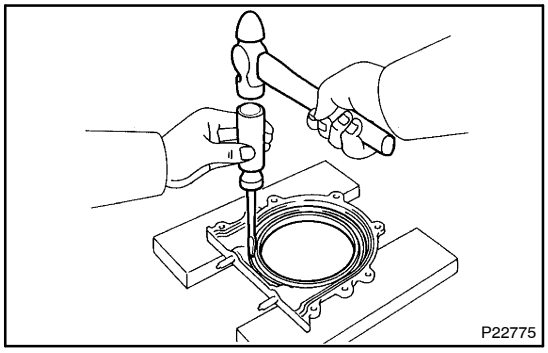


HINT:

There are 2 methods (a and b) to replace the oil seal which are as follows:

REPLACE CRANKSHAFT REAR OIL SEAL

(a) If rear oil seal retainer is removed from cylinder block:


(1) Using a screwdriver and hammer, tap out the oil seal.

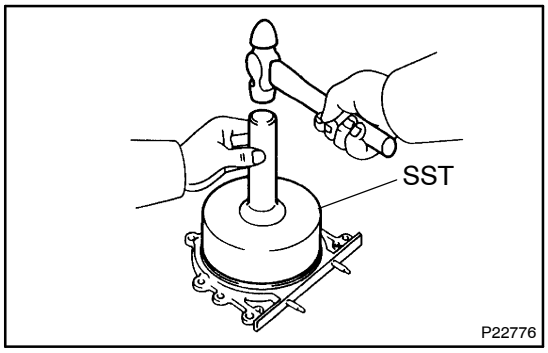

(2) Using SST and a hammer, tap in a new oil seal until its surface is flush with the rear oil seal retainer edge.

SST 09223–56010

(3) Apply MP grease to the oil seal lip.

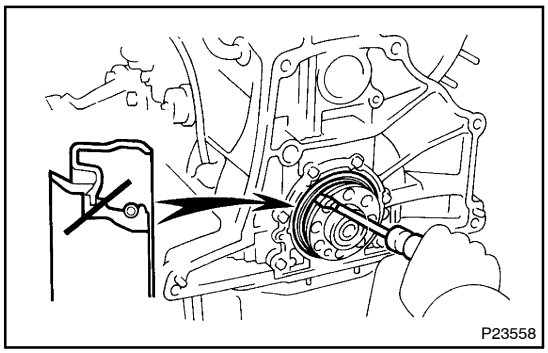


(b) If rear oil seal retainer is installed to cylinder block:

(1) Using a knife, cut off the oil seal lip.

(2) Using a screwdriver, pry out the oil seal.

NOTICE:

Be careful not to damage the crankshaft. Tape the screwdriver tip.

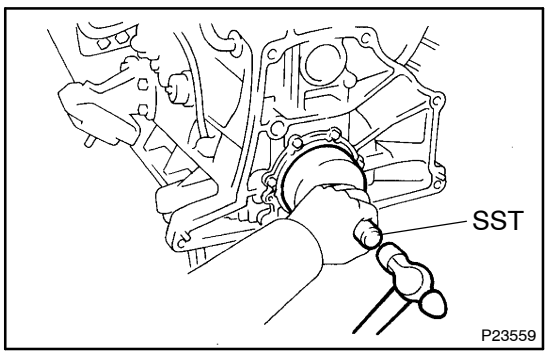

(3) Apply MP grease to a new oil seal lip.

(4) Using SST and a hammer, tap in the oil seal until its surface is lush with the rear oil seal retainer edge.

SST 09223–56010