FUEL DAMPER

FU04X–01

REPLACEMENT

1. **DRAIN FUEL FILTER AND DAMPER**
(See page FU–1)

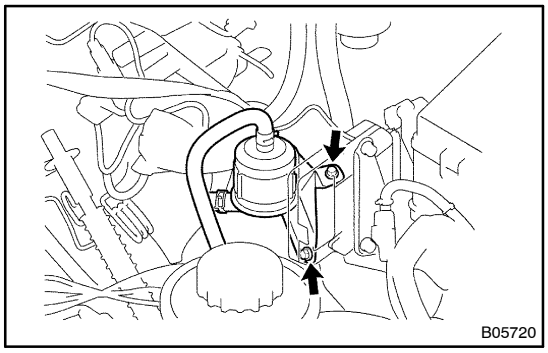

2. **REPLACE FUEL DAMPER**

(a) Remove the fuel damper.

(1) Disconnect the 2 fuel hoses.

(2) Remove the 2 bolts and fuel damper.

(b) Install the fuel damper.

(1) Install the fuel damper with the 2 bolts.

Torque: 7.5 N·m (80 kgf·cm, 66 in.·lbf)

(2) Connect the 2 fuel hoses.

3. **FILL FUEL FILTER AND DAMPER WITH FUEL**
(See page FU–1)