LU0F1–01

REMOVAL

1. REMOVE OIL PAN (See page LU–9)

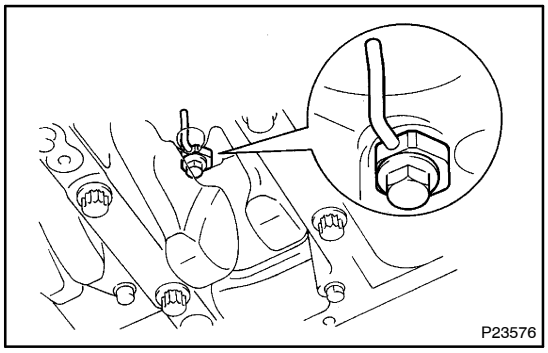

2. REMOVE CHECK VALVE AND OIL NOZZLE

Remove the 6 check valves and 6 oil nozzle.