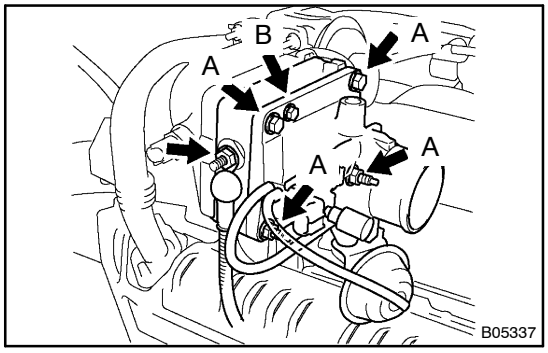

ST0F6–01

REPLACEMENT

INSTALL INTAKE HEATER AND DIESEL THROTTLE

(a) Install the 2 gaskets and the intake heater.

(b) Install the diesel throttle with the 3 bolts and 2 nuts.

Torque:

A: 19.6 N·m (200 kgf·cm, 14 ft·lbf)

B: 7.5 N·m (75 kgf·cm, 66 in.·lbf)

(c) Connect the VSV hose to the head cover.

(d) Connect the lead wire to the intake heater.