
BO303–01

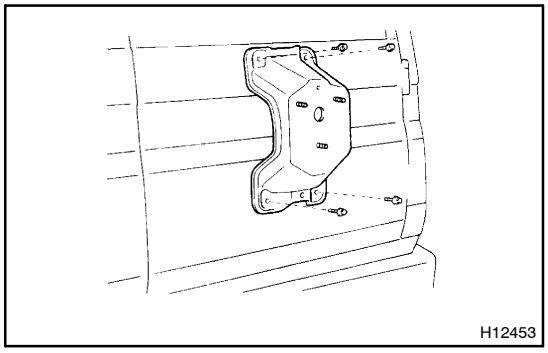


DISASSEMBLY

1. REMOVE SPARE WHEEL

2. REMOVE SPARE WHEEL CARRIER

Remove 4 bolts and spare wheel carrier.

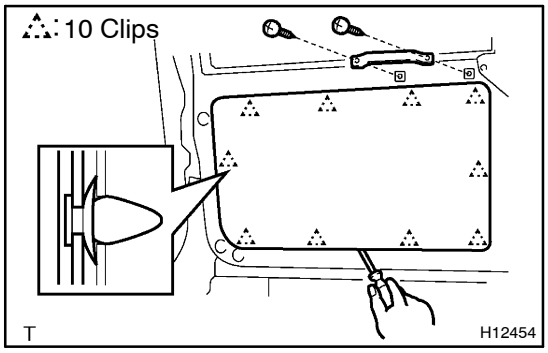

3. REMOVE PULL HANDLE

Remove 2 screws and the pull handle.

4. REMOVE DOOR TRIM

(a) Insert the screwdriver between the door and the door trim to pry out.

HINT:


Tape the screwdriver tip before use.

(b) Remove the door trim.

5. REMOVE SERVICE HOLE COVER

NOTICE:

Do not tear the service hole cover.

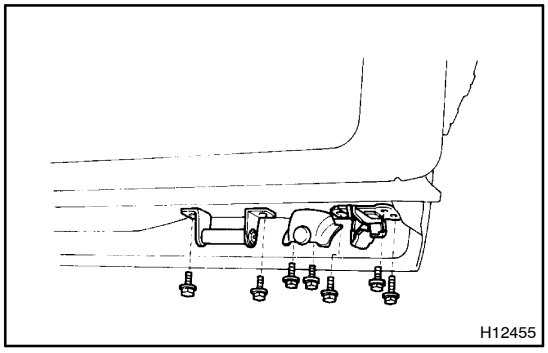

6. REMOVE DOOR STOPPER

Remove 2 bolts and the door stopper.


7. REMOVE DOOR STOPPER BRACKET

Remove 2 bolts and the door stopper bracket.

8. REMOVE LOWER DOOR LOCK


(a) Disconnect the link from the lower door lock control.

(b) Remove 3 bolts and the lower door lock.

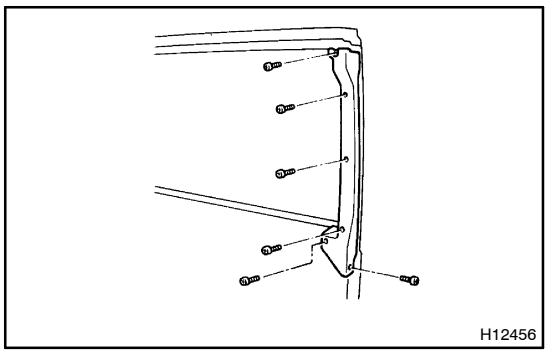


9. w/o Canvas top:
REMOVE LINK COVER

Remove 6 screws and the link cover.

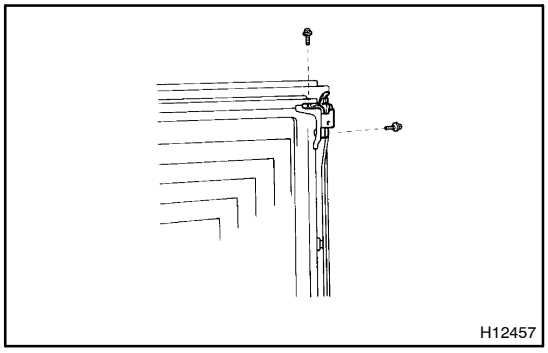

10. w/o Canvas top:
REMOVE UPPER DOOR LOCK

(a) Disconnect the link from the upper door lock control.
(b) Remove 2 bolts and the upper door lock.

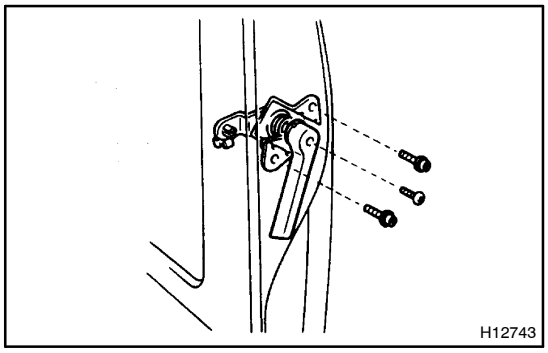

11. REMOVE DOOR LOCK CONTROL

(a) Remove the screw and the inside handle.
(b) Remove the screws and the door lock control.