

BR055–03

REMOVAL

1. REMOVE FRONT WHEEL
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)

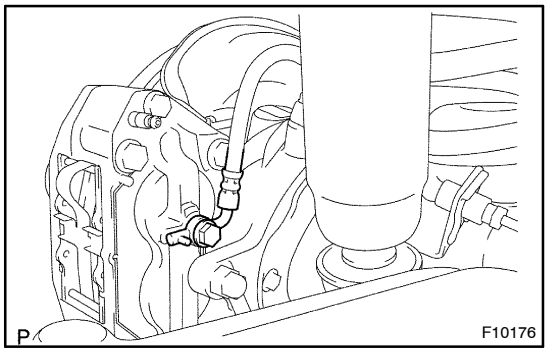

2. DISCONNECT FLEXIBLE HOSE
Remove the union bolt and 2 gaskets from the caliper, then disconnect the flexible hose from the caliper.
Torque: 30 N·m (310 kgf·cm, 22 ft·lbf)
HINT:
At the time of installation, install the flexible hose lock securely in the lock hole in the caliper.

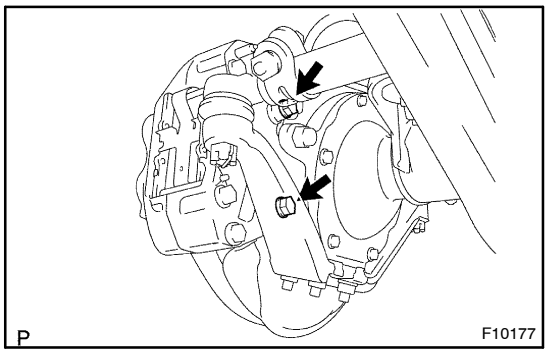

3. REMOVE CALIPER
Remove the 2 mounting bolts and caliper.
Torque: 123 N·m (1,250 kgf·cm, 90 ft·lbf)

4. REMOVE CLIP, 2 PINS AND ANTI–RATTLE SPRING

5. REMOVE 2 PADS WITH 4 ANTI–SQUEAL SHIMS