

MT056–03

REPLACEMENT

IF NECESSARY, REPLACE FRONT BEARING RETAINER OIL SEAL

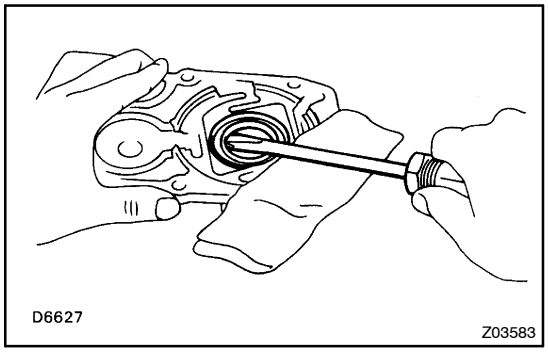

(a) Using a screwdriver, pry out the oil seal.

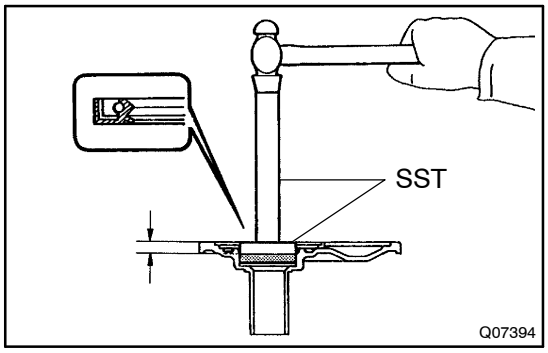

(b) Using SST and a hammer, drive in a new oil seal.
SST 09950–60010 (09951–00510), 09950–70010 (09951–07150)
Drive in depth:
11.7 ± 0.5 mm (0.461 ± 0.020 in.) from retainer end

(c) Coat the oil seal lip with MP grease.