









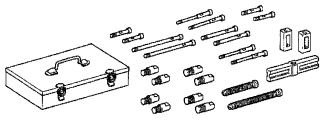







MANUAL TRANSMISSION (R151F)

PP2HB–01

SST (Special Service Tools)

	09316–60011	Transmission & Transfer Bearing Replacer	
	(09316–00011)	Replacer Pipe	Output shaft rear bearing Gear spline piece No. 5 Output shaft center bearing
	(09316–00031)	Replacer ”B”	5th gear
	(09316–00071)	Replacer ”F”	Output shaft rear bearing Output shaft center bearing
	09506–35010	Differential Drive Pinion Rear Bearing Replacer	Input shaft bearing
	09950–00020	Bearing Remover	Counter gear front bearing
	09950–40011	Puller B Set	Output shaft rear bearing
	(09951–04010)	Hanger 150	
	(09952–04010)	Slide Arm	
	(09953–04020)	Center Bolt 150	
	(09954–04010)	Arm 25	
	(09955–04061)	Claw No.6	

	(09958–04011)	Holder	
	09950–50012	Puller C Set	Gear spline piece No.5
	(09951–05010)	Hanger 150	
	(09952–05010)	Slide Arm	
	(09953–05020)	Center Bolt 150	
	(09954–05020)	Claw No.2	
	09950–60010	Replacer Set	
	(09951–00510)	Replacer 51	Front bearing retainer oil seal
	(09951–00620)	Replacer 62	Counter gear rear bearing
	09950–70010	Handle Set	
	(09951–07150)	Handle 150	