SA1AA–02

REMOVAL

1. REMOVE FREE WHEEL HUB COVER

(a) Set the control handle to FREE.

(b) Remove the 6 bolts and pull off the free wheel hub cover.

(c) Remove the gasket.

2. REMOVE SNAP RING

Using a snap ring expander, remove the snap ring.

3. REMOVE FREE WHEEL HUB BODY

(a) Remove the 6 nuts and washers.

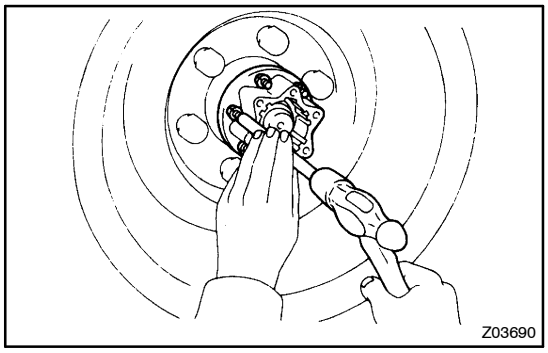

(b) Using a brass bar and hammer, tap on the bolt heads and remove the 6 cone washers.

(c) Pull off the free wheel hub body.

(d) Remove the gasket.