
FRONT WHEEL HUB BOLT

SA1AD–02


REPLACEMENT

1. **REMOVE FRONT AXLE HUB (See page SA–6)**

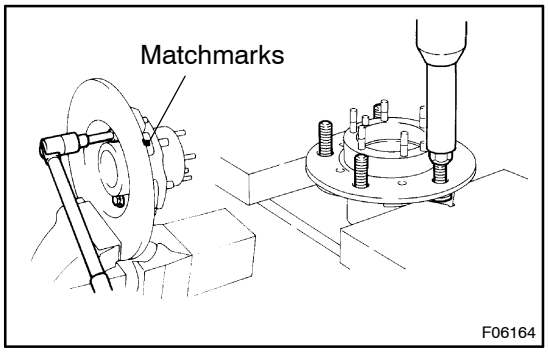

2. **REPLACE HUB BOLTS**

(a) Place matchmarks on the axle hub and disc.
(b) Remove the 5 bolts and disc from the axle hub.
(c) Install the nut to the hub bolt.
(d) Using an extension bar and press, remove the hub bolt.

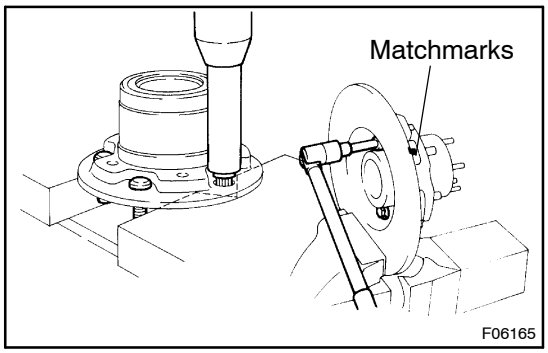

(e) Using an extension bar and press, install a new hub bolt.
(f) Align the matchmarks on the axle hub and disc.
(g) Install and torque the 5 bolts.

Torque: 74 N·m (750 kgf·cm, 55 ft·lbf)

3. **INSTALL FRONT AXLE HUB (See page SA–9)**