SA1AG–01

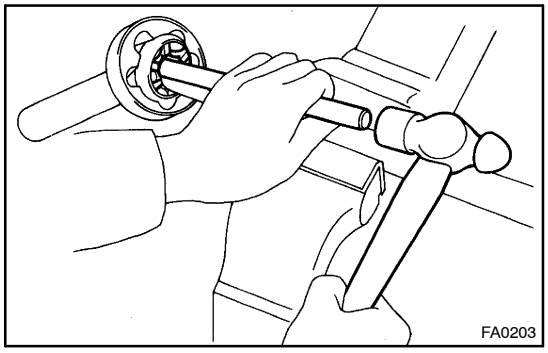


# DISASSEMBLY

## REMOVE OUTER SHAFT

(a) Hold the inner shaft in a vise.

(b) Place a brass bar against the joint inner race and remove the outer shaft.

HINT:

When removing the outer shaft, the snap ring will be broken.