
SA1QM–01

REMOVAL

1. DRAIN HYPOID GEAR OIL
Torque: 49 N·m (500 kgf·cm, 36 ft·lbf)

2. REMOVE REAR AXLE SHAFTS
(See Pub. No. RM183E on page SA–118)

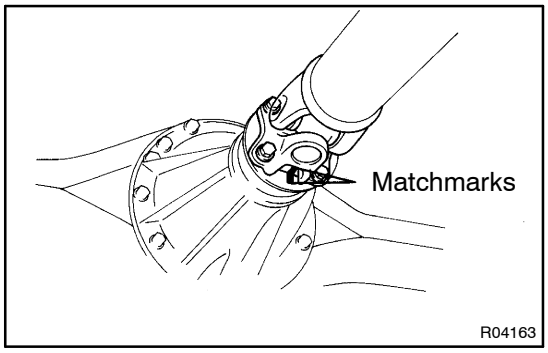


3. DISCONNECT REAR PROPELLER SHAFT

(a) Place matchmarks on the propeller shaft and differential flange.

(b) Remove the 4 nuts, washers, bolts and disconnect the propeller shaft.
Torque: 88 N·m (900 kgf·cm, 65 ft·lbf)

(c) Support the propeller shaft.

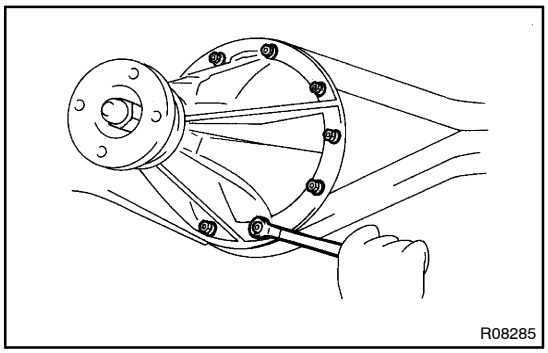

4. REMOVE DIFFERENTIAL CARRIER ASSEMBLY

(a) Remove the 10 nuts, washers and differential carrier assembly.
Torque: 72 N·m (740 kgf·cm, 53 ft·lbf)

NOTICE:
Be careful not to damage the installation surface.

(b) Remove the gasket.