

TR0AL–01

REPLACEMENT

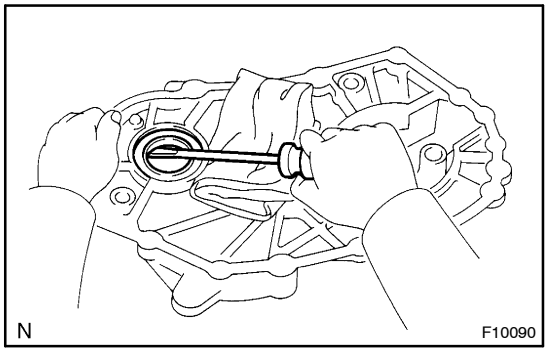


1. REPLACE TRANSMISSION REAR OIL SEAL

(a) Using a screwdriver, remove the oil seal.

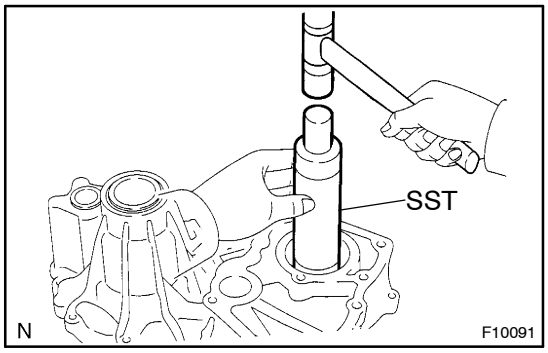


(b) Using SST and a hammer, tap in a new oil seal.
SST 09316–60011 (09316–00011, 09316–00021)

(c) Apply MP grease to the oil seal lip.

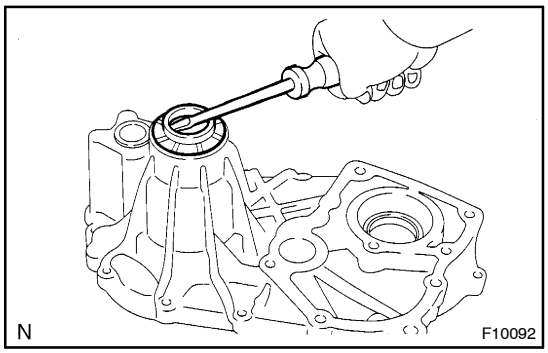


2. REPLACE FRONT OUTPUT SHAFT OIL SEAL

(a) Using a screwdriver, remove the oil seal.

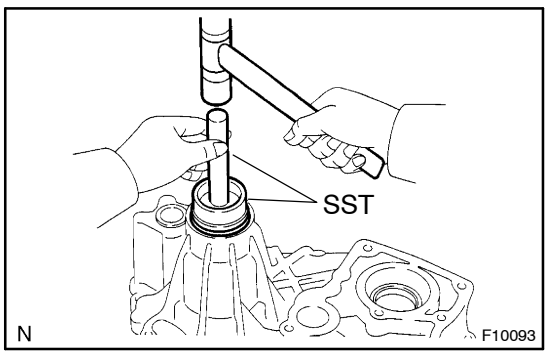


(b) Using SST and a hammer, tap in a new oil seal.
SST 09950–70010 (09951–07100), 09608–32010

(c) Apply MP grease to the oil seal lip.

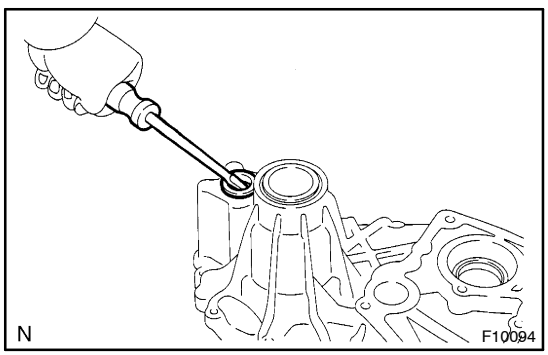


3. REPLACE FRONT DRIVE SHIFT FORK SHAFT OIL SEAL

(a) Using a screwdriver, remove the oil seal.

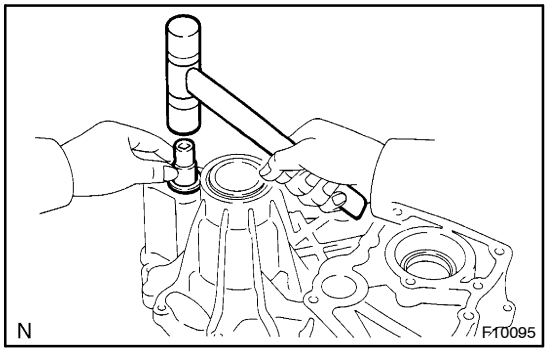


(b) Using a socket wrench (22 mm) and a plastic hammer, tap in a new oil seal.
(c) Apply MP grease to the oil seal lip.

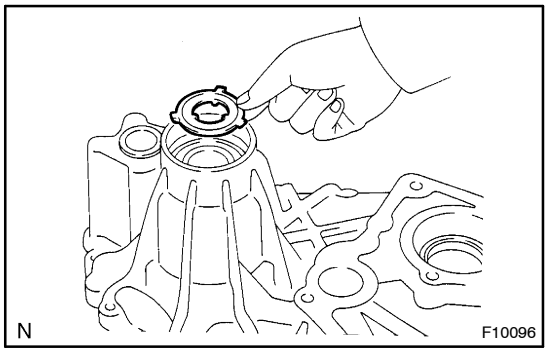


4. REPLACE FRONT OUTPUT SHAFT BEARING


(a) Remove the front output shaft oil seal.
(b) Remove the No. 2 oil receiver.

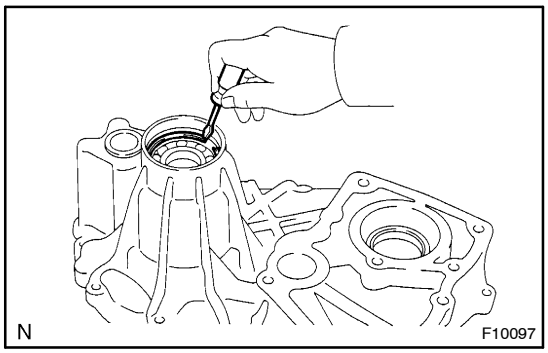


(c) Using a screwdriver, remove the snap ling.

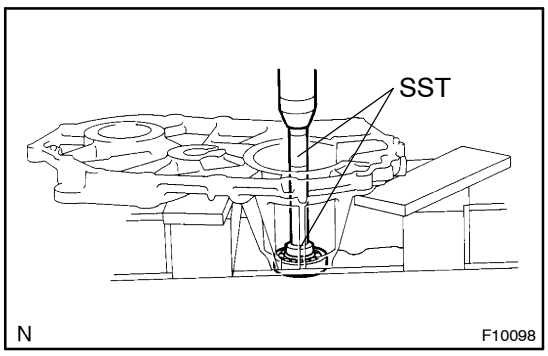


(d) Using SST and a press, press out the bearing.
SST 09950–60010 (09951–00400), 09950–70010 (09951–07150)

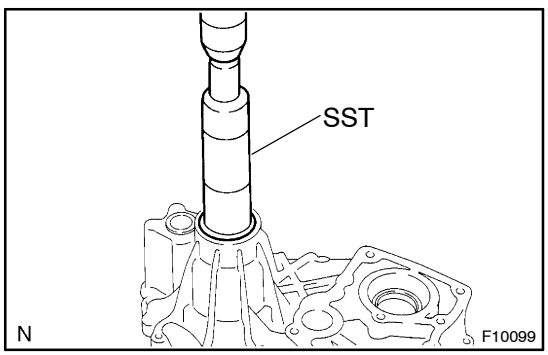

(e) Using SST and a press, press in a new bearing.
SST 09316–60011 (09316–00011, 09316–00021)

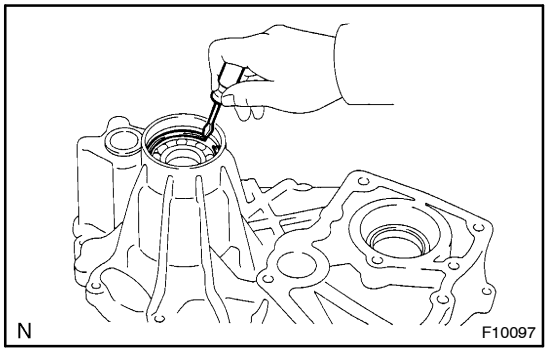

(f) Using a screwdriver, install the snap ring.

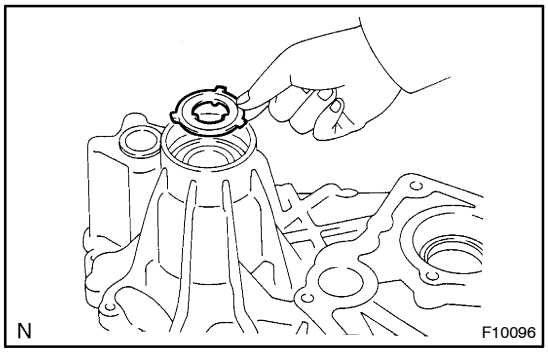

(g) Install the No. 2 oil receiver.
(h) Install a new front out put shaft oil seal.