
ENGINE

HOW TO PROCEED WITH TROUBLESHOOTING


DI1I4–09

When using the hand–held tester, make a troubleshooting in accordance with the procedure on the following page.

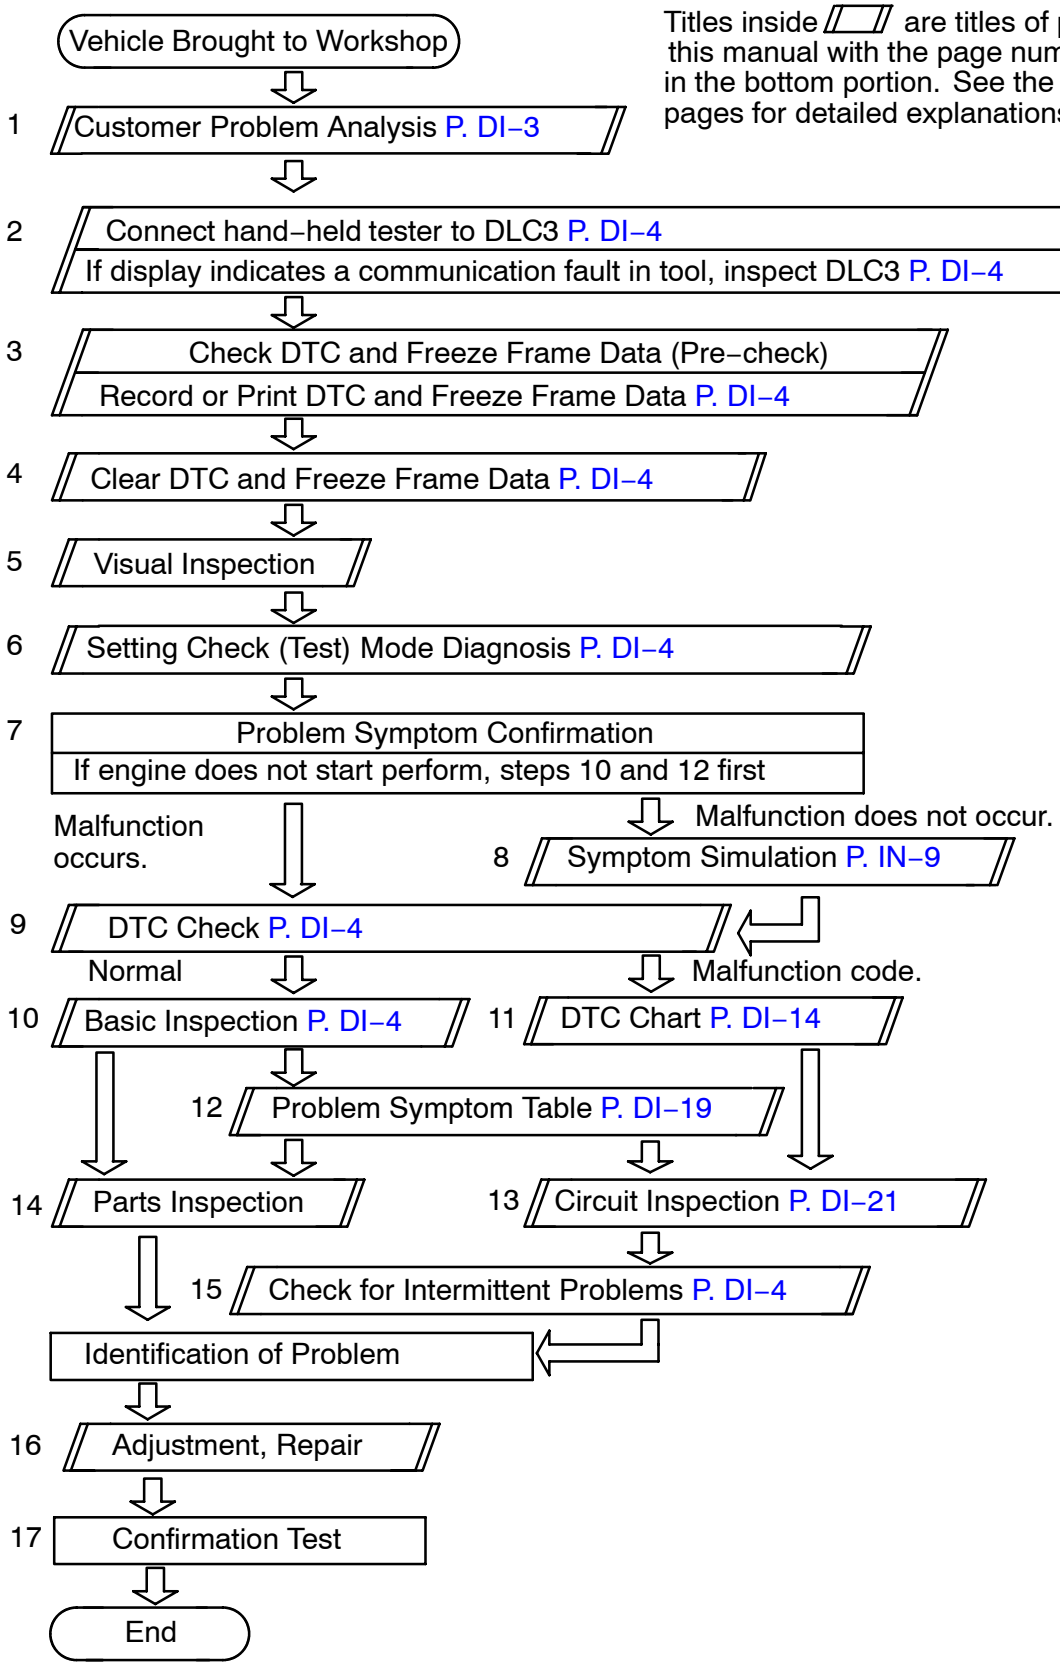

Titles inside ▱ are titles of pages in this manual with the page number indicated in the bottom portion. See the indicated pages for detailed explanations.

When not using the hand–held tester, make a troubleshooting in accordance with the procedure on the following pages.

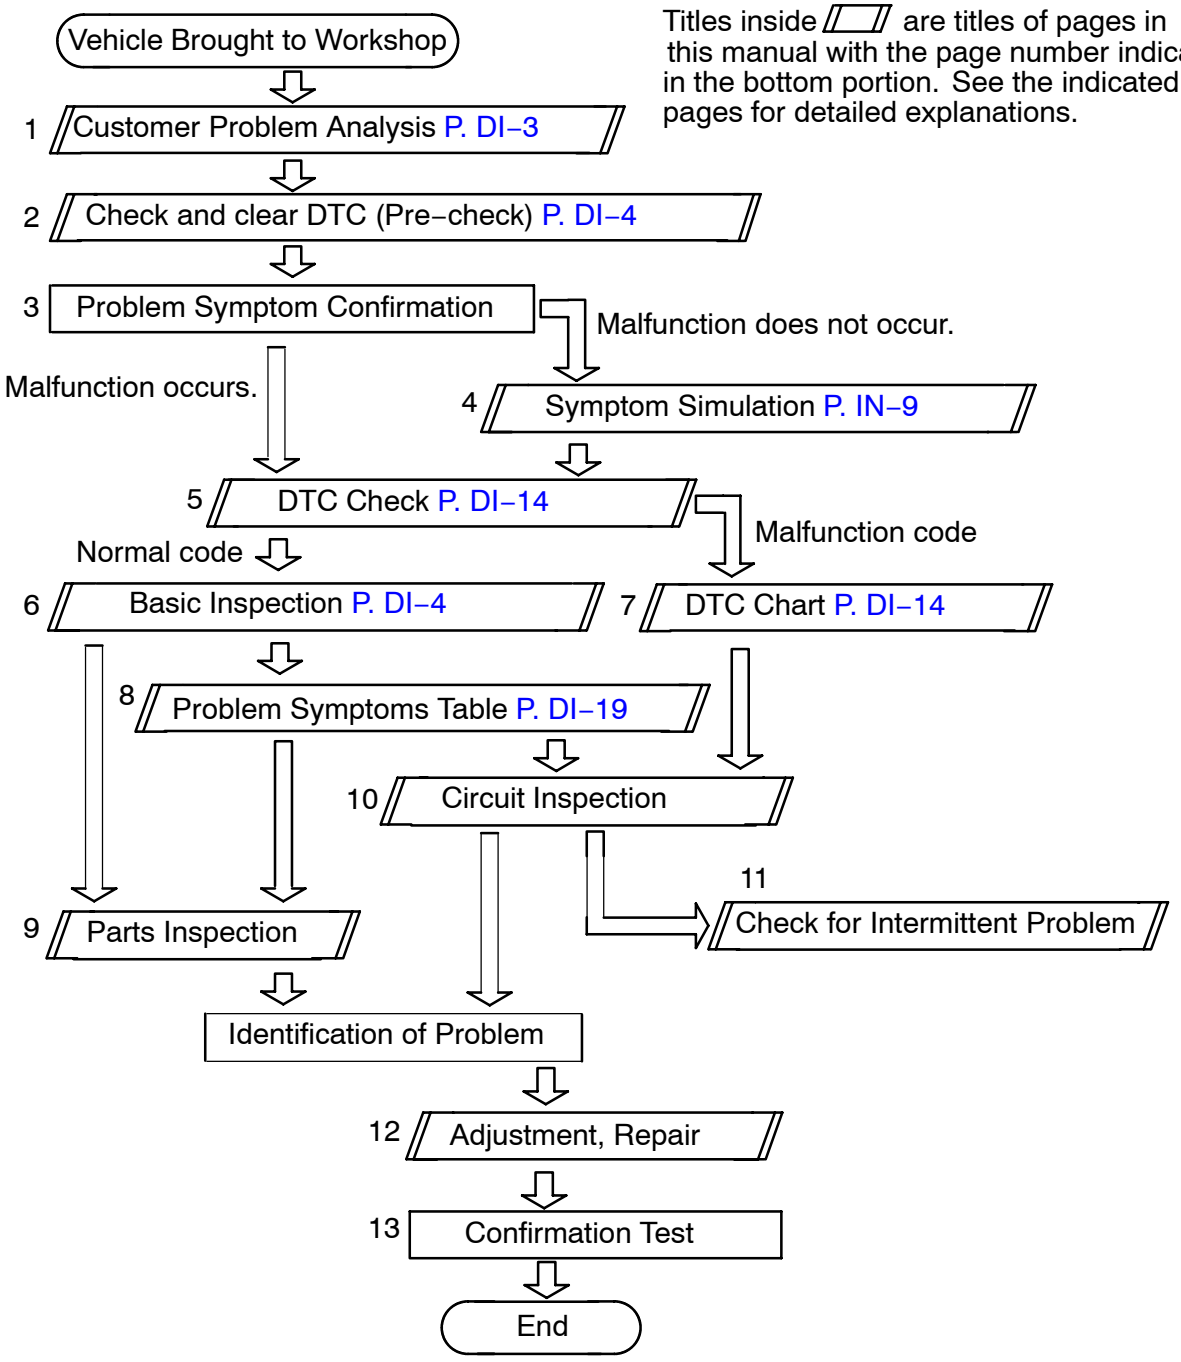

Titles inside ▱ are titles of pages in this manual with the page number indicated in the bottom portion. See the indicated pages for detailed explanations.