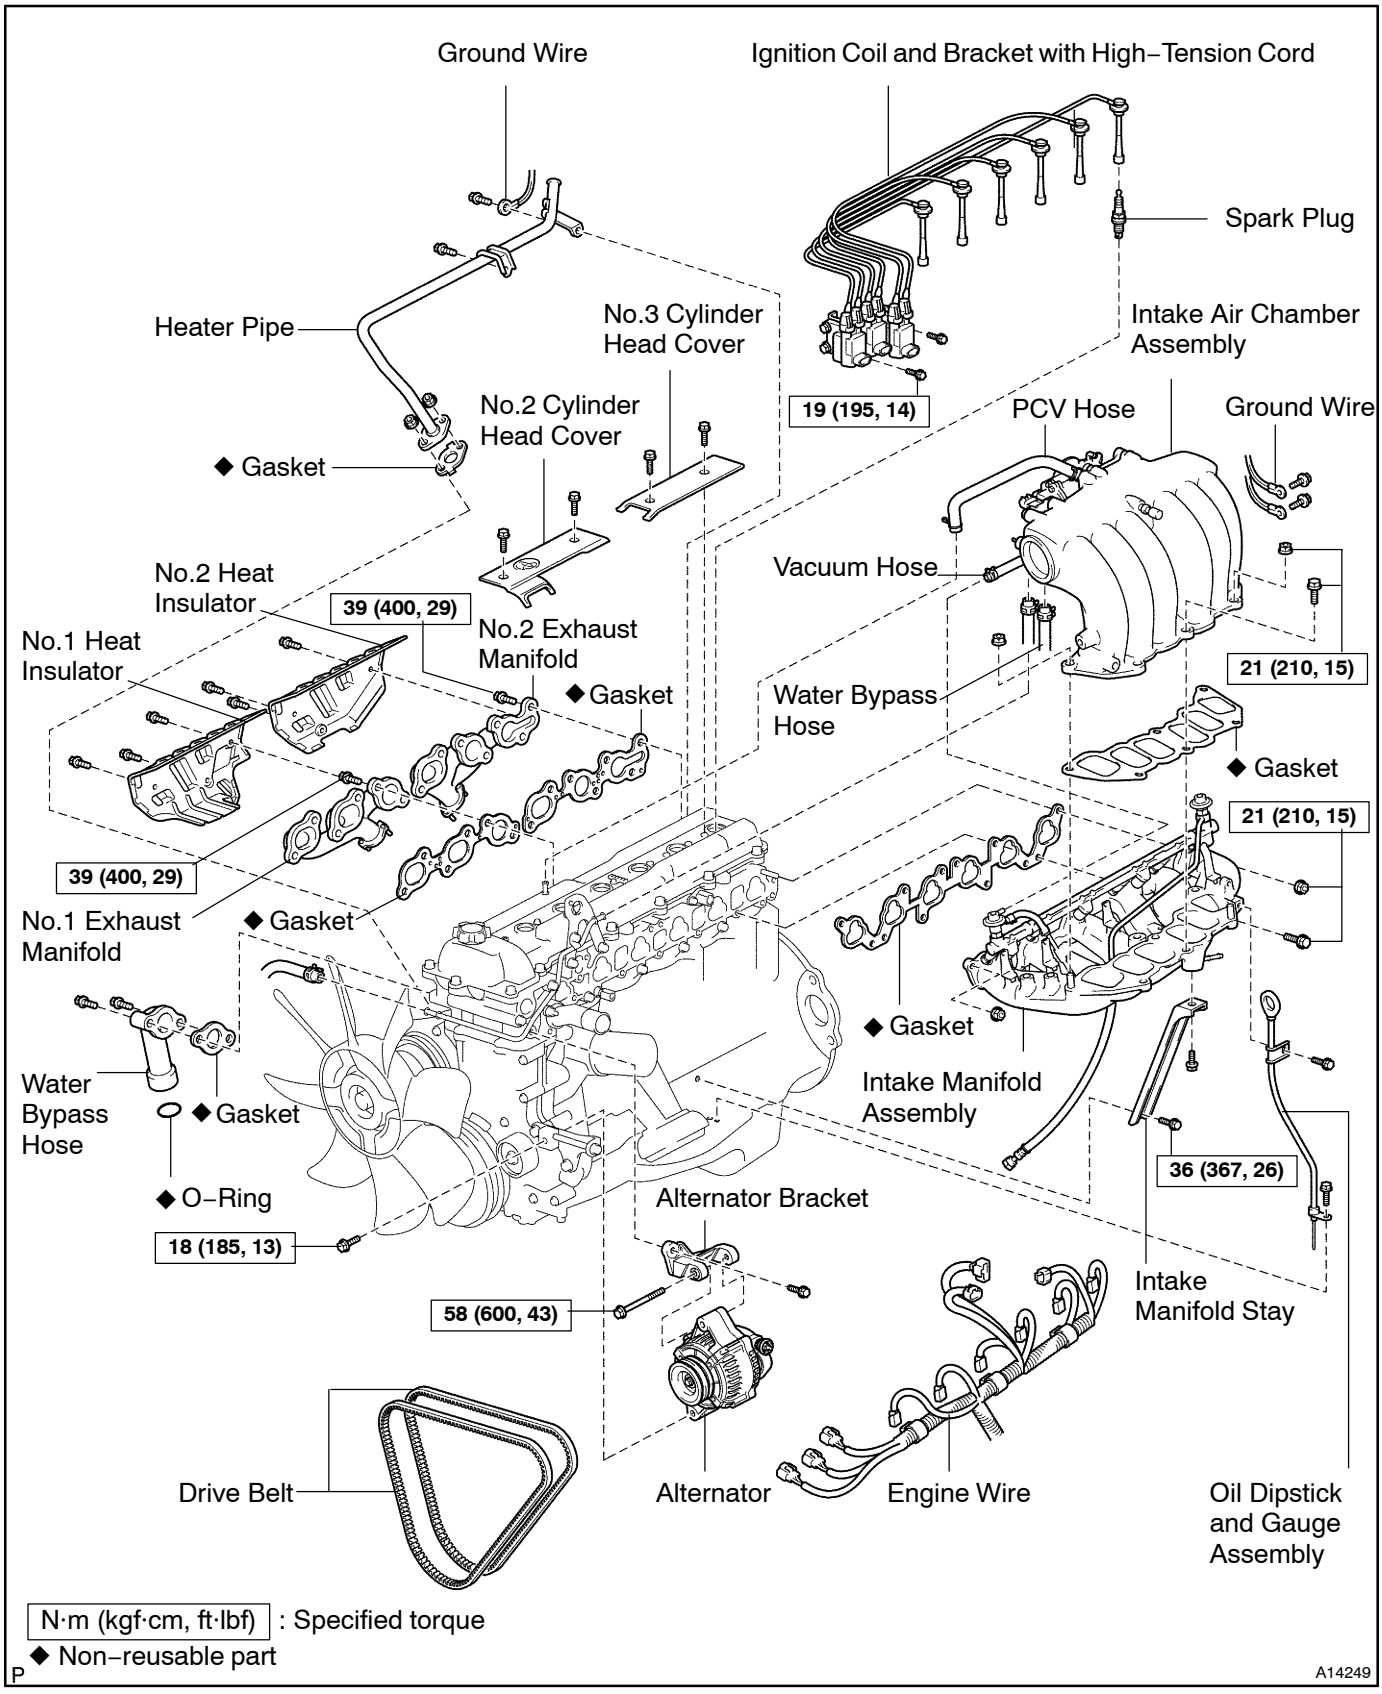
CYLINDER HEAD

COMPONENTS

EM17U–01

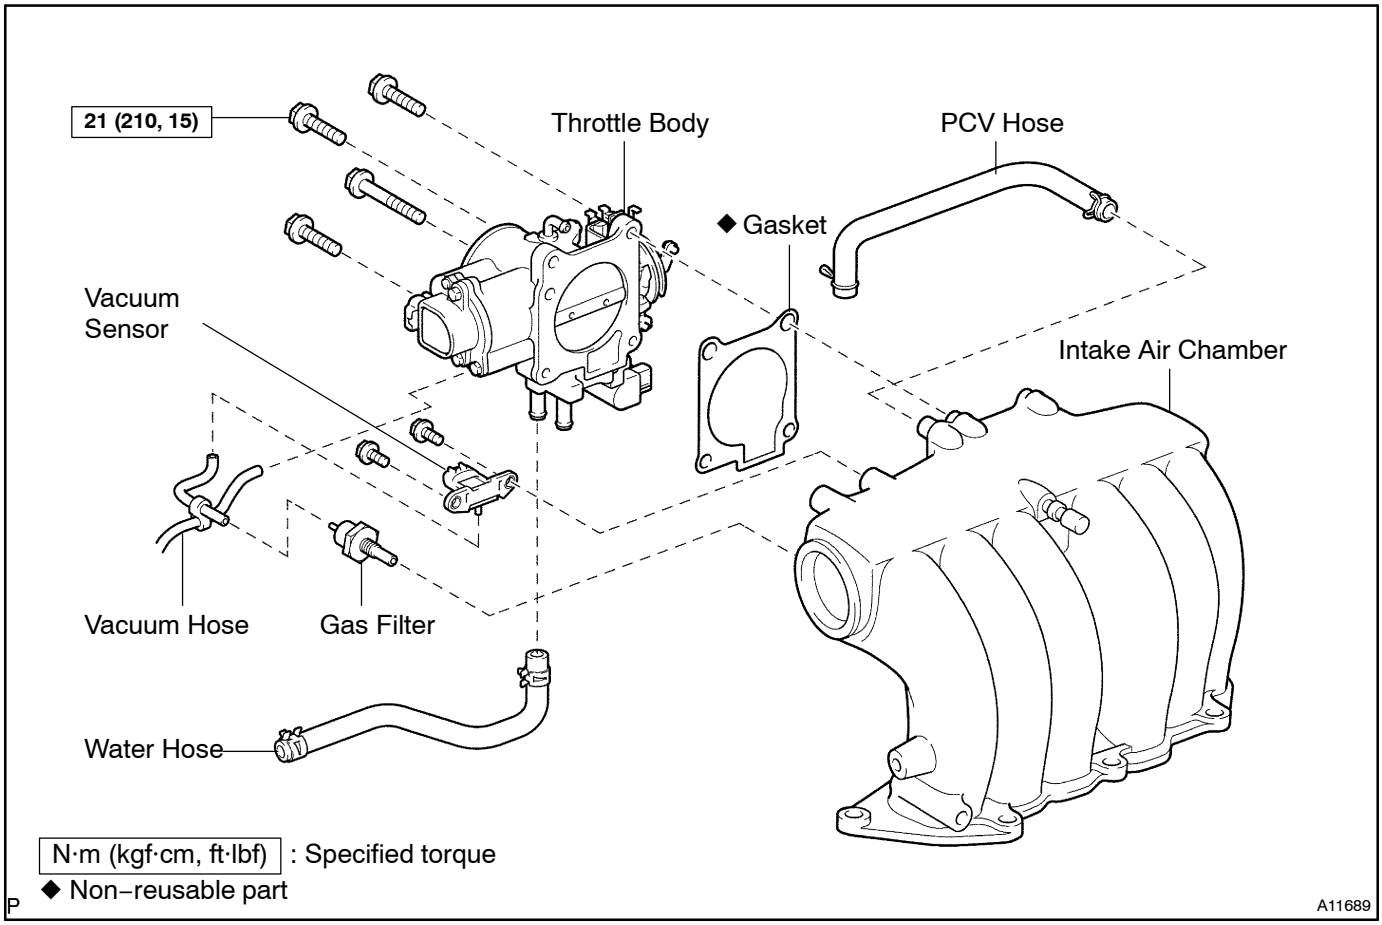


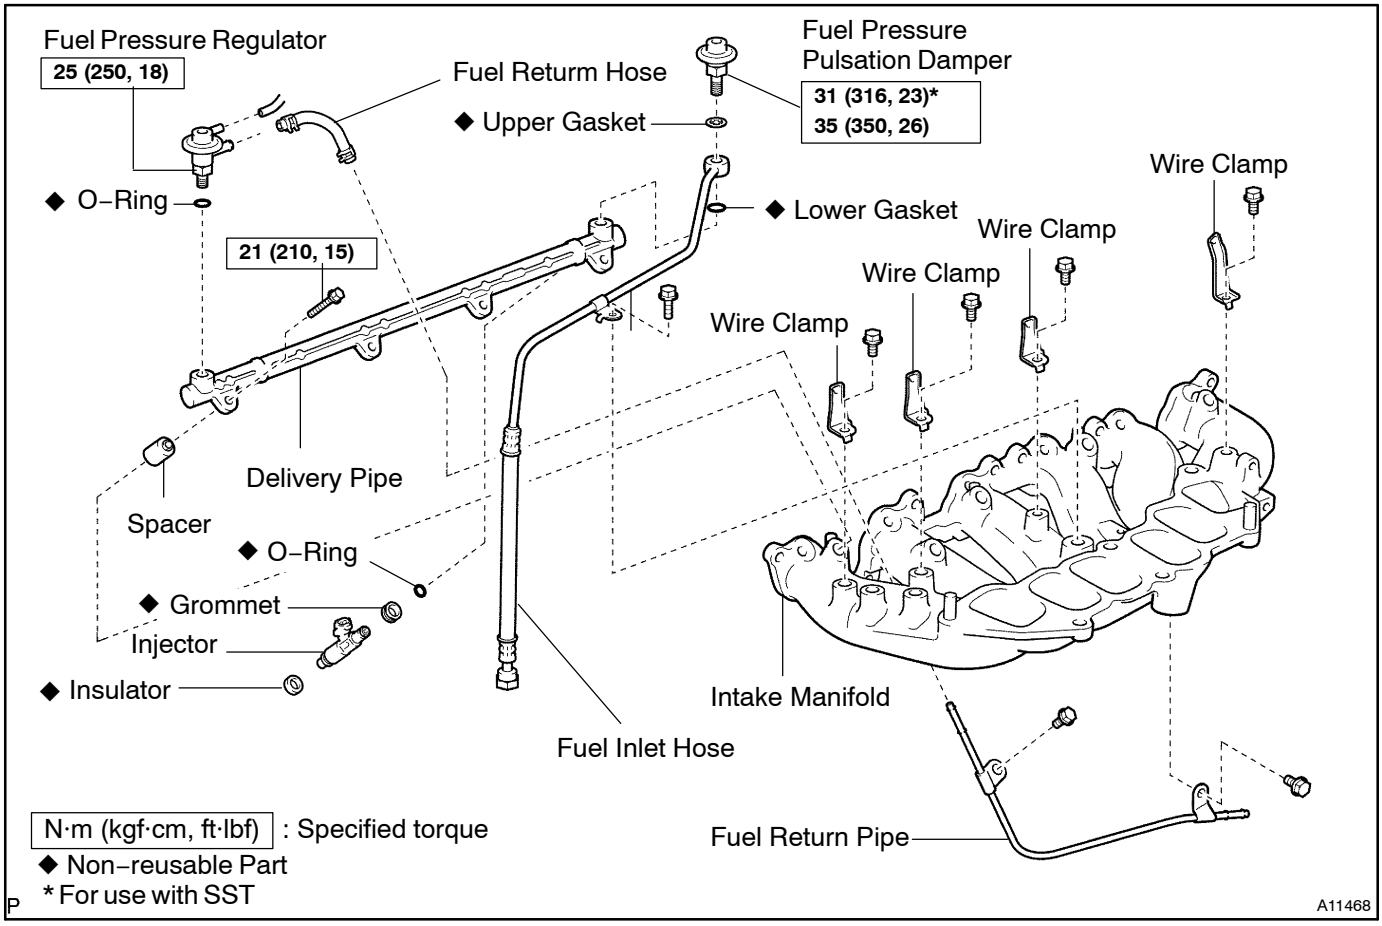
N·m (kgf·cm, ft·lbf) : Specified torque

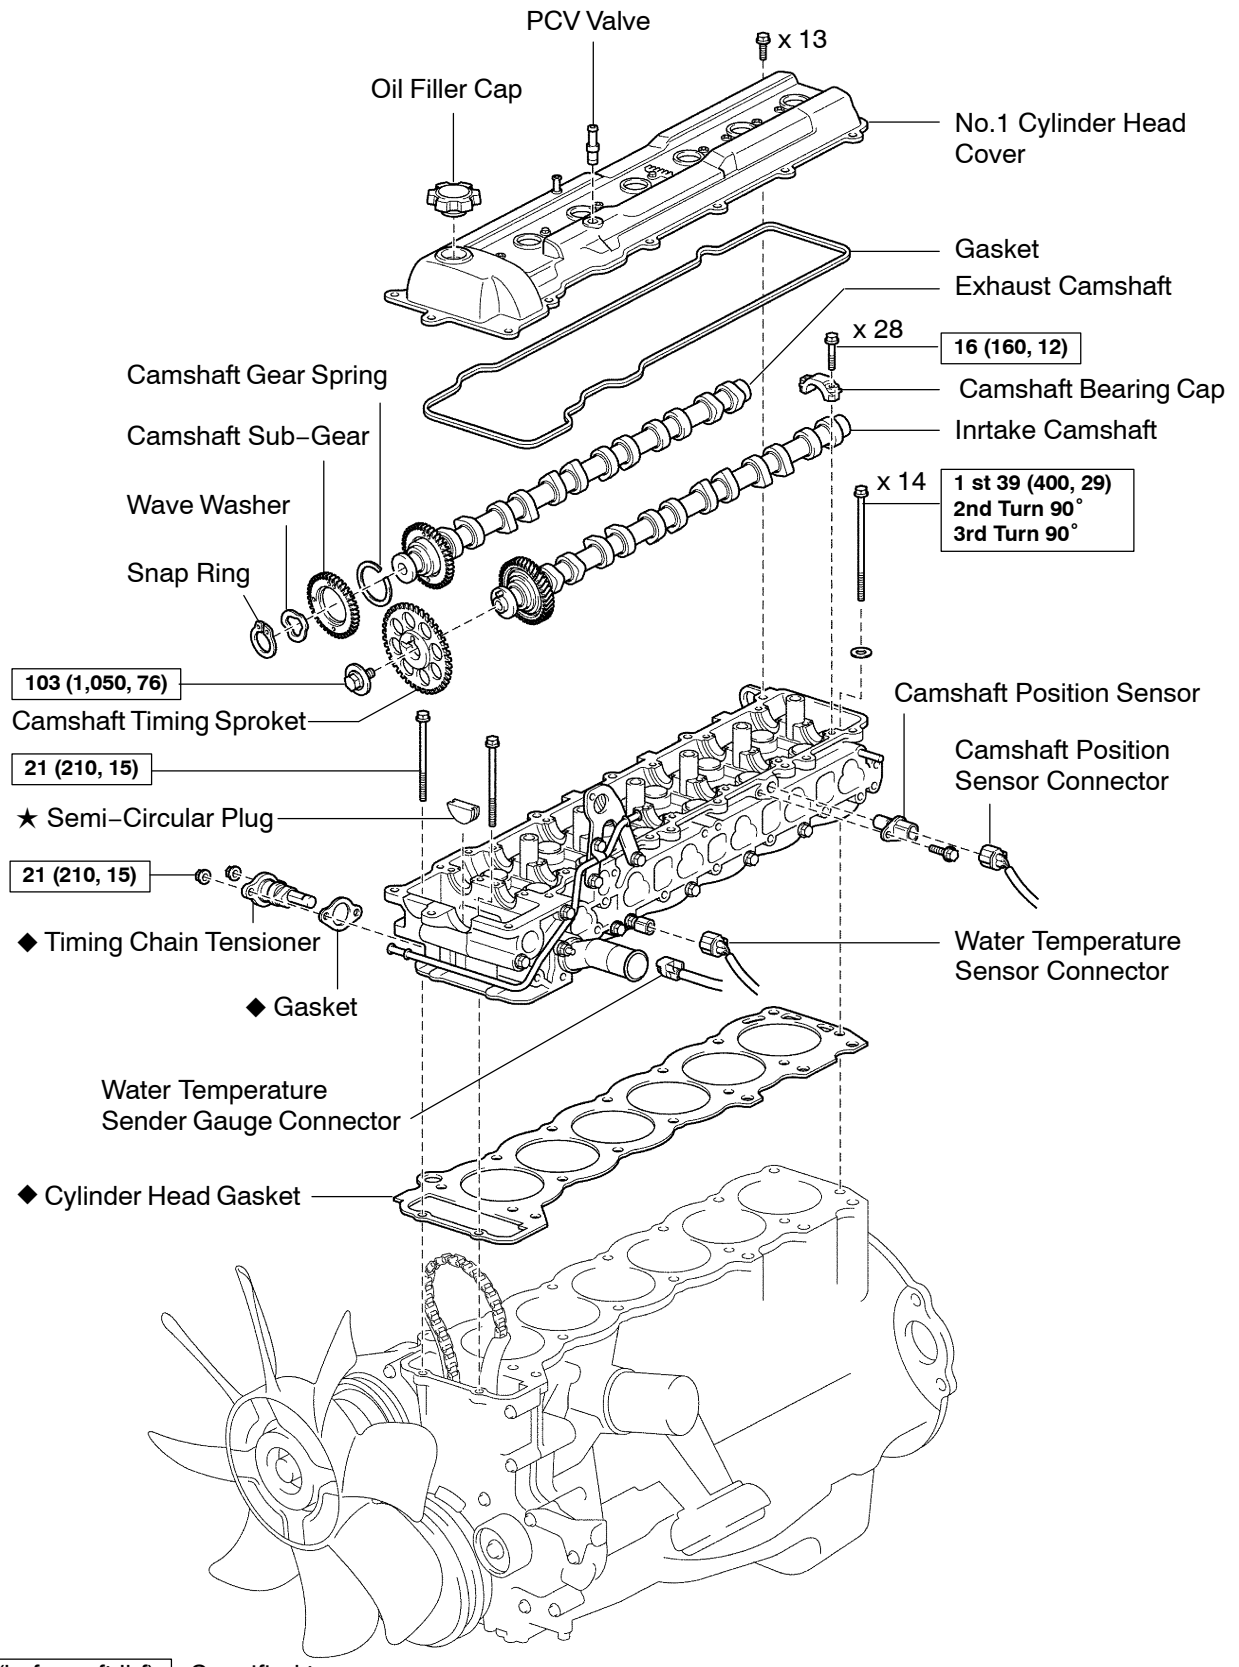
◆ Non–reusable part

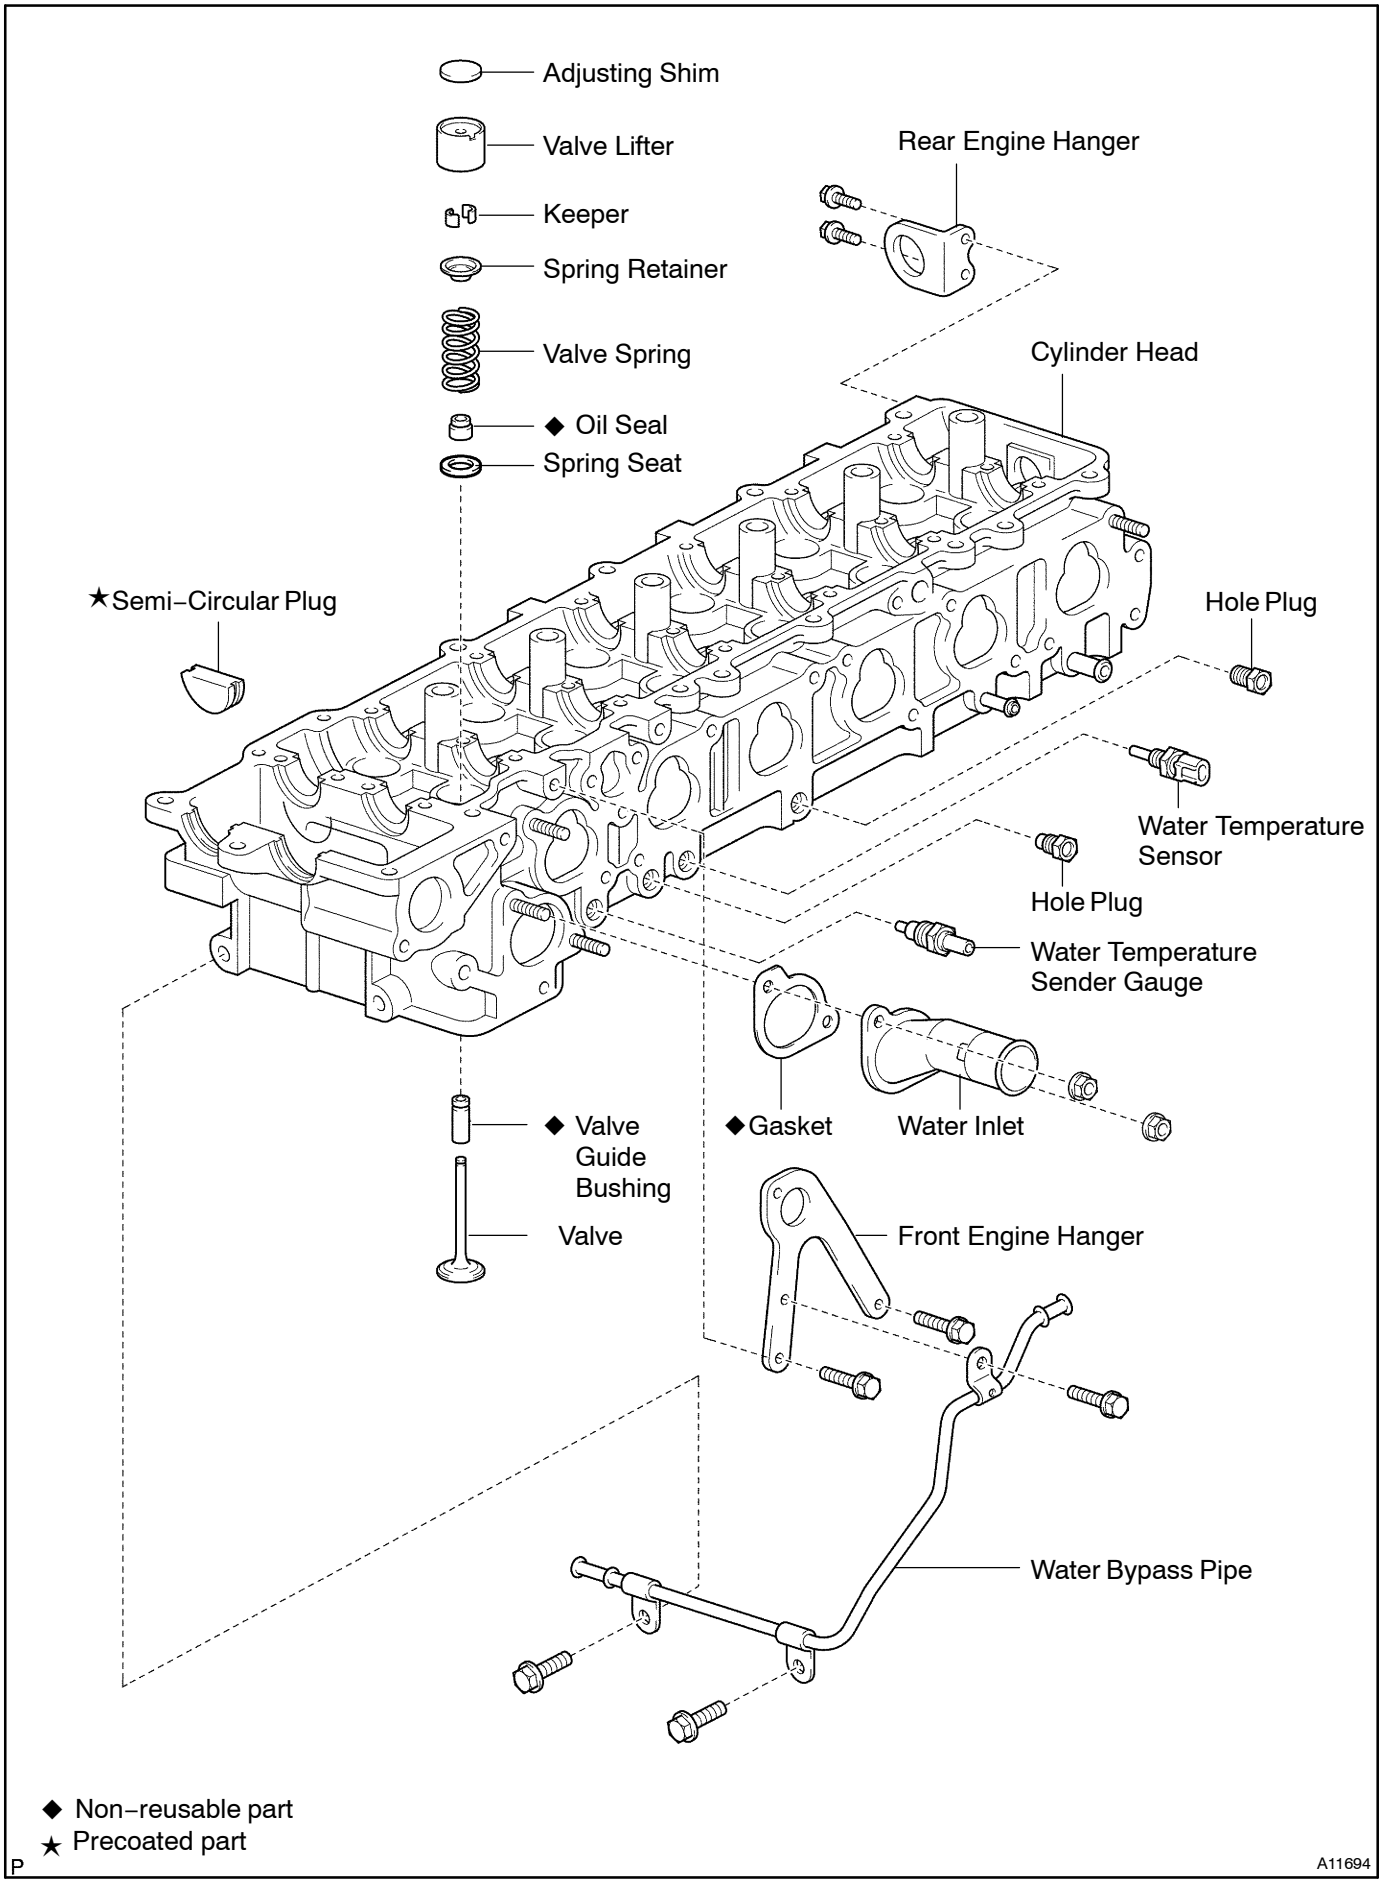
P

A14249


21 (210, 15)
Throttle Body
PCV Hose
◆ Gasket
Vacuum Sensor
Intake Air Chamber
Vacuum Hose
Gas Filter
Water Hose
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
A11689


Fuel Pressure Regulator
25 (250, 18)
Fuel Return Hose
Fuel Pressure Pulsation Damper
31 (316, 23)*
35 (350, 26)
◆ Upper Gasket
◆ O–Ring
◆ Lower Gasket
Wire Clamp
Wire Clamp
Wire Clamp
Wire Clamp
21 (210, 15)
Delivery Pipe
Spacer
◆ O–Ring
◆ Grommet
Injector
◆ Insulator
Intake Manifold
Fuel Inlet Hose
Fuel Return Pipe
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable Part
* For use with SST
A11468


PCV Valve
x 13
Oil Filler Cap
No.1 Cylinder Head Cover
Gasket
Exhaust Camshaft
x 28
16 (160, 12)
Camshaft Gear Spring
Camshaft Bearing Cap
Camshaft Sub–Gear
Inrtake Camshaft
Wave Washer
x 14
1 st 39 (400, 29)
2nd Turn 90°
3rd Turn 90°
Snap Ring
103 (1,050, 76)
Camshaft Position Sensor
Camshaft Timing Sproket
Camshaft Position Sensor Connector
21 (210, 15)
★ Semi–Circular Plug
21 (210, 15)
◆ Timing Chain Tensioner
Water Temperature Sensor Connector
◆ Gasket
Water Temperature Sender Gauge Connector
◆ Cylinder Head Gasket
P N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
★ Precoated part
A11133


Adjusting Shim
Valve Lifter
Keeper
Spring Retainer
Valve Spring
◆ Oil Seal
Spring Seat
★Semi–Circular Plug
Rear Engine Hanger
Cylinder Head
Hole Plug
Water Temperature Sensor
Hole Plug
Water Temperature Sender Gauge
◆ Valve Guide Bushing
Valve
◆Gasket
Water Inlet
Front Engine Hanger
Water Bypass Pipe
◆ Non–reusable part
★ Precoated part
P
A11694