
FI0QD-01

INSTALLATION


1. INSTALL FUEL PUMP FILTER TO FUEL PUMP

Install the pump filter with a new clip.

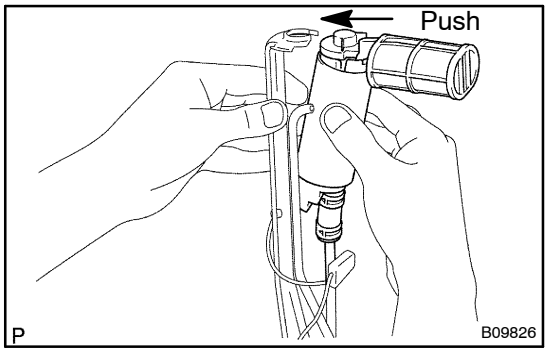

2. INSTALL FUEL PUMP TO FUEL PUMP BRACKET

(a) Connect the fuel hose to the outlet port of the fuel pump.
(b) Install the rubber cushion to the fuel pump.
(c) Install the fuel pump by pushing the lower side of the fuel pump.
(d) Connect the lead wire connector.

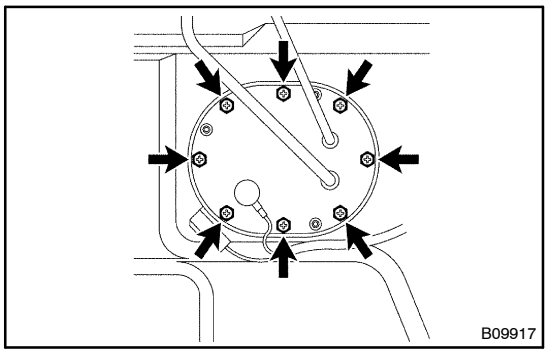

3. INSTALL FUEL PUMP AND BRACKET ASSEMBLY TO FUEL TANK

(a) Install a new gasket to the fuel pump bracket.
(b) Install the fuel pump and bracket assembly with the 8 bolts.

Torque: 3.0 N·m (30.6 kgf·cm, 27 in.·lbf)

4. INSTALL FUEL TANK TO VEHICLE

(See Pub. No. RM730E, page BO–43)

5. CHECK FOR FUEL LEAKS (See page FI–1)