
FI0QO–01

INSPECTION

1. REMOVE FUEL TANK CHANGEOVER SWITCH

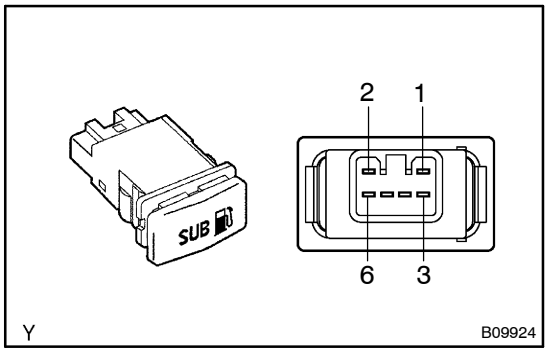

2. INSPECT CHANGEOVER SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	3 – 6	No continuity
ON	3 – 6	Continuity
Illumination circuit	1 – 2	Continuity

If continuity is not as specified, replace the switch.

3. REINSTALL FUEL TANK CHANGEOVER SWITCH