
IDLE SPEED CONTROL (ISC) VALVE

FI0QW–01

ON–VEHICLE INSPECTION

INSPECT ISC VALVE OPERATION

(a) Initial conditions:
- Engine at normal operating temperature
- Idle speed check correctly
- Transmission in neutral position

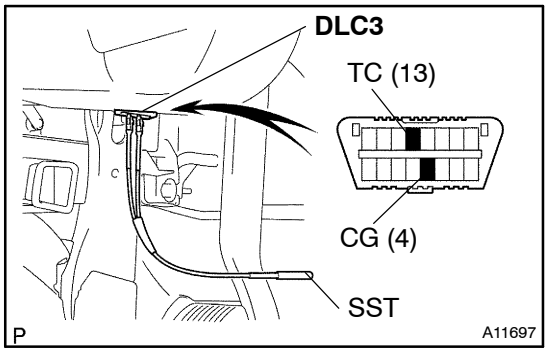

(b) Using SST, connect terminals 13 (TC) and 4 (CG) of the DLC3.
SST 09843–18040

(c) After engine speed are kept at 1,000 – 1,500 rpm for 5 seconds, check that they return to idle speed.

If the engine speed operation is not as specified, check the ISC valve, wiring and engine ECU.

(d) Remove the SST.
SST 09843–18040