
FI0QZ–01

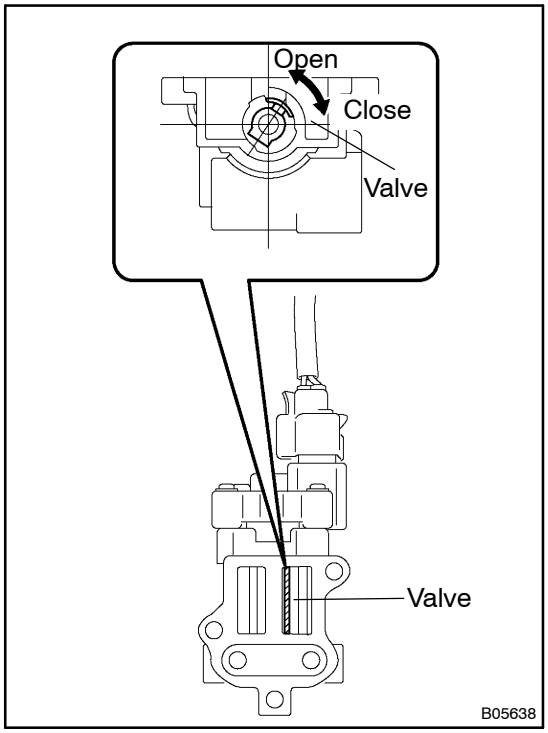


# INSPECTION

## INSPECT ISC VALVE OPERATION

(a) Check that the ISC valve is half opened.
(b) Connect the ISC valve connector to the ISC valve.
(c) Turn the ignition switch ON.
(d) Check that the ISC valve moves in 0.5 seconds by order of fully open, fully close and halfly open.

If operation is not as specified, replace the ISC valve.

(e) Turn the ignition switch OFF.
(f) Disconnect the ISC valve connector from the ISC valve.